

Maintenance Manual for Embroidery Machine

HCR3 SERIES
Version 1.4



HappyJapan

HappyJapan Inc.

For safe adjustment and repair

In order to conduct adjustment and repair safely and surely,
please be sure to abide by what is mentioned in this manual to prevent trouble.



1. When you conduct adjustment and repair of this embroidery machine or handle electric related parts, you are required to take technical lesson in advance.
2. When you conduct adjustment and repair using this manual, please be sure to use together with instruction with it in hand.

Please conduct in accordance with work process in this manual.

In case there are no specific instructions or explanations in work process.

please be sure to unplug cord from receptacle.

When you exchange parts, please be sure to use genuine parts designated by us.

Please never remodel the embroidery machine.

When you handle circuit boards:

In order to prevent troubles from static electricity, please remove earth from human body.

Please don't touch metal part of circuit board with bare hand as it will short-circuit
and threaten to break circuit boards.

When you removed circuits boards from the machine or you store or transport them,
please wrap them in static electricity preventive bag and avoid to give shock.

	Page
For safe adjustment and repair.....	2
Index	3
Special tool, Measuring equipment, Other	9
1 Placement of key mechanical parts	11
2 Setting up the machine	
2-1 Machine installation	13
2-2 Assemble the thread guide	13
2-3 Removal of stopper.....	14
2-4 Check of needle position	14
2-5 Check of needle height	15
2-6 Check of rotary hook timing	16
2-7 Oiling.....	16
2-8 Check of thread path.....	17
2-9 Threading	20
2-10 Trial sewing.....	21
3 Basic maintenance	
3-1 Fixing of needle	22
3-2 Selection of thread.....	23
3-3 Relation between needle and upper thread	24
4 Exchange and Setting of mechanical related component	
4-1 Fixed head	
4-1-1 Exchange of needle bar driver	25
4-1-2 Adjustment of take-up lever timing.....	27
4-1-3 Check of height of pressure foot	29
4-1-4 Adjustment of height of pressure foot	30
4-1-5 Exchange of pressure foot	31
4-1-6 Adjustment of thread catcher	33
4-1-7 Exchange of thread catcher guide	35
4-1-8 Exchange of pressure foot cam	36
4-1-9 Adjustment of fixing of jump solenoid	38
4-1-10 Disassembling and Cleaning of jump solenoid	39

4-2	Moving head	
4-2-1	Assemble and remove moving head (except for 1 st head)	40
4-2-2	Assemble and remove moving head (1 st Head)	44
4-2-3	Adjustment of needle position (back and forth)	49
4-2-4	Adjustment of needle position (left and right) Adjust for 1st head	50
4-2-5	Adjustment of needle position (left and right) Adjust for 2nd to last each head	52
4-2-6	Adjustment of needle height	53
4-2-7	Adjustment of needle bar lowest point	55
4-2-8	Adjustment of needle bar stopper	57
4-2-9	Exchange of needle bar, needle bar spring, cushion and pressure foot block	59
4-2-10	Fixing of needle bar boss check plate	61
4-2-11	Exchange of take-up lever	62
4-2-12	Adjustment of tension of thread adjusting spring	64
4-2-13	Adjustment of stroke of thread adjusting spring	65
4-2-14	Adjustment of thread holder	66
4-2-15	Adjustment of clip-type thread holder	67
4-2-16	Adjustment of clip drive unit	68
4-3	Needle bar change unit	
4-3-1	Check / Adjustment of needle bar change unit	69
4-4	Rotary hook	
4-4-1	Adjustment of rotary hook timing	72
4-4-2	Adjustment of retainer on rotary hook	74
4-4-3	Exchange of rotary hook shaft	75
4-5	Thread cut unit	
4-5-1	Check of thread cutting driver	78
4-5-2	Adjustment of thread cutting driver	80
4-5-3	Exchange of moving knife	82
4-5-4	Exchange of fixed knife	83
4-5-5	Check / Adjustment of position of moving knife	84
4-5-6	Adjustment of moving knife and fixed knife	86
4-5-7	Adjustment of bobbin thread holder	87
4-5-8	Adjustment of position of keeper	88

Index

	Page
4-6 Carriage unit	
4-6-1 Adjustment of X carriage drive belt tension (S.No. ~1096009).....	90
4-6-1a Adjustment of X carriage drive belt tension (S.No. 1096010~)	91a
4-6-2 Adjustment of X carriage timing belt tension.....	92
4-6-3 Adjustment of Y carriage drive belt tension.....	94
4-6-4 Adjustment of Y carriage timing belt tension	96
4-6-5 Adjustment of center carriage timing belt tension	98
4-7 Transmission unit	
4-7-1 Exchange of main shaft timing belt.....	99
4-7-2 Adjustment of upper shaft timing belt tension	102
4-7-3 Adjustment of timing detecting unit.....	103
5 User maintenance mode	
5-1 How to enter user maintenance mode.....	105
5-2 Machine movement	106

E1 Placement of key electronic parts	108
E2 Exchange and Setting of electric related component	
E2-1 Exchange and Setting of CONT-R2 Board (S.No. ~1095015).....	110
E2-1a Exchange and Setting of CONT-R2 Board (S.No. 1096001~)	113a
E2-2 Exchange Timing Circuit Board	114
E2-3 Connection of Detection Circuit Board	116
E2-4 Exchange TC7-8 Circuit Board	117
E2-5 Exchange needle stop sensor and potentiometer	118
E2-6 Exchange Thread trimming sensor	120
E2-7 Exchange X-Y Position Sensor	121
E2-8 Exchange of servo amplifier.....	122
E2-9 Servo amplifier setting	123
E2-10 Exchange of switching power supply and adjustment of output voltage--	126
E2-11 Exchange Cooling Fan	127
E3 Parts Replacement in control box and setting	
E3-1 Open and remove control box	128
E3-2-1 Remove LCD-CE-MX board (S.No. ~1095015)	129
E3-2-2 Remove LCD-T board (S.No. 1096001~)	130a
E3-2-3 10.4" Remove LCD-CE-MX board (S.No. ~1095015)	131
E3-2-4 10.4" Remove LCD-T board (S.No. 1096001~)	132a
E3-3 Setting for LCD-** board	133

	Page
E4 Program update procedure-----	134
E4-1 Preparation for program update -----	135
E4-2 Update the program-----	136
E4-2-1 Update the main program and the machine program	
(S.No. ~1095015) -----	136
E4-2-2 Update main program (S.No. ~1095015) -----	137
E4-2-3 Update machine program (S.No. ~1095015) -----	139
E4-2-4 Update program (S.No. 1096001~) -----	140a
E4-3 Initialization · Initializing of machine speed -----	141
E5 Maintenance mode	
E5-1 How to enter Maintenance mode -----	142
E5-2 Machine Test - Machine movement -----	143
E5-3 Memory All Clear Initialization of design memory -----	145
E5-4 Record- Operation data display -----	146
E5-4-1 Total number of stitch -----	146
E5-4-2 Record of Error occurrence -----	147
E5-4-3 Number of occurrence in each error display -----	148
E5-4-4 Thread break history -----	149
E5-5 Machine setting -----	150
E5-6 Position - Registration of coordinates for positioning sensor -----	152
E5-7 Maintenance Register—Registration of machine maintenance date -----	155
E6 Installment and setting of option unit	
E6-1 Installation of laser position marker -----	156
E6-2 Installation of Safety sensor (front)-----	158
E6-3 Installation of Safety sensor (rear)-----	161
E6-4 Installation of bobbin thread winder -----	164
E6-5 Installation of Upper Thread Holder -----	166
E6-6 Adjustment of Cap drive frame -----	168

Index

	Page
E7 Electric system diagram	
E7-1 Electrical connection diagram (S.No. ~1095015) -----	169
E7-2 Electrical connection diagram (S.No. 1096001~) -----	173a
E7-3 Explanation of function circuit board-----	174
E8 How to respond for some question (As example step) -----	181
E9 Trouble shooting	
E9-1 Electricity doesn't turn on -----	182
E9-2 Thread break -----	183
E9-3 Erroneous thread cut -----	188
E9-4 Off-registration of pattern -----	190
E9-5 Upper thread comes off from needle hole -----	193
E9-6 Upper thread remains -----	195
E9-7 Looping-----	196
E9-8 Malfunction of thread break detection -----	197
E9-9 Suspension of upper shaft -----	198
E9-10 Malfunction of needle bar change -----	199
E9-11 Defect on thread catcher -----	200
E9-12 Others (Mechanical)-----	201
E9-13 Others (Electronically)-----	202
E10 Error	
E10-1 Startup error and measure -----	203
E10-2 Error and measure -----	204
E11 Tables for timing / adjustment value -----	209

Special tool, Measuring equipment, Other


HSA90030

Keeper positioning gauge (Page 88)



HSA90131

1.2mm thickness gauge (Page 29, 30)

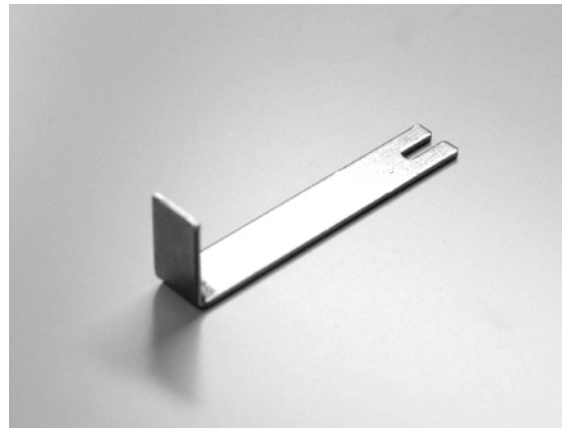

HSA90080

Retainer positioning gauge [0.8mm] (Page 74)



HSA90230

Tensile gauge (Page 87)




HSA90090

Positioning pin [ϕ 4] (Page 27)



HSA90240


Dial-gauge set (Page 55)

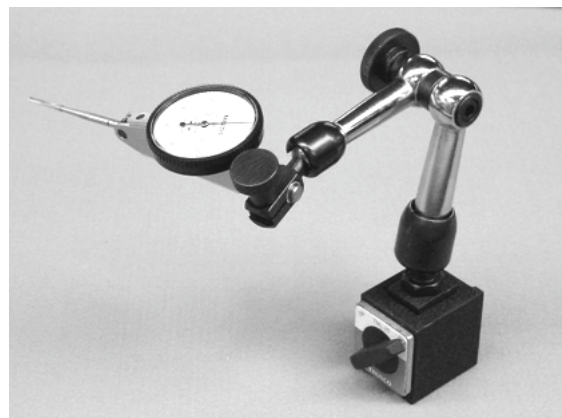

Special tool, Measuring equipment, Other


HSA90270

Vernier calliper gauge [200mm] (Page 37)

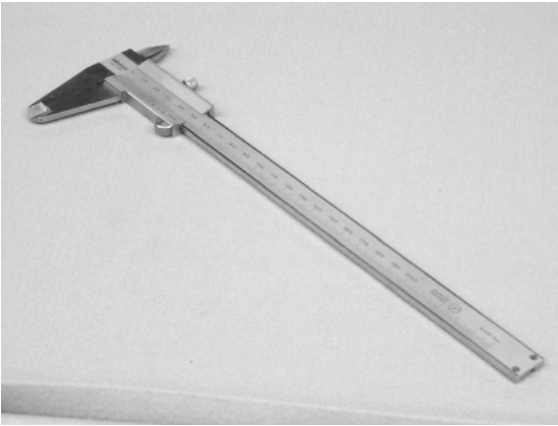


HSA90311

Shell alvania EP Grease 100g (Page 36, 76)

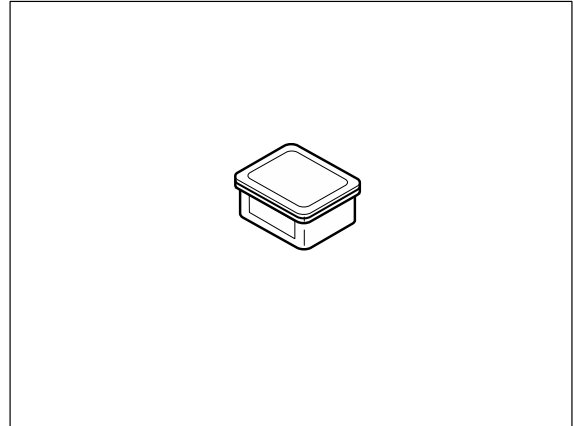


HSA90210

0.2mm thickness gauge (Page 63)

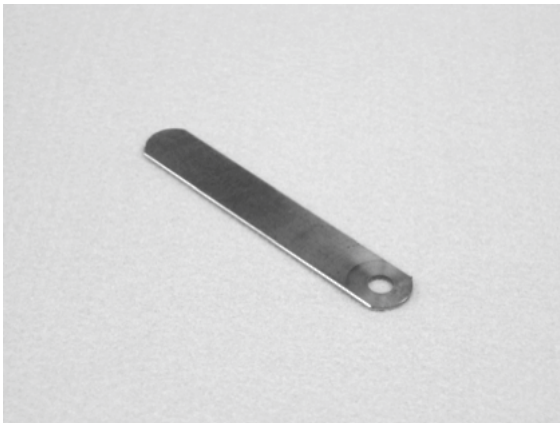

HSA90340

Shell Grease7 MIL-G-23827B 50g (Page 39)

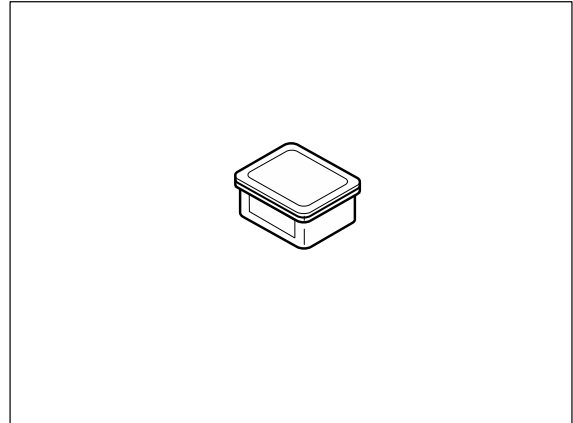


HSA90290

Tension gauge 1500cN(1000g) (Page 91a, 92, 94)





M0404342



Needle height gauge (Page 15, 53)

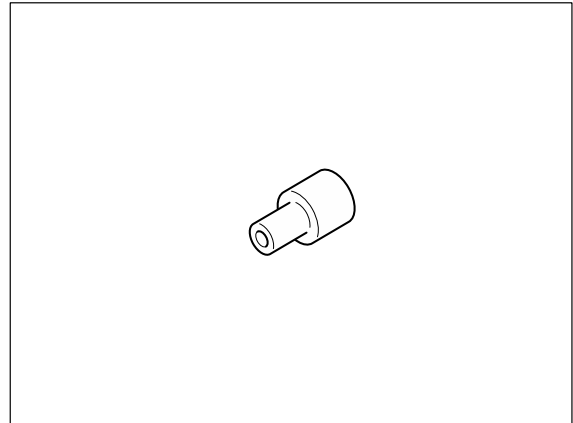

1 Placement of key mechanical parts

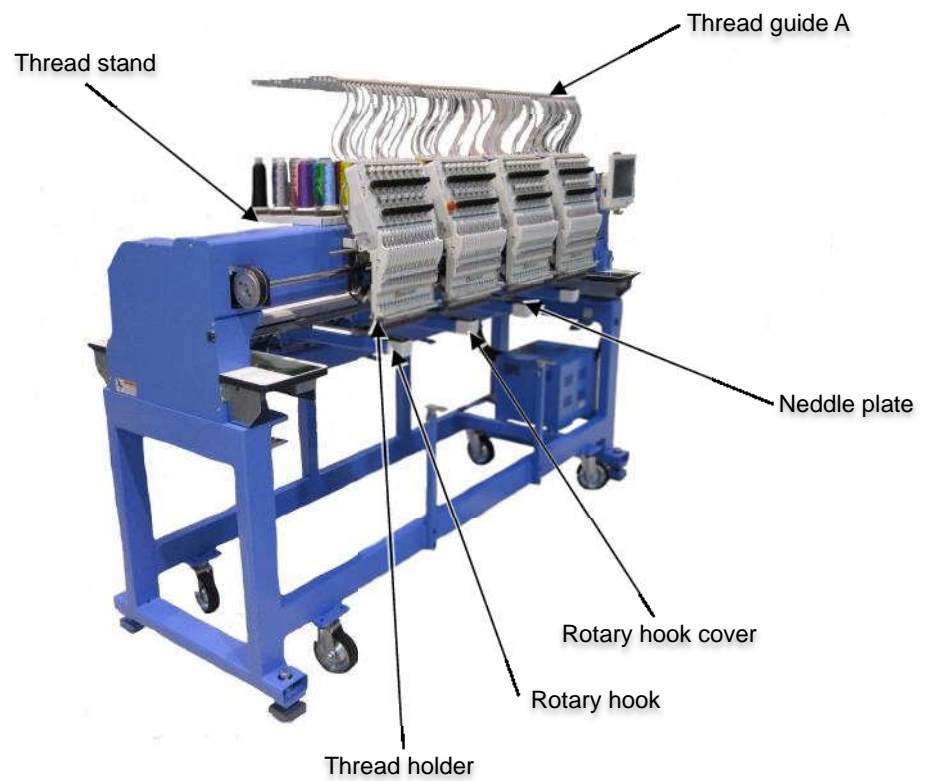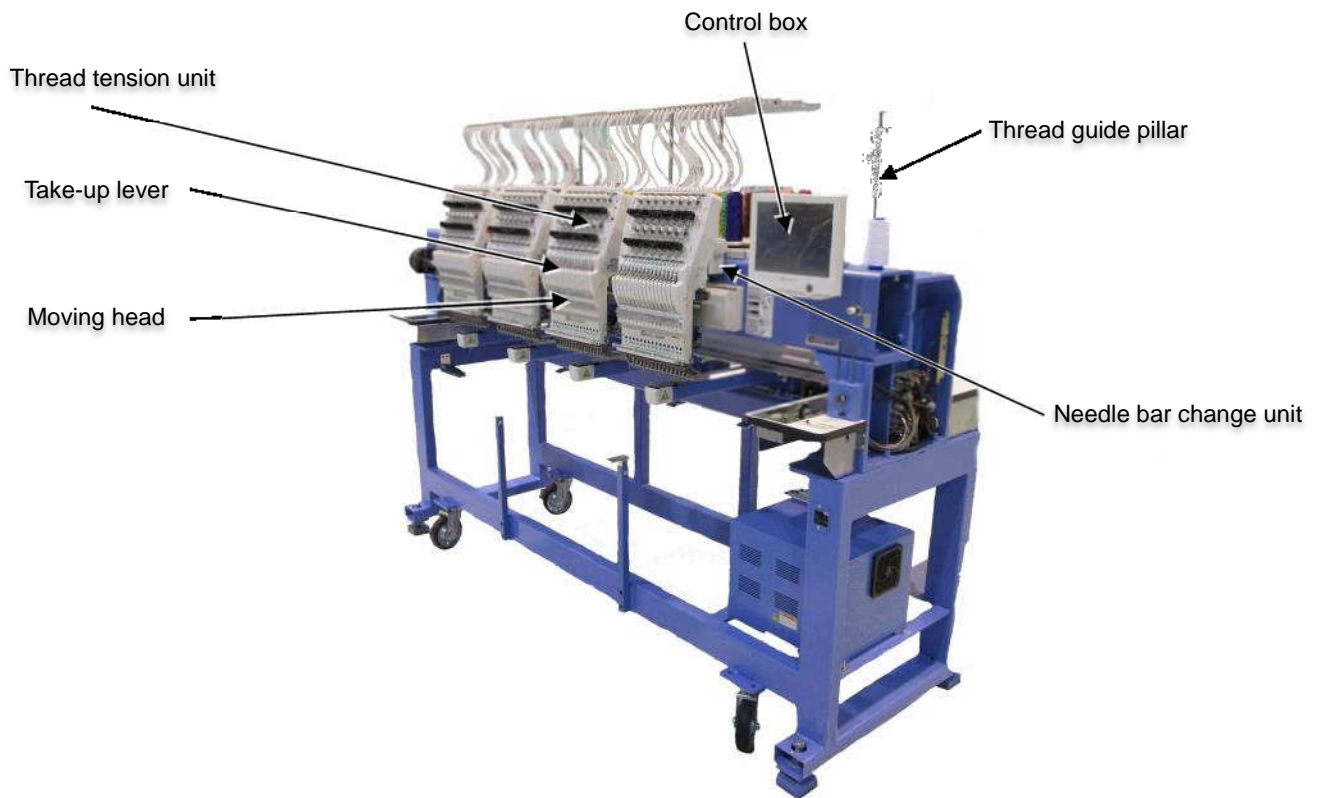


1 Placement of key mechanical parts

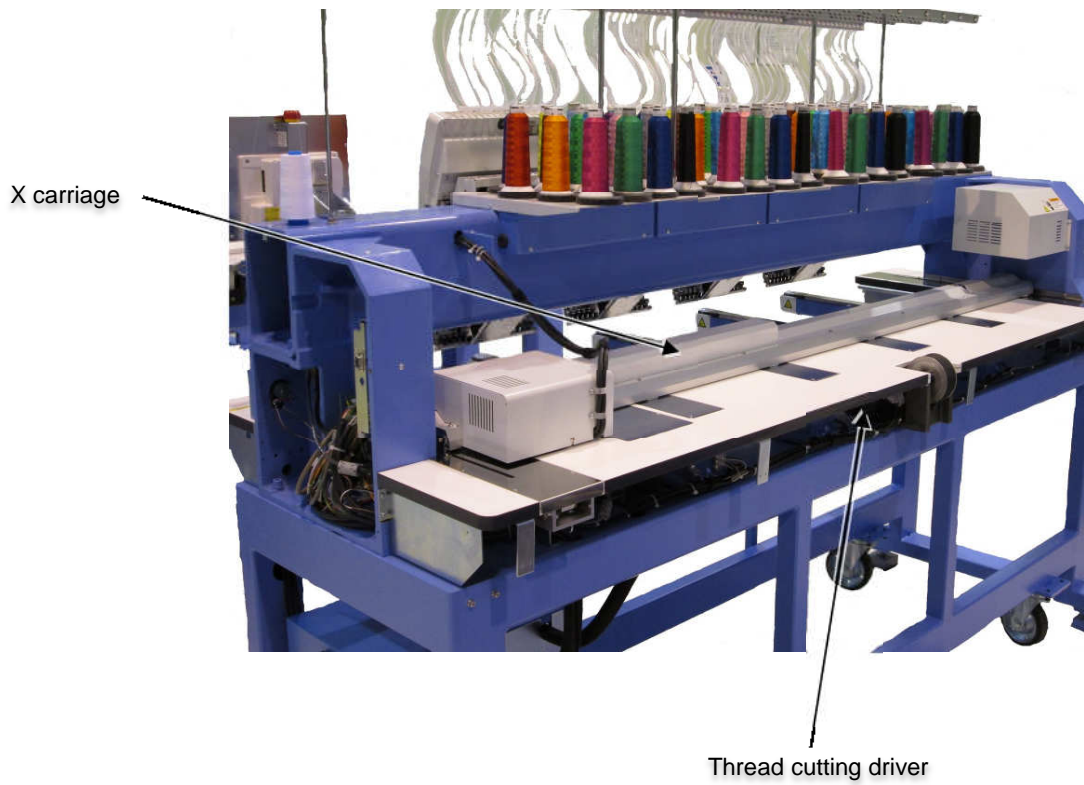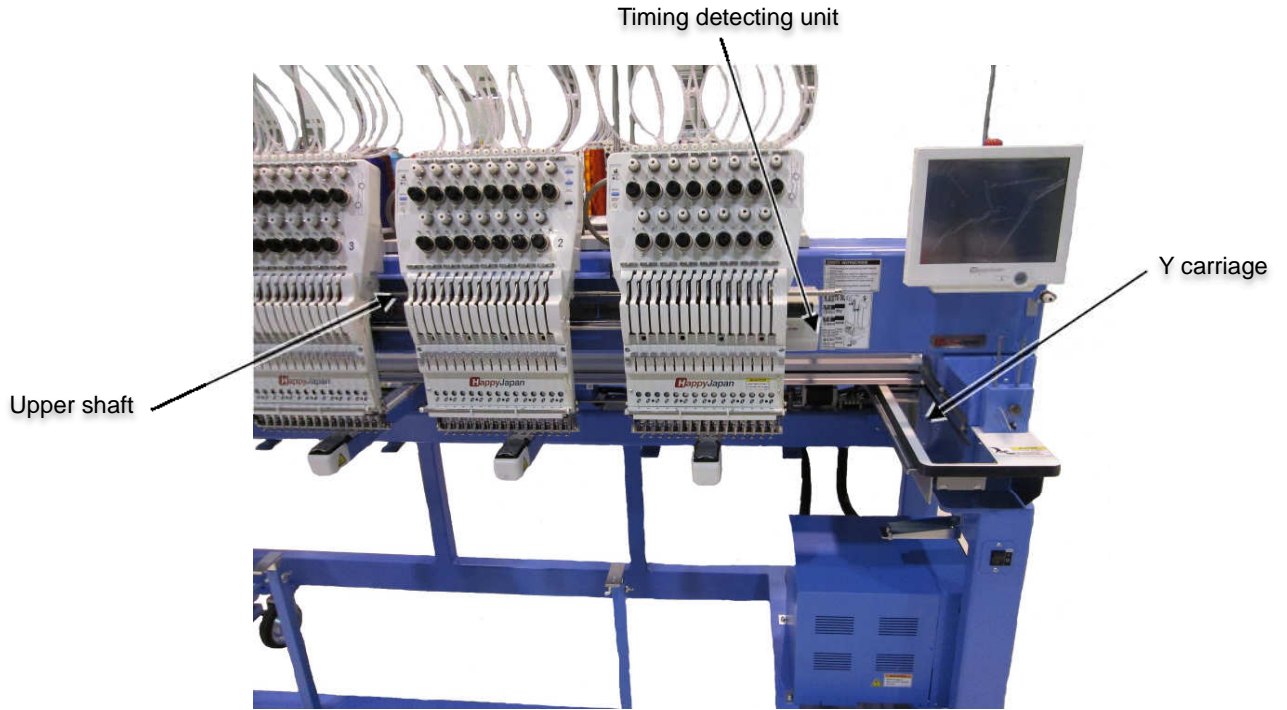

2-1, 2-2 Setting up the machine

2-1 Machine installation

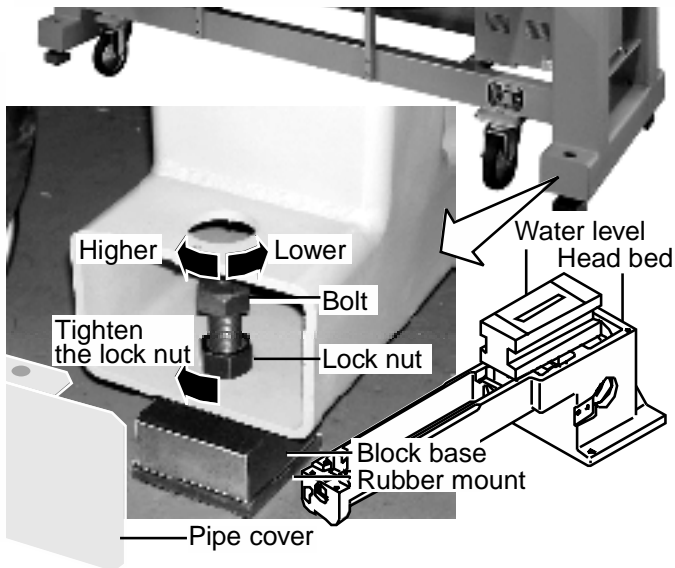

(1) place block base and rubber mount under bolts and adjust bolts so that the machine becomes level.

Block bases and rubber mounts are included in accessories.


At this moment, get caster slightly risen from the floor.

As shown in Fig., levelers should be placed on both sides of head bed with upper cover removed.

(2) Fix the lock nut.

(3) Fix the pipe cover.

2-2 Assemble the thread guide

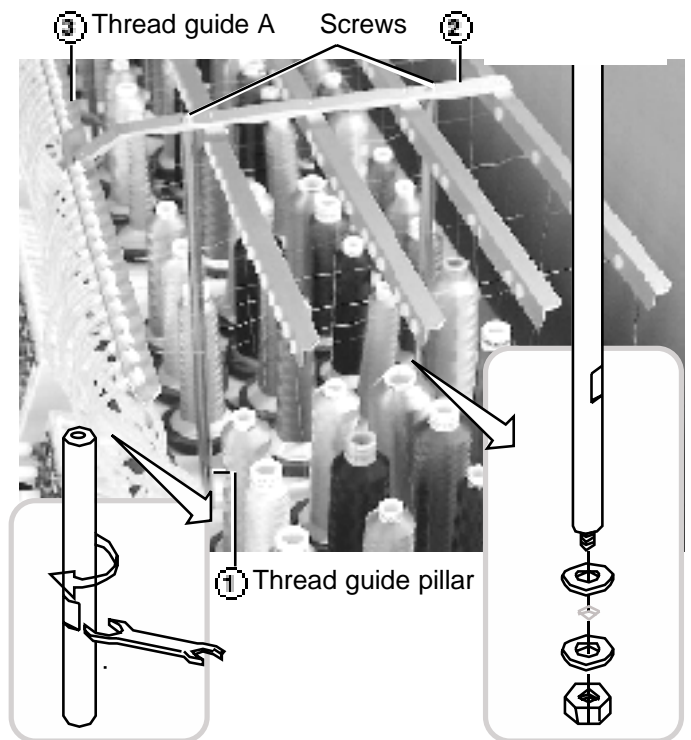

(1) Turn the thread guide pillar (front [long], rear [short]) clockwise with a spanner until tight.

Fix rear thread guide pillar with a washer and a nut (M8).

<Spanner> 10mm, 13mm

(2) Install the thread guide ass'y with supplied screws (M4x8).

(3) Fix thread guide A (with spiral tube) on thread guide ass'y with screws (M3x8) from lower side.

2-3, 2-4 Setting up the machine


2-3 Removal of stopper

- (1) Loosen the screw and remove the red shipping collars that are equipped on the both side of the guide bar.



- (2) Remove head stopper.

< Note > Number of head stopper is depending on model.

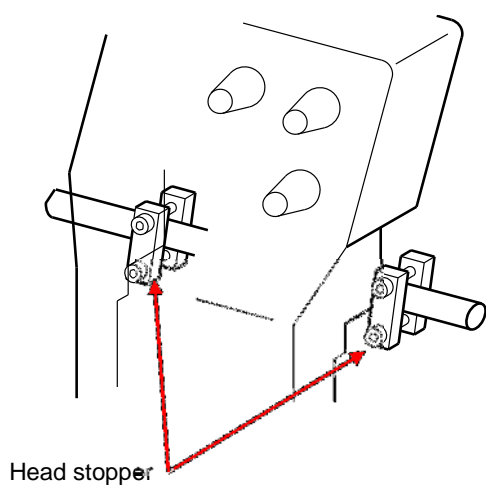

2-4 Check of needle position

- (1). Turn power switch ON, and enter user maintenance mode.


Refer to [5 User maintenance mode]

- (2) Remove bobbin case.

- (3) With help of user maintenance mode, please move needle bar down and confirm needle position is center of needle hole on needle plate.

< Note > Please move needle bar slowly

< Note > Please check position of 8th needle, then check 1st and 15th needle.

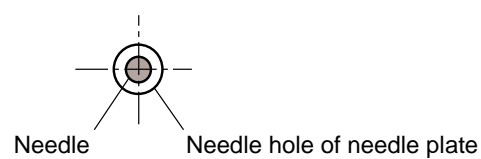

2-5 Setting up the machine

2-5 Check of needle height.

(1) Move moving head to the position which 8th needle is active.

Remove bobbin case.


(2) Bring needle bar down.

Refer to [5 User maintenance mode]



(3) Turn upper shaft anti-clockwise and set dial disc to [L + 10 degrees].

Turn brake switch ON.

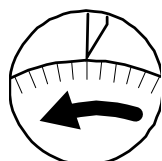

(4) Put needle height gauge in rotary hook.



(5) Check if the needle tip touches to the gauge slightly.



(6) Take "Needle height gauge" out from hook.

2-6, 2-7 Setting up the machine

2-6 Check of rotary hook timing

(1) Remove needle plate, Move moving head to the position which 8th needle.


Turn upper shaft and set to lowest needle position [L]

Refer to [5 User maintenance mode]




(2) Turn upper shaft anti-clockwise and set dial disc to [25 degrees].


Turn brake switch ON.

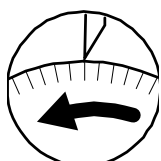

(3) Check the position of needle and tip of hook as below.

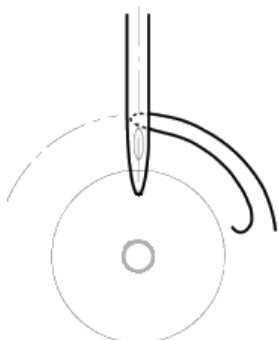

(4) Check the clearance between needle and rotary hook should be [0.1 ~ 0.2mm].

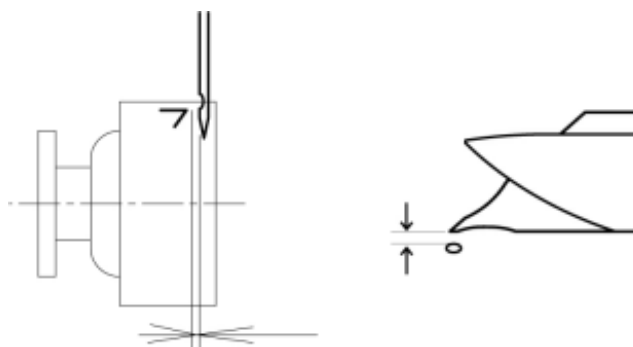


(5) Fix the needle plate.

2-7. Oiling

Lubricate the specified oil locations.

Oil : #10 Sewing machine oil

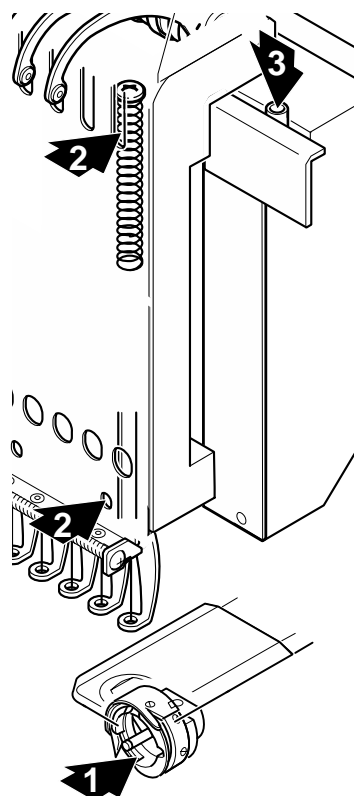

- 1) Rotary hook Between the outer and inner rotary hook
- 2) Needle bar
- 3) Head shaft

2-8 Setting up the machine


2-8 Check of thread path

To keep stable and high quality stitches, please keep places where thread contacts in the best condition.

<Note> Please confirm that there is no burr and crack at the position which thread is passing.


(1) Thread tension, Thread guide, Rectifier

- a) Revolution must be smooth
- b) No sticking of lint or dust

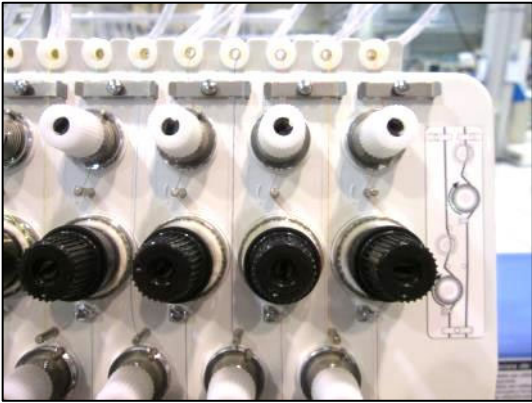

(2) Thread Adjusting Spring

- a) No burr and crack
- b) Spring move smoothly

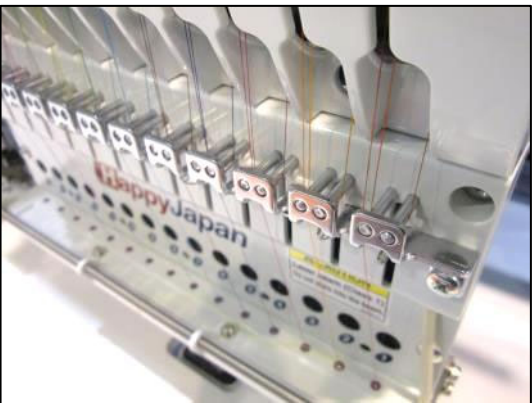

(3) Ceramic and rim of take-up lever

- a) No burr and crack



(4) Thread path in lower side and needle holder

- a) No burr and crack



2-8 Setting up the machine

(5) Needle

- a) Needle tip shouldn't be warped or bent.

When you slide needle tip on surface of nail and if the nail gets scratched.


needle tip is warped. Please exchange it with new one.



Please place needle on flat surface and check clearance (A) from side.



If clearance is not equal, needle is bent.

Please replace it with new one.

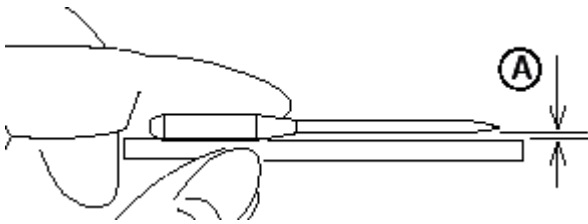

(6) Needle plate

- a) No burr and crack in needle hole and around it.

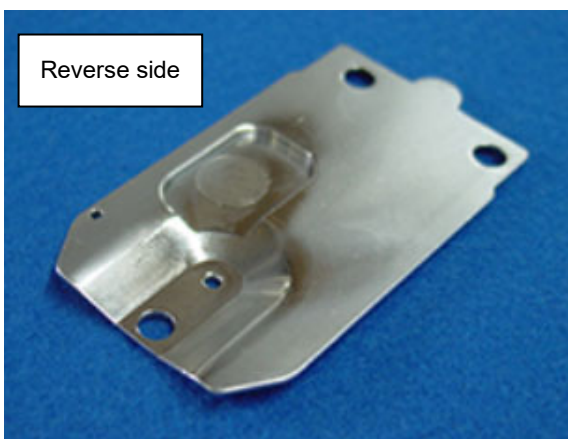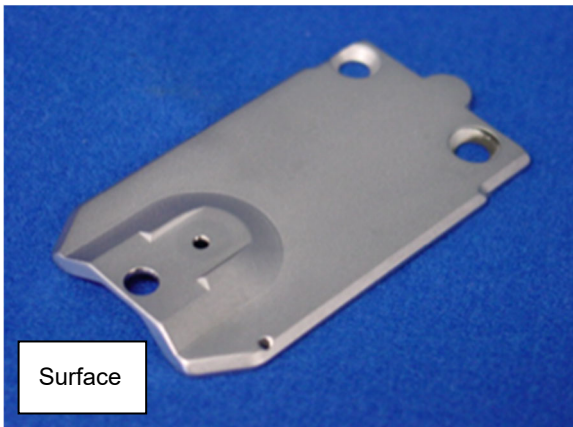


(7) Pressure foot

- a) No burr and crack inside hole
b) Not bent




(8) Rotary hook

- a) No burr and crack.
b) Hook point not warped.
c) Backlash between bobbin case holder and outer hook should be less.

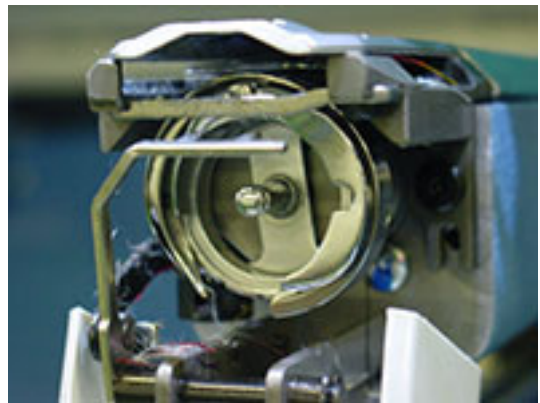

(9) Keeper

- a) No burr and crack in needle hole and around it.

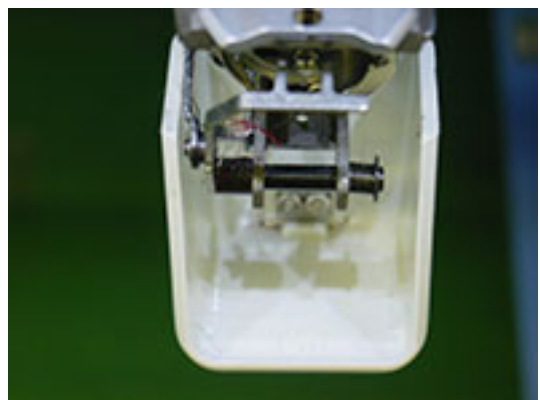


2-8 Setting up the machine

(10) Rotary hook retainer

- a) There is No burr and crack at the position which thread pass through.


Rotary hook retainer

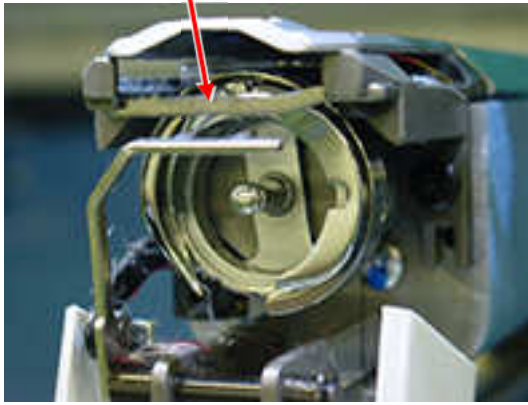

2-9 Setting up the machine


2-9 Threading

- Upper thread

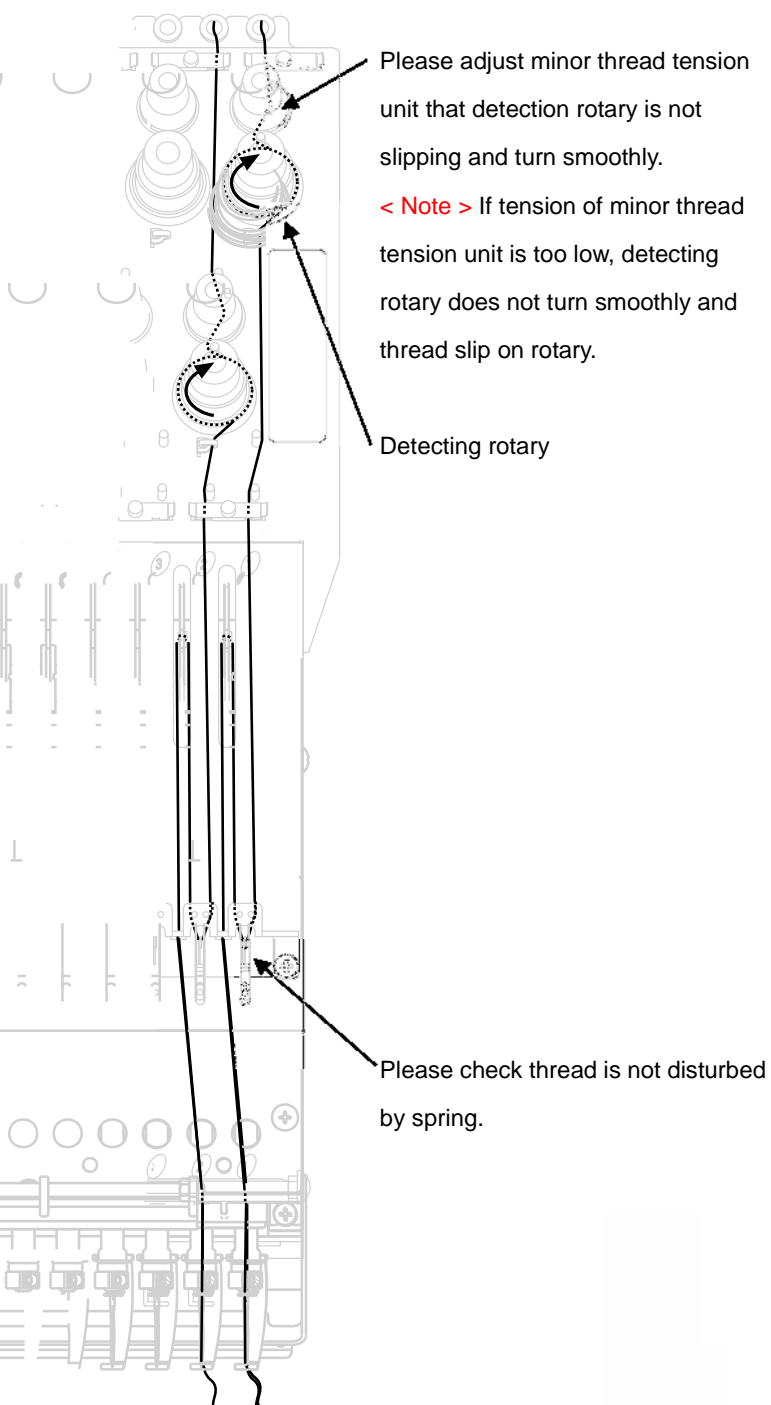

Upper thread tension should be adjusted depending on type of thread, needle and fabric etc.

< Standard > 100 ~ 150Cn (gf)

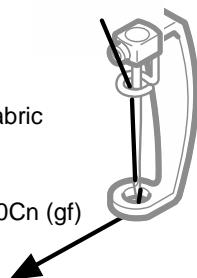


- Bobbin thread


Bobbin thread tension is depending on adjustment of upper thread.

Please note that bobbin will turn to arrow-marked direction when you pull bobbin thread.

<Standard> 25 ~ 35cN(gf)

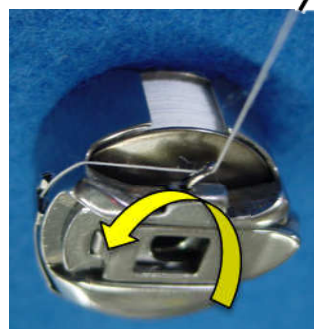

< Note > Please check thread is not disturbed by finger or latch.

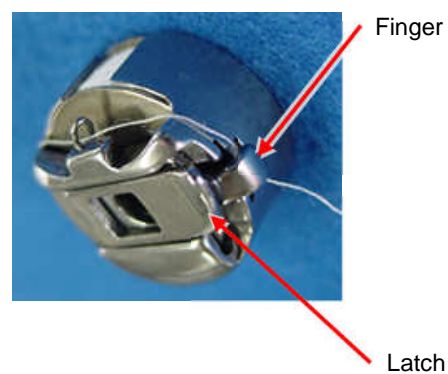

2 Setting up the machine

2-10 Trial sewing

(1) Turn thread break detecting switch ON.



(2) Please confirm that thread trimming, thread catcher, jumping is functioning.


< Important > For a month, please use machine with 70% of maximum speed.

3-1 Fixing of needle

1. In order of (1) - (4), please remove and fix needle.

- (1) Loosen screw holding needle.
- (2) Remove needle.
- (3) Insert needle till it goes to the end.
- (4) Tighten screw holding needle.

Fix needle so that needle groove faces front.

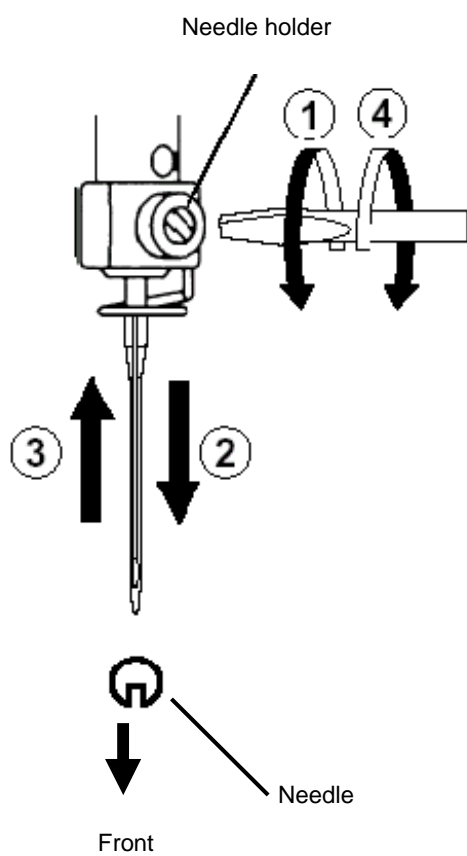

3-2 Selection of thread

1. Selection of upper thread.

<Description>

Please select considering cloth, design of pattern and flavor etc.

<Thickness>

Please refer to [Relation between needle and upper thread 3-3].

<Twist>

Z twisted thread is to be used.

(As rotary hook turns left- wise, Z twisted thread can prevent loosening of twist)



Z-twisted
(Left - twisted)



S-twisted
(Right - twisted)

2. Selection of lower thread.

Basically please use cotton thread (#80-120), #120 is recommendable.

Pay attention to the following in selection.

- # Thickness should be equal.
- # When it is lightly stretched, it doesn't break easily.
- # In process of time, it doesn't get inferior.

Commercially available paper bobbin can be used, but please select thread with thickness corresponding to cotton thread (#80-120).

3-3 Relation between needle and upper thread

1. Description of needle

Basically please use [DB X K5] in standard accessory.

If description or thickness of cloth doesn't suit needle size, poor sewing finish / thread break / skipping will occur. Therefore careful attention is required in selecting needle.

2. Relation between needle and upper thread will be found below. (Representative example is shown.)

Needle - Size is [German 75] in standard accessory.

If necessary, please select in accordance with description of thread and cloth.

Thread - In case needle size is [German 75], if thread is rayon, [#120] is recommendable.

Relation between needle and upper thread

Needle Size		Description of upper thread and thickness			
Organ	German	Cotton	Silk	Polyster	Rayon
8	60	100-130	140-160	150-200	50-70
9	65	70-80	100-120	130-150	70-100
10	70				
11	75	50-60	80-100	100-130	100-130
12	80				
13	85	36-40	60-70	80-100	130-150
14	90				
16	100	30-36	50-60	60-80	150-160
18	110	24-30	40-50	50-60	180-230

↑
Scope to be used for
general embroidery
↓

Denier (d)

If needle size and thickness of thread don't match, following problem will be likely to occur.

- Thread break
- Skipping
- Poor sewing finish



4-1-1 Exchange of needle bar driver

1. Remove moving head.


Please refer to [4-2-1, 4-2-2 Assemble and remove moving head].

2. Remove needle bar driver.

2-1. Slide moving head to 8 th needle. And remove the Slide unit. (Hexagon socket set screw : M4-10 2 pcs)

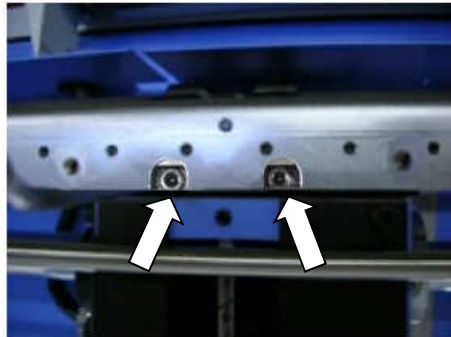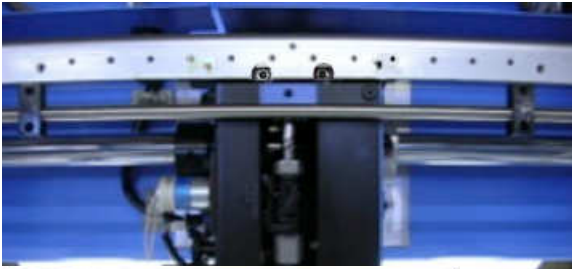


2 screws are inside of the position with arrow mark on above picture.

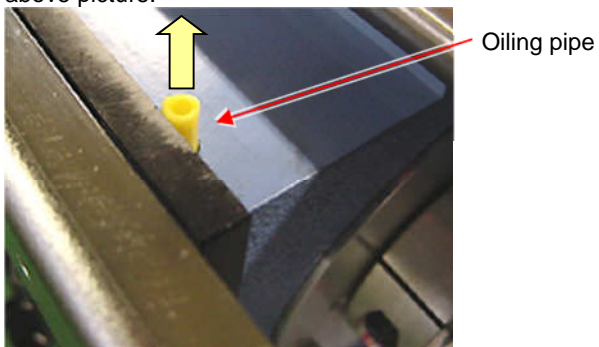


Remove Oiling pipe

2-2. Loose screws for head shaft.


(Hexagon socket set screw : M4-4 2 pcs)

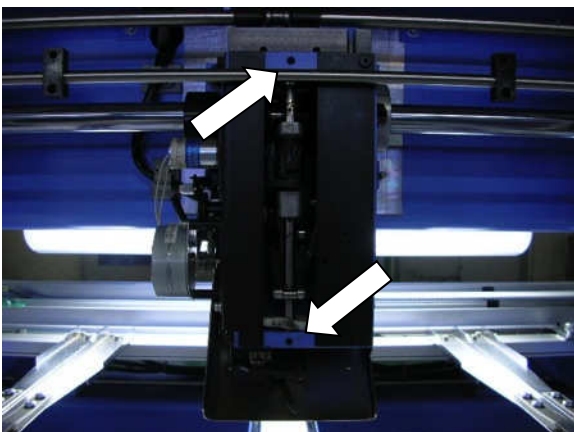

2-3. Slide up the Head shaft.

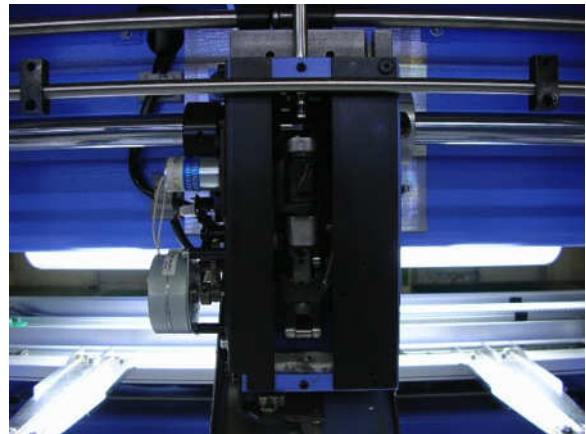


Take off the broken needle driver.

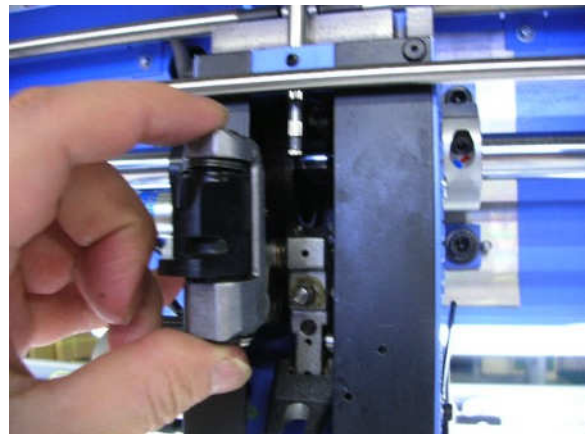

3. Set the new needle bar driver.

Assemble reverse step with step no.2


3-1. Set needle bar driver to block pin.

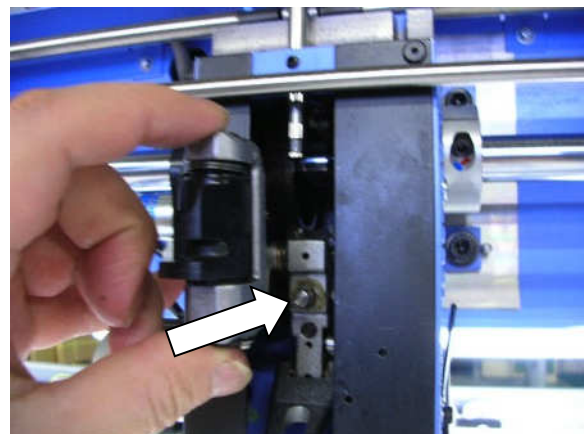


4-1-1 Exchange of needle bar driver

3-2. Set head shaft into the needle driver and tight screws.

(Hexagon socket set screw : M4-4 2 pcs)

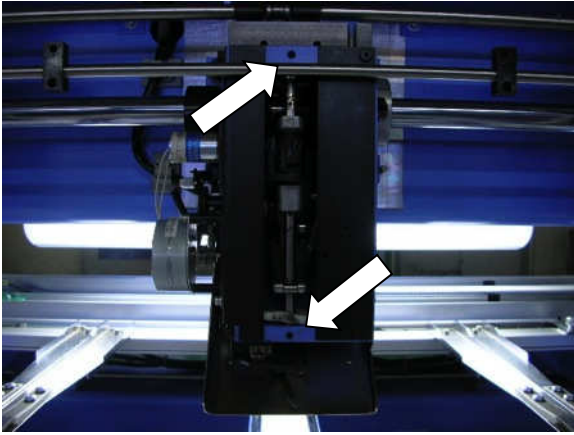


Set bottom head shaft face flat with head face.

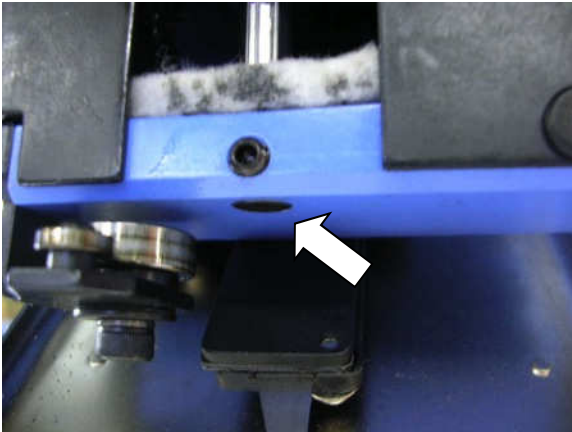


3-3. Set slide unit.

(Hexagon socket button head screw : M4-10)

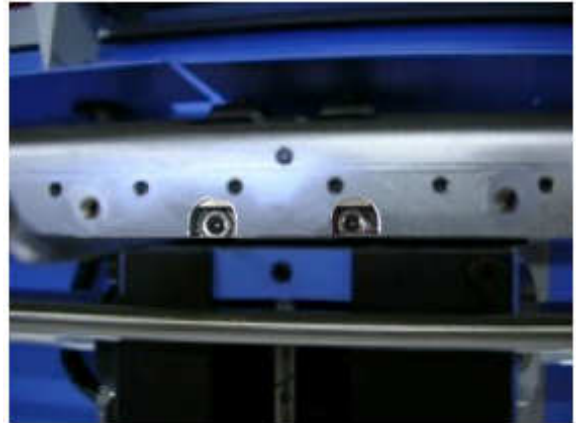

< Note > No clearance between head and slide unit.

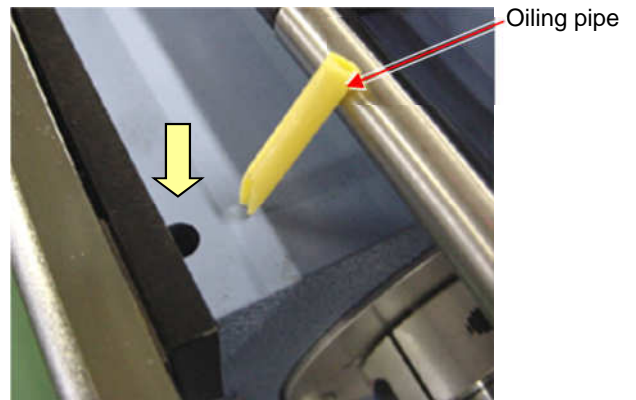

Keeping cut face front and insert oiling pipe into hole.

4. Install moving head.

Please refer to [4-2-1, 4-2-2 Assemble and remove moving head].


5. Check needle height.

Please refer to [2-5 Check of needle height].

4-1-2 Adjustment of take-up lever timing

1. Move moving-head to the position which 8st needle is active.

2. Remove the Upper shaft cover and Detecting cover.

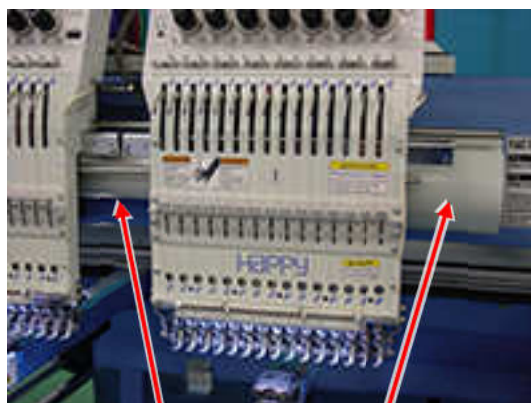

Upper shaft cover

Detecting cover


3. Move moving-head to the position which 1st needle is active.

Remove the Face plate (right) and Head cover bracket.



Face plate (right)

4. Turn upper shaft and insert positioning pin into the hole of cam through the positioning hole on machine body.

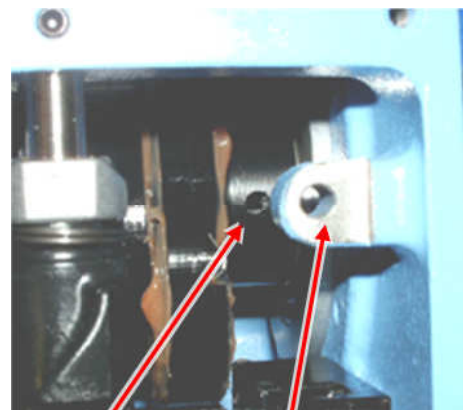


The hole of cam

The positioning hole on machine body

- Please note that moving head is removed on the picture below just for taking photograph.

5. Loosen screw on take up lever cam.

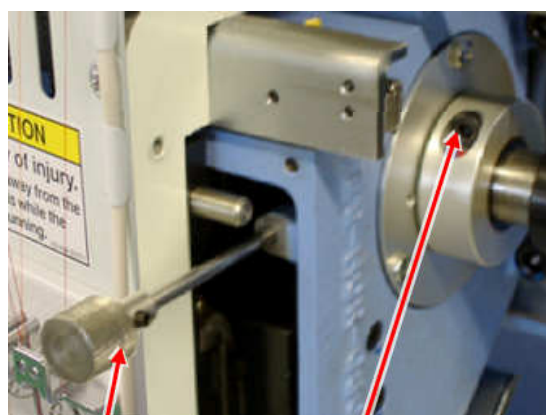

Screw on take up lever cam

The positioning pin


6. Turn upper shaft to the forward direction and set angle [326 degrees].

Turn brake switch ON.



4-1-2 Adjustment of take-up lever timing

7. Fix screw.

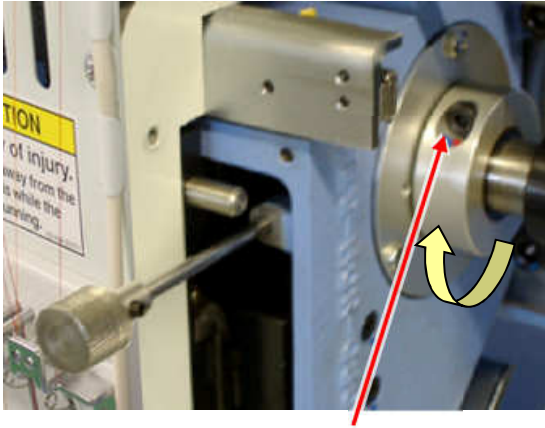

Screw on take up lever cam

8. Pull positioning pin out.

9. Turn brake switch OFF.

Turn upper shaft and set angle at [270 degrees (C point)].

10. Set all covers.

4-1-3 Check of height of pressure foot

1. Bring needle bar down.

Please refer to [5 User maintenance mode]



2. Turn upper shaft and set dial disc to [0 degree].

Turn brake switch ON



3. Insert [Gauge 1.2mm] between needle plate and pressure foot.

Please confirm that there is no gap between gauge and pressure foot and needle plate.



4. If wrong space (not 1.2mm), please adjust height of pressure foot guide bar.

Please refer to [4-1-4 Adjustment of height of pressure foot].

4-1-4 Adjustment of height of pressure foot


1. Bring needle bar down.

Please refer to [5 User maintenance mode]



2. Turn upper shaft and set dial disc to [0 degree].

Turn brake switch ON.

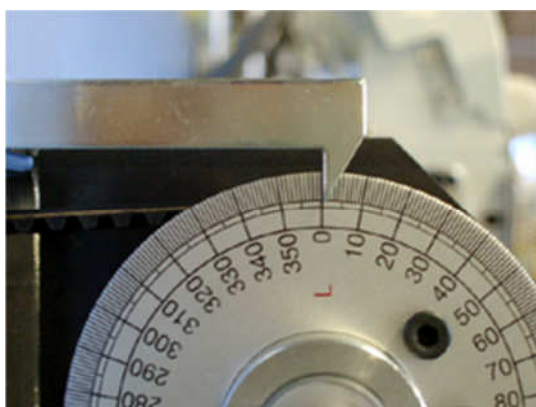

3. Loosen fixing screw of pressure foot (Fixing screw 1 pcs)



4. Insert [Gauge 1.2mm] between needle plate and pressure foot.

1.2 mm is standard, But please adjust depends on thickness of material.



5. Tighten fixing screw for pressure foot.

(Fixing screw 1 pcs)

At this moment, no gap between gauge and pressure foot or needle plate.




4-1-5 Exchange of pressure foot

1. Loosen fixing screws of front panel (lower) and cord clip.

(Fixing screw 2 pcs)

Slide front panel (lower) to left or right direction up to the position of pressure foot to be replaced.

In case you need to slide front panel (lower) further, please slide front panel (lower) on neighbor head

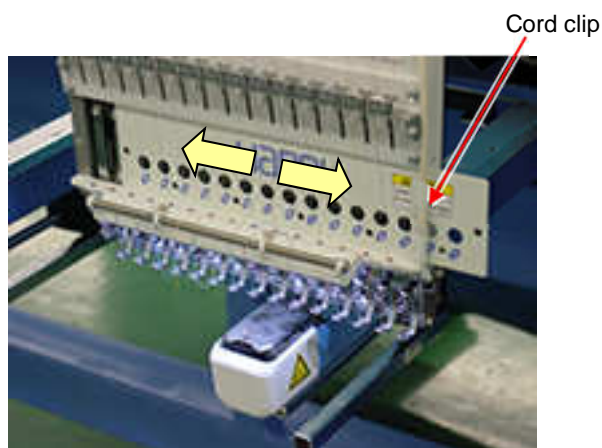

2. Remove needle, needle holder and cushion.


< Note > When needle holder is removed, pressure foot move down quickly.



3. Remove pressure foot. (Fixing screw 1 pcs)



4. Install good parts.

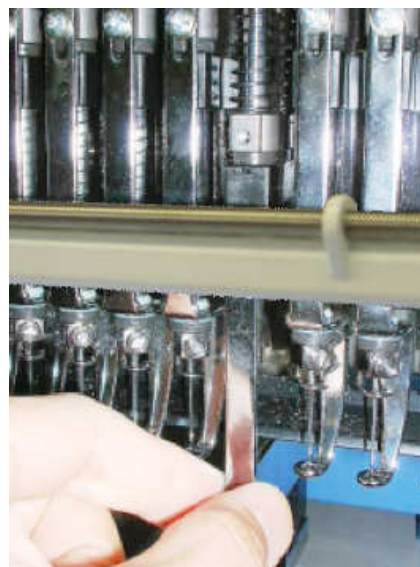

5. Please set needle and needle clamp.

For set needle, please reference [3-1 Fixing of Needle].

6. Adjust needle height.

Please refer to [4-2-6 Adjustment of needle height].

7. Bring needle bar down.


Please refer to [5 User maintenance mode].



4-1-5 Exchange of pressure foot

8. Turn upper shaft and set dial disc to [0 degree].

Turn brake switch ON.

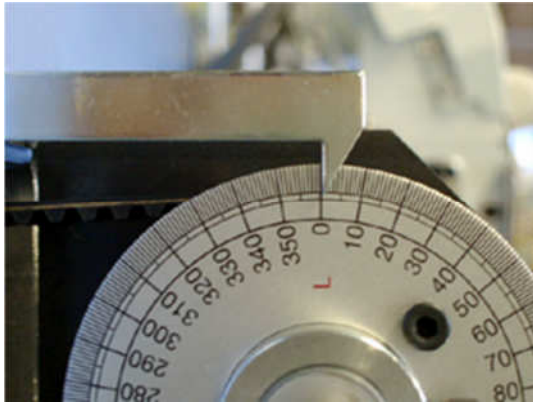

9. Insert [Gauge 1.2mm] between needle plate and pressure foot.

Please confirm that there is no gap between gauge and pressure foot and needle plate.



10. Tighten fixing screw for pressure foot.

(Fixing screw 1 pcs)


At this moment, no gap between gauge and pressure foot or needle plate.



11. Return front panel (lower) and cord clip to previous places to finish.

4-1-6 Adjustment of thread catcher

1. Loosen screw of thread catcher, and push thread catcher to direction as below, and temporary fix screw.

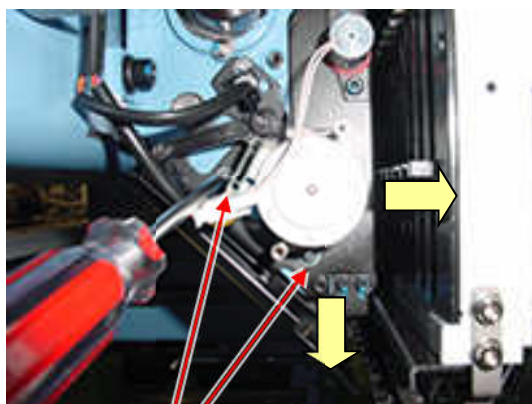

Screw

2. Check position of thread catcher


Move hook in and out by hand and confirm that hook is moving smoothly.

<Note> Please check at 1st needled and 15th needle




Space between hook and pressure foot

Space between back side of pressure foot and hook is 0.5 ~ 1mm.

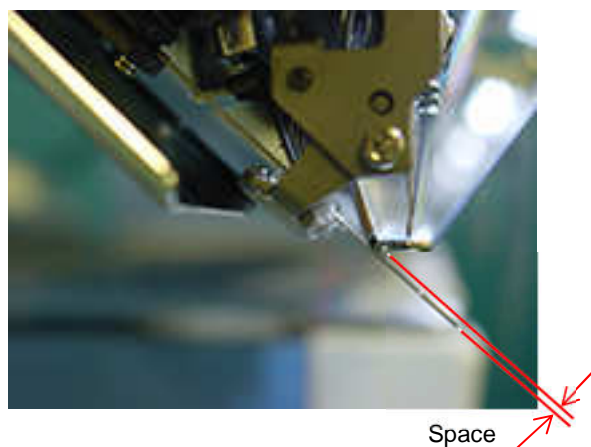

If space is OK, fix thread catcher

3. In case space is not within allowance, re-adjust position of thread catcher

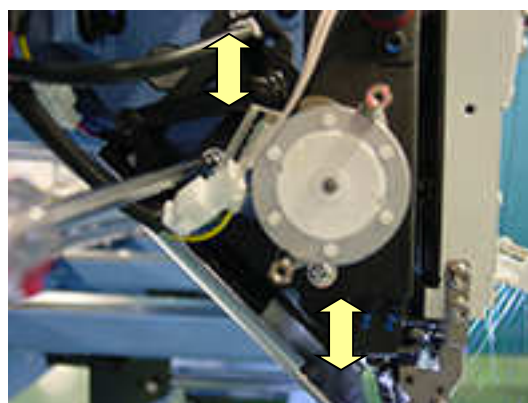


4. Turn thread break detecting switch ON




4-1-6 Adjustment of thread catcher

5. Pull hook completely and return to front for movement of 3 pitches of gear.

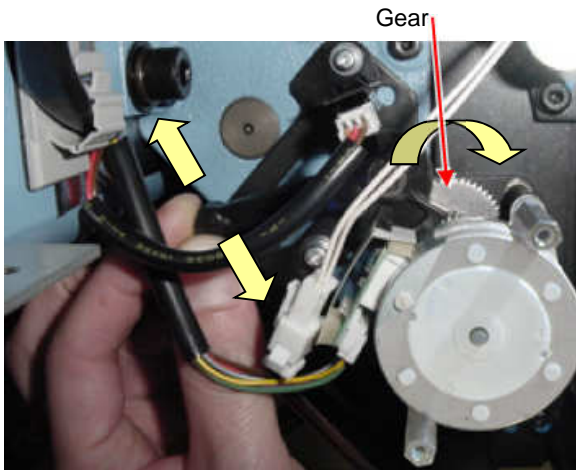

6. Loosen screw of photo sensor, and move photo sensor to the position that thread break lamp becomes RED and fix photo sensor.

Screw of photo sensor

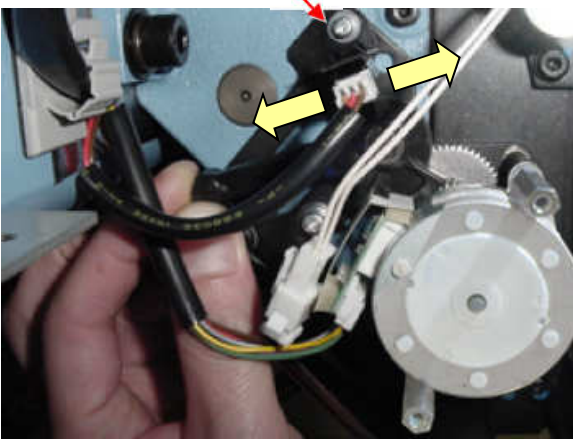

7. Pull hook completely and return to front for movement of 3 pitches of gear, and confirm that thread break lamp becomes RED.

4-1-7 Exchange of thread catcher guide


1. Remove guard plate.

Use the #1 (+) Screw driver.




2. Exchange guide.

Fix the guide after moving it to the right.

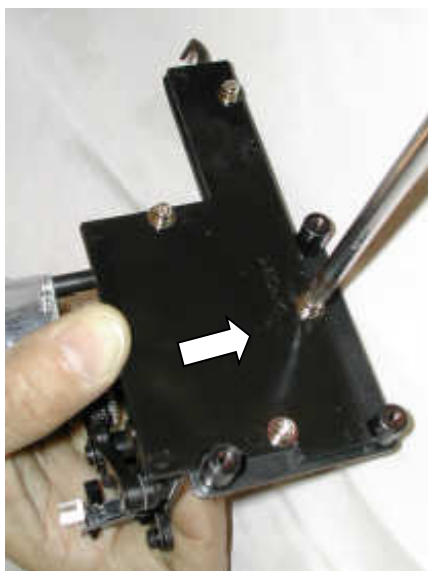

3. Install the guard plate.

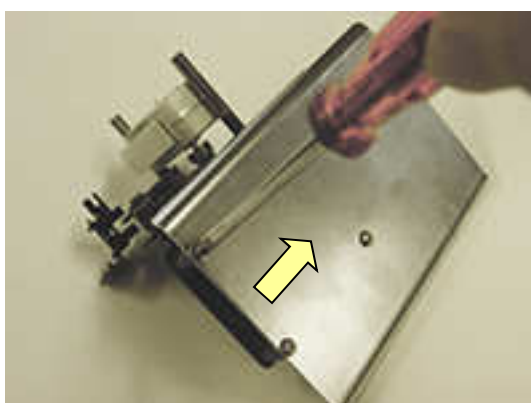

4. Please refer to [4-1-6 Fixing of thread catcher],
install thread catcher to finish.

4-1-8 Exchange of pressure foot cam

1. Please refer to [4-2-1, 4-2-2 Assemble and remove moving head], remove moving head and face plate (right).

Moving head



Face plate (right)



2. Remove pressure foot cam. (Fixing screw 3 pcs)




3. Put on grease to new presser foot cam.

Also, put on grease to fixing nuts, then insert nuts into hole of pressure foot cam to prevent drop of the nut.

<Grease> [Shell alvania EP Grease](#)

(Shell Gudas S2 V220 2)

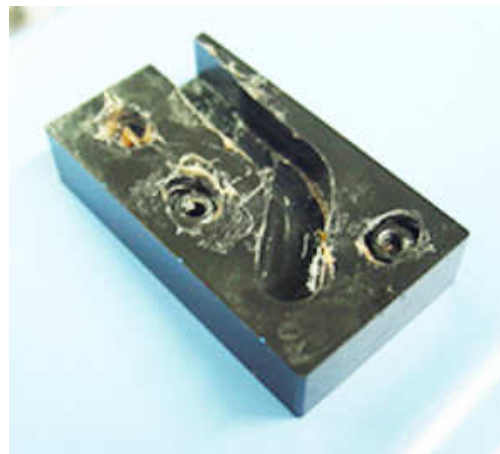

4. Fix good part as temporarily by fixing screw and nut.


Make sure to cover fixing hole with finger to prevent drop of the nut.

Please check bump 2mm between front of presser foot cam and front face of fixed head.



4-1-8 Exchange of pressure foot cam

5. Set dial disc to [L + 0 degrees].

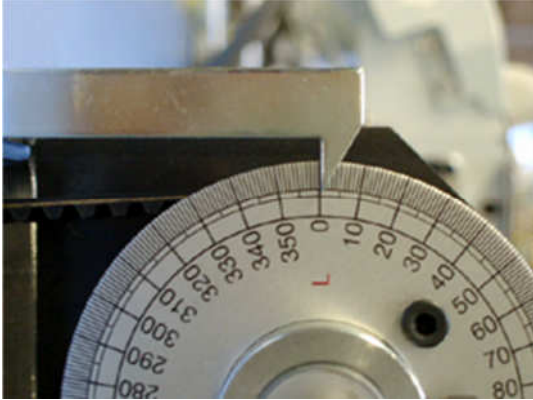

In this time, please check distance between upper face of presser foot and bottom face of fixed head to [25.5+/-0.2mm].



6. Set dial disc to [L + 60 degrees].



In this time, please check distance between upper face of presser foot and bottom face of fixed head to [26.1+/-0.2mm].



7. After check item 5 and 6 then tight screw completely for fix take-up lever cam.



8. Put each unit back to where it was according to manual.

4-1-9 Adjustment of fixing of jump solenoid

1. Please refer to [4-2-1, 4-2-2 Assemble and remove moving head], remove moving head and face plate (right).

Moving head



2. Remove jump solenoid ass'y. (Fixing screw 2 pcs)




3. Install good parts.

Please check Jump solenoid position.

Turn main shaft till touch plunger of jump solenoid and needle bar driver and check main shaft indicator.

Should be between 83 to 87 degrees.

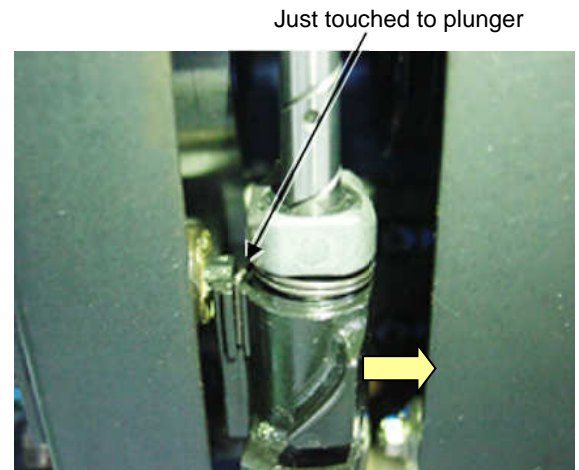

<Dubble check> Please double check Jump solenoid position by following test.

Continually fillip needle bar driver to arrow direction while main shaft turning and hearing plunger touch ing noise.

Should change noise between 83 to 87 degrees shaft position.

4. Please put parts back in reverse order to finish.

For adjustment of fixing of each unit, please refer to process to adjust fixing of each unit.

4-1-10 Disassembling and Cleaning of jump solenoid

1. Disassemble the solenoid nut.

Use rubber sheet as safeguard.



2. Clean up the each part of the solenoid.



3. Put the designated grease on plunger part.

<Grease> Shell Grease7 MIL-G-23827B


Equivalent brand




4. Assemble the solenoid to the original position.

The flat surface of the solenoid nut should come to the front.

Solenoid cable should come to the back side.

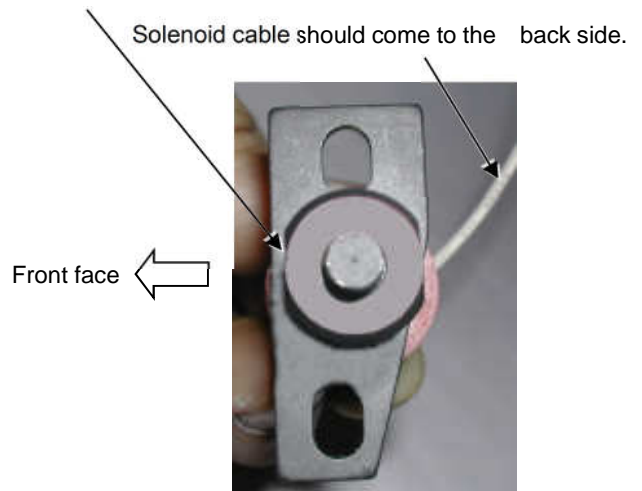

5. Confirm the movement of the plunger is smooth enough.

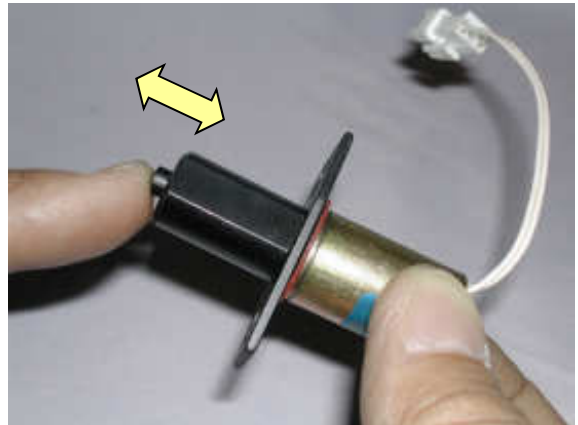

6. Procedure is done after assembling the Jump solenoid.
Referring to [4-1-9 Adjustment of fixing of jump solenoid].


4-2-1 Assemble and remove moving head (except for 1st head)

1. Remove moving head.

1-1. Set moving head at position that 15th needle is active.

Remove the front panel (upper), cord clip and lighting bracket.

(Truss head screw : M4-6 4 pcs)

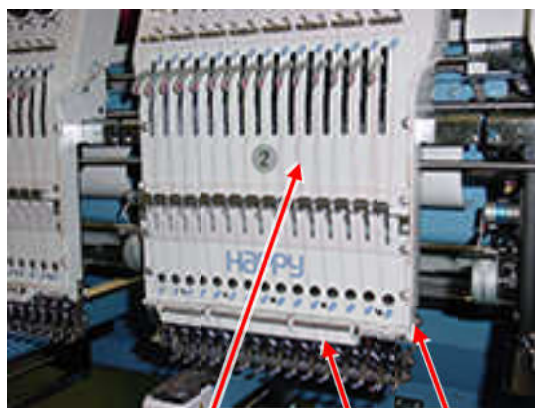

Upper shaft cover

Cord clip

Lighting bracket

1-2. Loosen screw on thread tension bracket

(Pan head screw : M4-10 4 pcs)



1-3. Remove the thread tension bracket.

(Pull thread tension bracket to front)



Put thread tension bracket and lighting bracket on head upper cover.




1-4. Remove the set screw.

A (Hexagon socket head cap screw : M4-20 6 pcs)

B (Hexagon socket head cap screw : M4-6 2 pcs)

C (Hexagon socket head cap screw : M4-18 4 pcs)

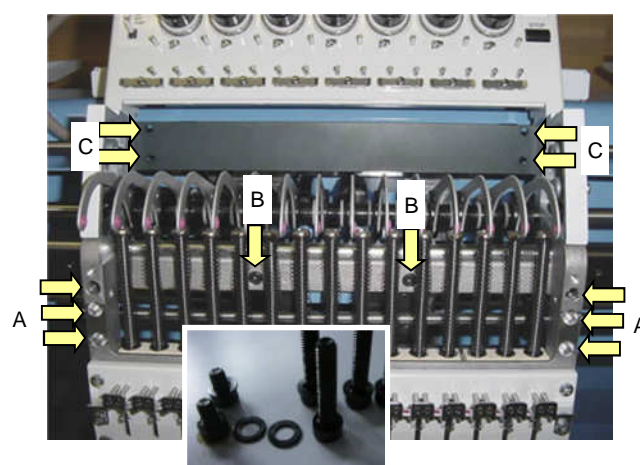

Hexagon socket head cap screw is a set with plain washer.


Please keep as a set.

4-2-1 Assemble and remove moving head (except for 1st head)

1-5. Slide moving head to right direction



After rail goes out from positioning roller, take moving head out.

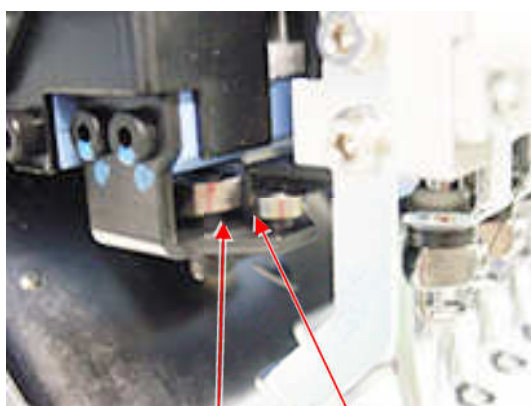

Positioning roller


Rail



2. Install moving head.

2-1. Set moving head at position that 15th needle is active.


Set all take-up lever to guide bar starting from 1st needle

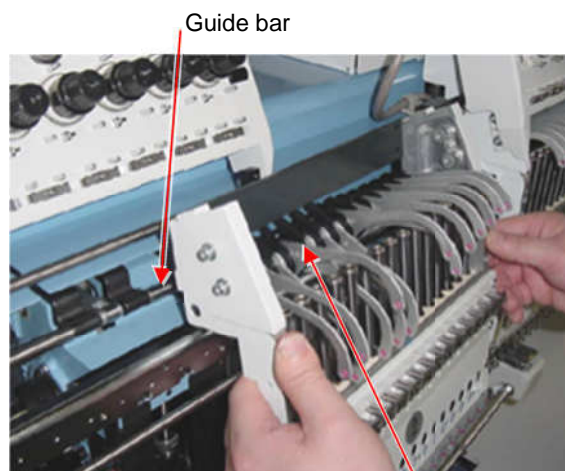

Guide bar

Take-up lever

Insert rail into positioning roller.

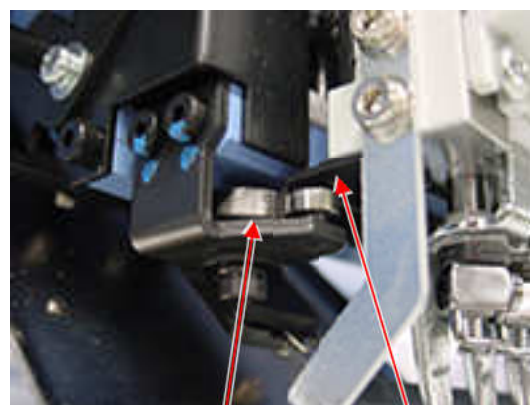

Positioning roller


Rail

2-2. Temporally tighten screws.

A (Hexagon socket head cap screw : M4-20 6 pcs)

B (Hexagon socket head cap screw : M4-6 2 pcs)

C (Hexagon socket head cap screw : M4-18 4 pcs)

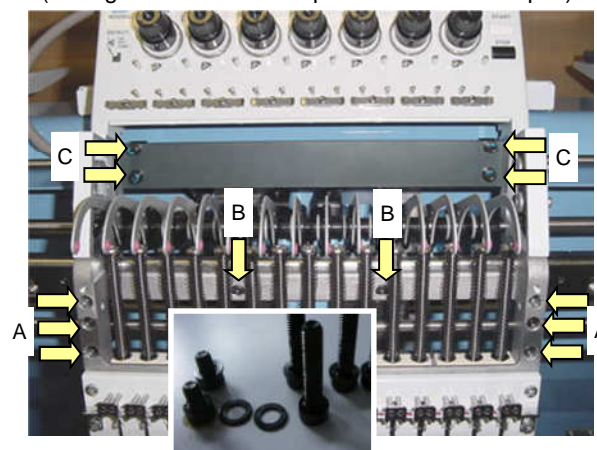

Please put plain washer with hexagon socket head cap screw.


4-2-1 Assemble and remove moving head (except for 1st head)

2-3. Move moving head to the position that 8th needle is active.

Tighten 4 screws on moving head. (see photo below)




Moving head

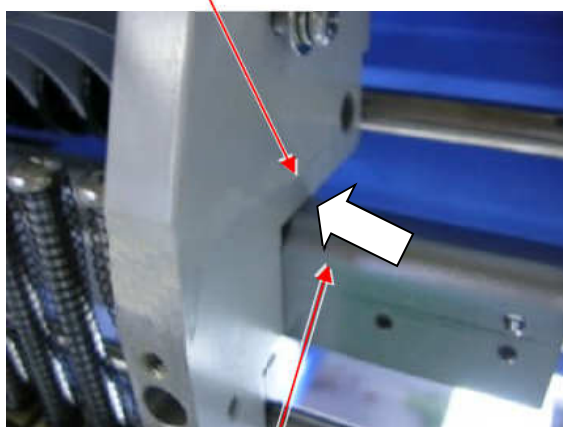

Rail support


Please confirm that there is no space at the arrow point on above picture.

2-4. Set take-up lever to lever crank

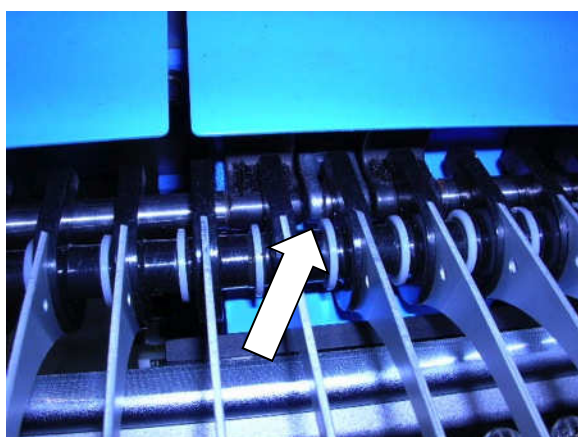


2-5. Please needle bar of 8th needle down until needle driver catches needle bar boss. Then turn upper shaft to needle down and check that needle is center of needle hole on needle plate. If needle position is not center of needle hole, please move moving head right or left to fit needle position.


Please refer to [4-2-5 Adjustment of needle position (left and right)].

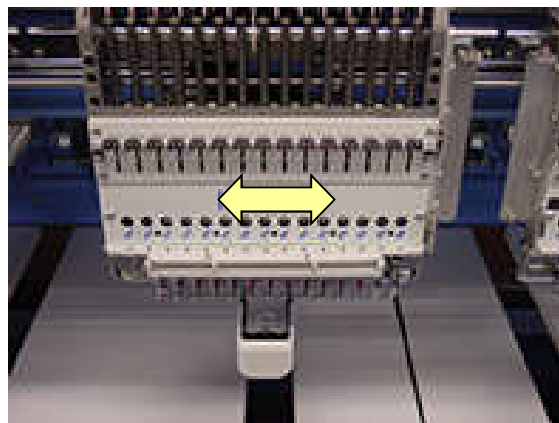

2-6. Tighten 8 screws on moving head. (See photo below)

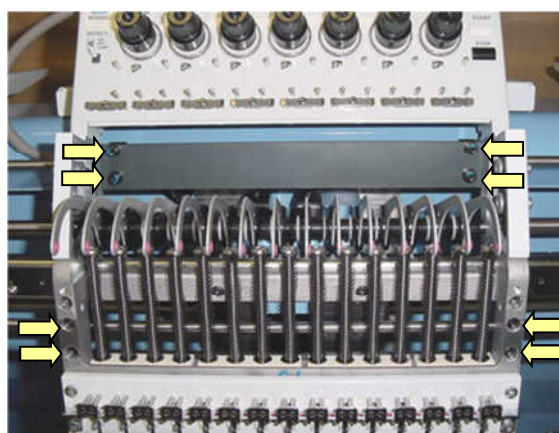

< Note > Gap between Moving head and Fasten Block should be **2.5mm**.

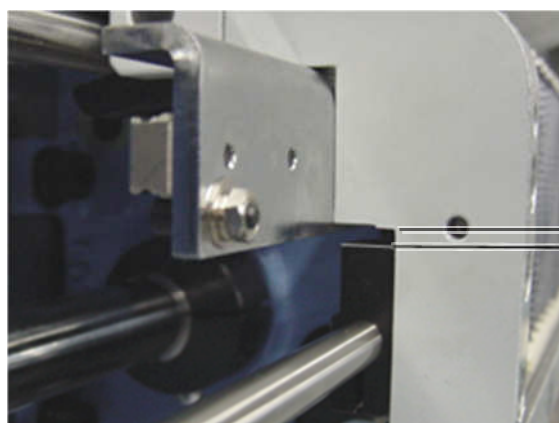

4-2-1 Assemble and remove moving head (except for 1st head)


2-7. Install Thread tension bracket.

(Pan head screw : M4-10 4 pcs)



2-8. Set Front panel (Upper), cord clip and lighting bracket.

(Truss head screw : M4-6 4 pcs)

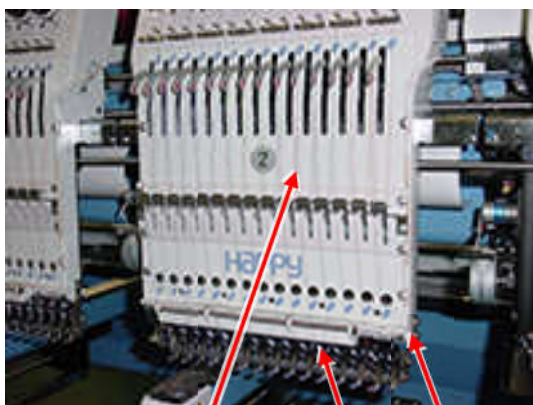

Upper shaft cover

Cord clip

Lighting bracket

3. After installation of moving head, please check following points;

3-1. Check needle height, please check needle height at 1st, 8th and 15th needle.

Please refer to [2-5 Check of needle height].

In case needle height is not same for each needle, installation of moving head was wrong,

Please check step 2-3 again.

3-2. Check of rotary hook timing, please check hook timing by 8th needle.

Please refer to [2-6 Check of rotary hook timing]

In case hook timing is not correct, installation of moving head was wrong,

Please check step 2-5 again.


4-2-2 Assemble and remove moving head (1st Head)

< Note > When you need to take all moving head out, please take 1st head at last.

1. Remove moving head.

1-1. Remove the front panel (upper), cord clip and lighting bracket.

(Truss head screw : M4-6 6 pcs)

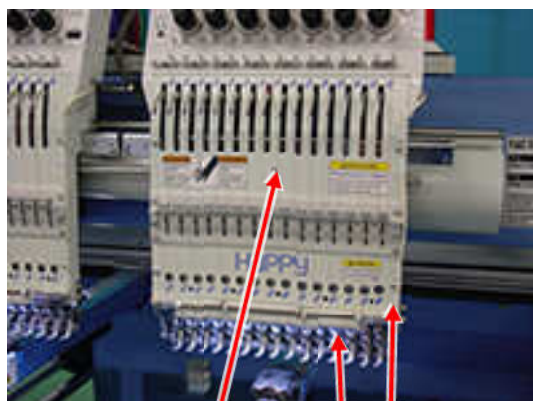

Upper shaft cover

Cord clip

Lighting bracket

1-2. Loosen screw on Thread tension bracket

(Pan head screw : M4-8 4 pcs)




1-3. Remove the thread tension bracket.

(Pull thread tension bracket to front)




Put thread tension bracket and lighting bracket on head upper cover.

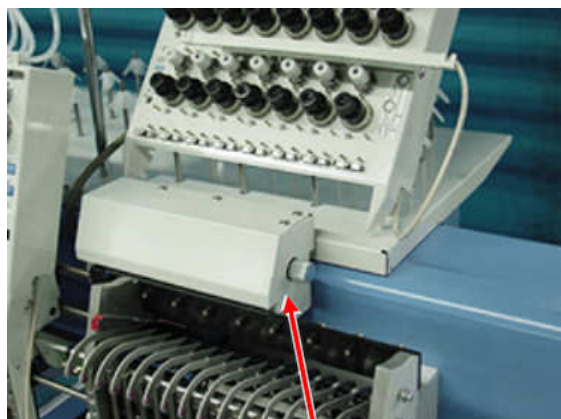

Needle bar change cover

1-4. Remove the Needle bar change cover and needle position plate.

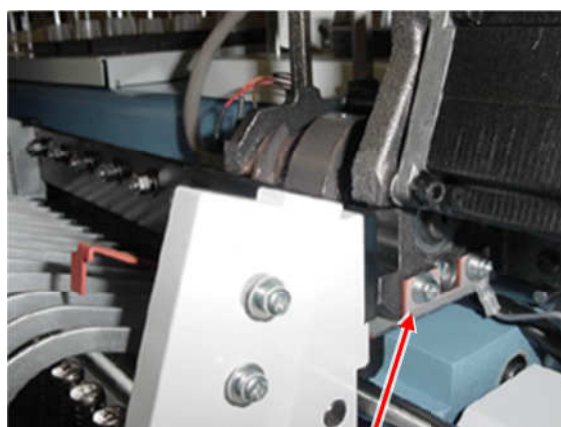


Needle position plate

4-2-2 Assemble and remove moving head (1st Head)

1-5. Move moving head to the position which 8th needle is active, by knob.

Loosen screw on moving head support.


(Hexagon socket head cap screw : M5-15 2pcs)

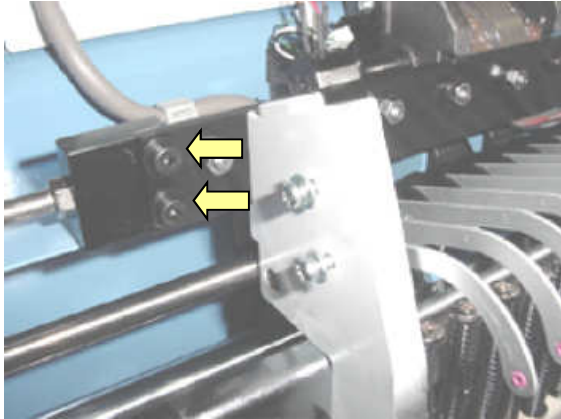

1-6. Remove set screw.

(Hexagon socket head cap screw : M4-20 6 pcs)


(Hexagon socket head cap screw : M4-6 2 pcs)

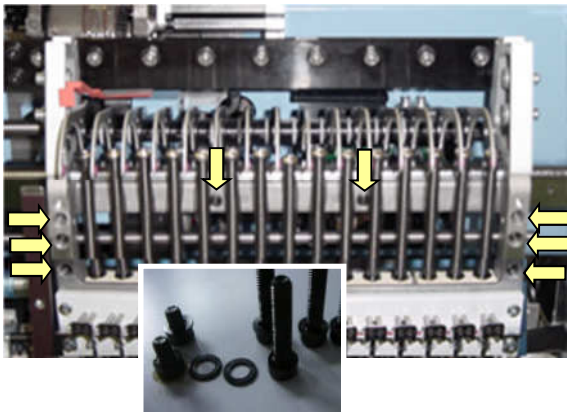

Hexagon socket head cap screw is a set with plain washer.


Please keep as a set.

1-7. Slide moving head to the right direction by knob, and take moving head out after the rail going out from roller.

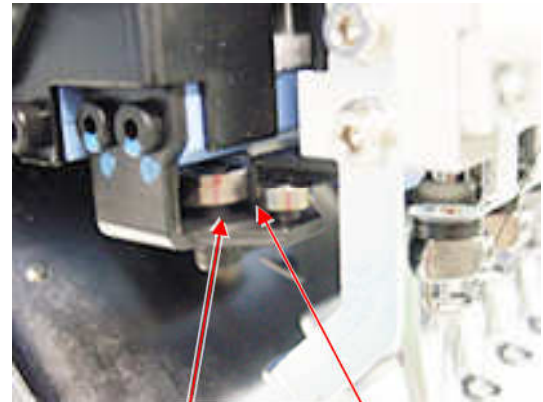

Positioning roller

Rail

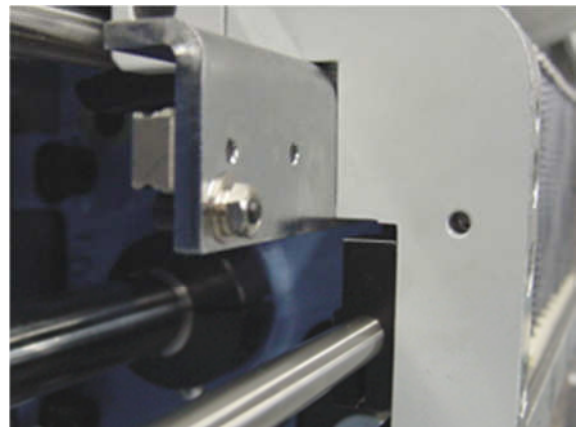



4-2-2 Assemble and remove moving head (1st Head)

2. Install moving head.


2-1. When you install moving head, please set the same position of Needle bar change unit as the position which you took Moving head out. (slightly moved to the right position then 15th needle)

< Note > In case you lost the position mentioned above:
Please turn power on and move moving head to 14th needle by Needle change button, then move to 15th needle.

After setting to 15th needle, please move slightly to the right by knob of Needle bar change unit.

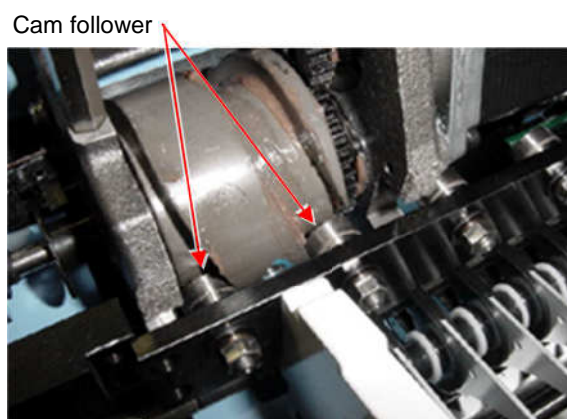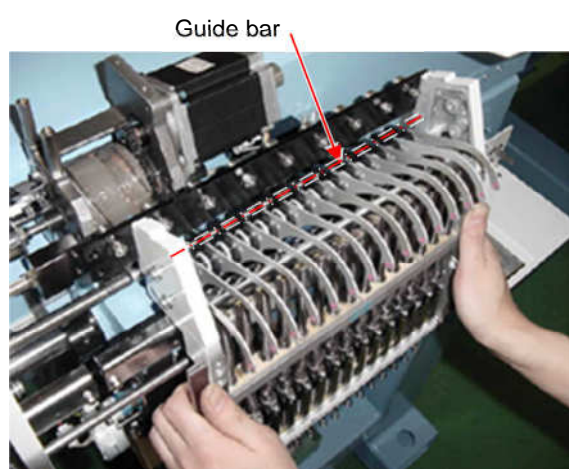

With turning knob, set the rail into Positioning Rollers.

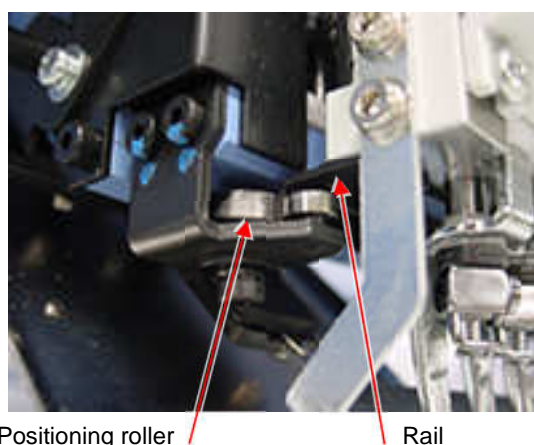


Positioning roller Rail

2-2. Set moving head to 15th needle position and temporarily tighten screws.

(Hexagon socket head cap screw : M4-20 6 pcs)


(Hexagon socket head cap screw : M4-6 2 pcs)

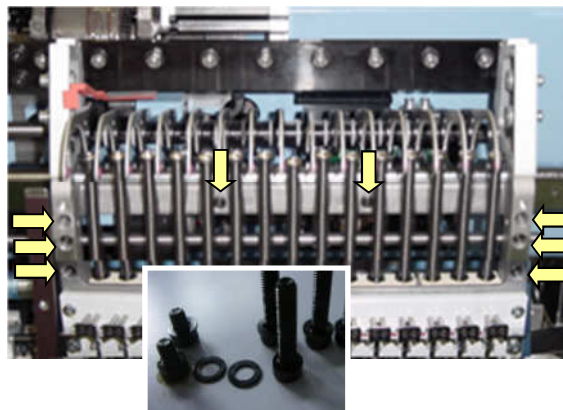


Please put plain washer with hexagon socket head cap screw.

2-3. Move moving head to the position that 8th needle is active.

Tighten 4 screws on moving head. (see photo below)

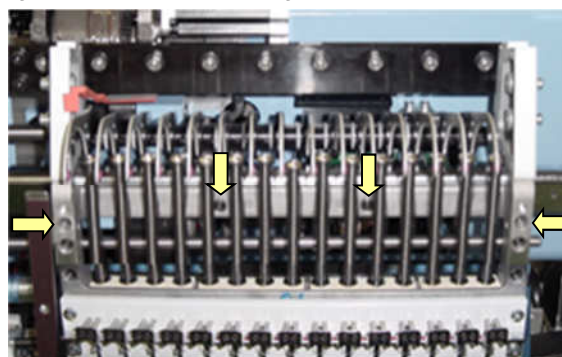

Moving head

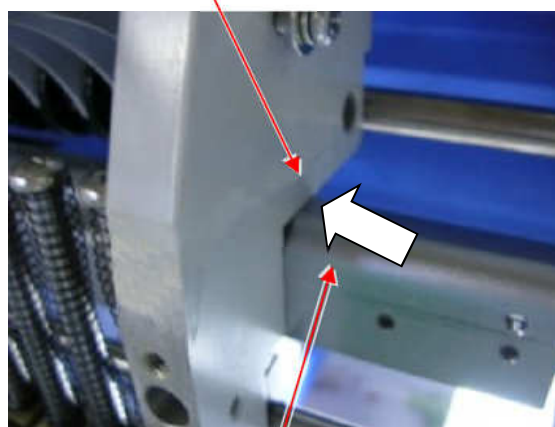


Rail support

Please confirm that there is no space at the arrow point on above picture.

4-2-2 Assemble and remove moving head (1st Head)

2-4. Fix Moving head support to Slide Bar by screws.

(Hexagon socket head cap screw : M5-15 2 pcs)

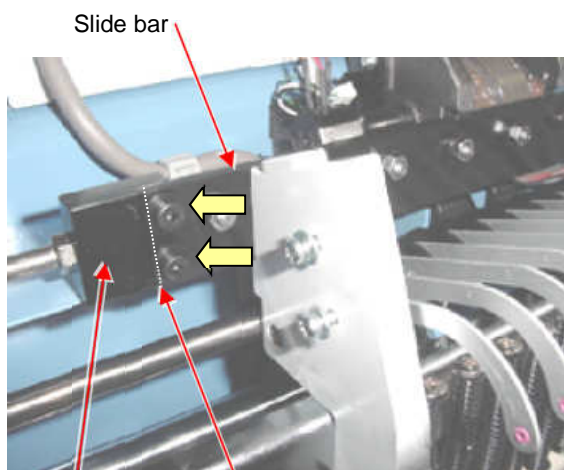


Moving head support Joint point

Please confirm that there is no space at joint point.

2-5. Tighten screw on moving shaft.




< Note > Please confirm "Fasten block" position to make clearance about [2.5mm] against "Moving head".

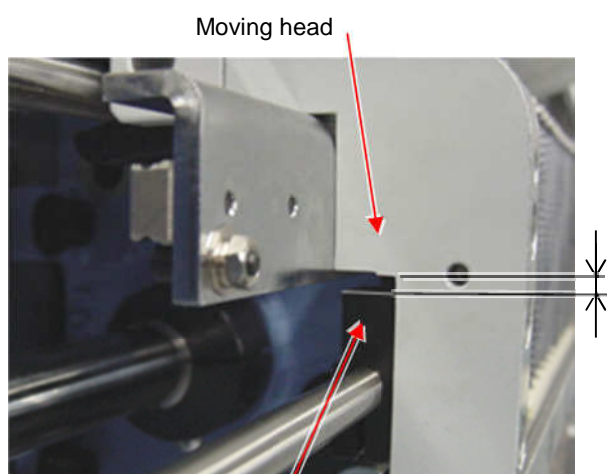

Fasten block

2-6. Move moving head to the position that 1th needle is active.

Install the needle position plate.

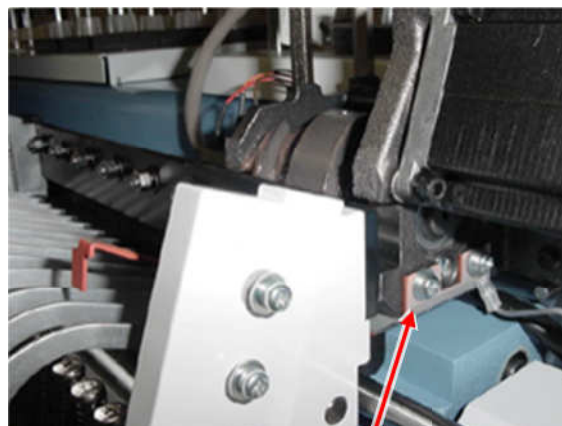

Needle position plate


2-7. Install Thread tension bracket.

(Pan head screw : M4-10 4 pcs)



2-8. Set the front panel (upper), cord clip and lighting bracket.

(Truss head screw : M4-6 4 pcs)

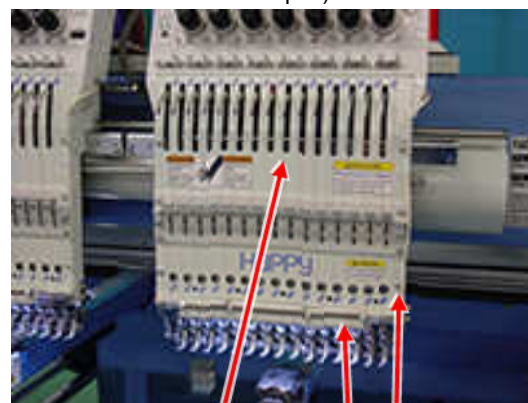

Upper shaft cover

Cord clip

Lighting bracket

4-2-2 Assemble and remove moving head (1st Head)

2-9. Please adjust Adjustment of needle position (left and right) **Adjust for 1st head**].

Referring to [4-2-4 Adjustment of needle position (left and right) **Adjust for 1st head**].

< Note > When you take 1st Moving Head out and re-install, please check needle position for all other head too.

3. After installation of moving head, please check following points;

3-1. Check needle height, please check needle height at 1st, 8th and 15th needle.

Please refer to [2-5 Check of needle height].

In case needle height is not same for each needle, installation of moving head was wrong,

Please check step 2-3 again.

3-2. Check of rotary hook timing, please check hook timing by 8th needle.

Please refer to [2-6 Check of rotary hook timing]

4-2-3 Adjustment of needle position (back and front)


1. Please set Thread break detecting switch to ON for adjusting head. Other head, please set to JUMP.



2. Push and pull the Moving head and check playing the moving head.

In case of you find play the moving head

Loose screw of positioning roller and re-tight the screw with jyoointing the Rail.

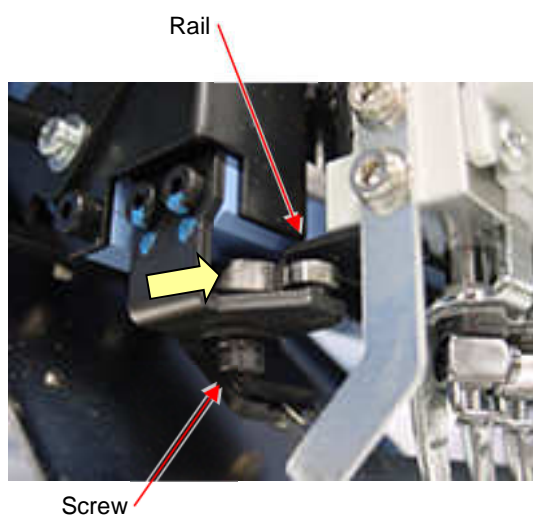


3. Move the Moving head to 8th needle, then down needle till needle point to face of needle plate.

Please refer to [5 User maintenance mode].




4. Move the Positioning plate to front and back for adjust needle position against needle hole to center and tight the screw.

< Note > Insert Lower rail to between the two bearing deeply.

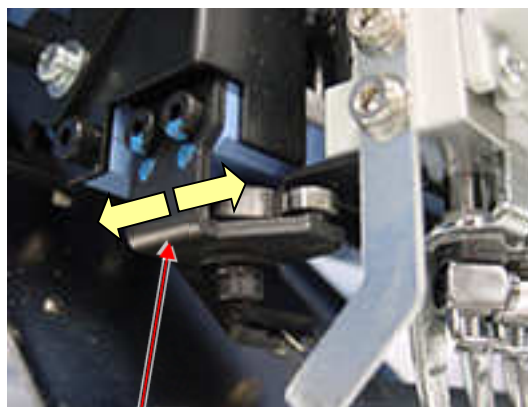

Positioning plate

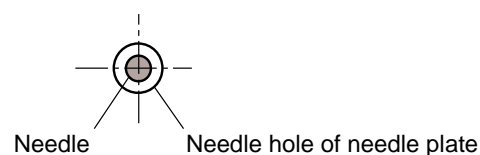

5. After adjustment, confirm the position by 1st and 15th needle also.

If you have big different the needle position 8th and 1st and 15th needle, please confirm again after you replate bland new needle.

6. After adjustment, please be sure to check and adjust clearance between needle and shuttle hook.

Please refer to [4-4-1 Adjustment of rotary hook timing].

4-2-4 Adjustment of needle position (Left and Right)

Adjust for 1st head


If you change 1st head position, you need to confirm head position other all head.

1. Remove the cover of Needle bar change unit.



Cover

2. Push the Moving head right and left for confirm should not have a play the Cam. If you have a play the cam, please refer [4-3-1 Check / Adjustment of needle bar change unit].

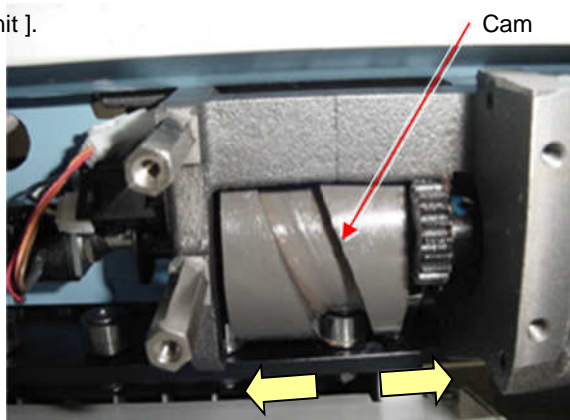


Cam

3. Move the head to 8th needle and remove Detecting Cover and Thread Detecting Board of 1st head and loose screw for needle bar change unit.


< Note > Please turn off machine power.



Detecting cover

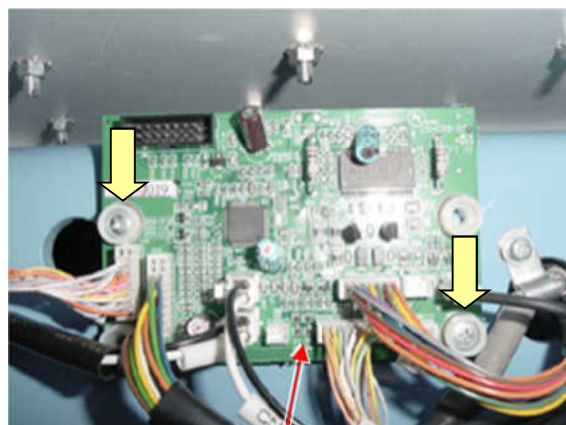


Thread detecting board

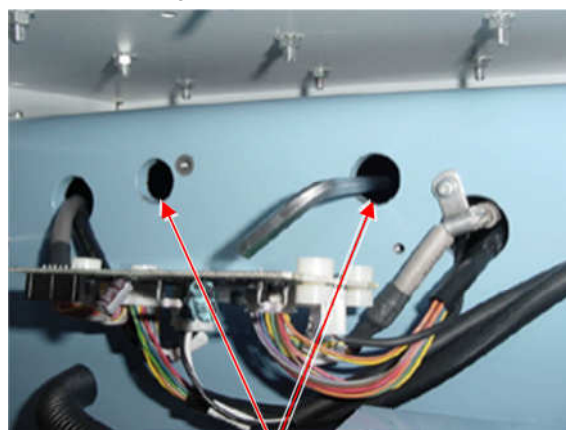

Screw for needle bar change unit inside the beam.

4. Turn the knob and stop at a needle stop position. Then turn down needle till needle point to needle plate face. You can move the Moving head with Needle bar change unit right and left for adjust needle position to center to needle plate hole.

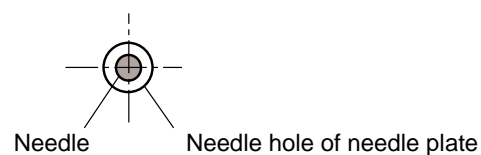

4-2-4 Adjustment of needle position (left and right)

5. Please confirm needle position after tight the screw for needle bar change unit inside the beam.

6. Return Thread Detecting Board, detecting cover and needle bar change cover to previous places.

7. Turn on the machine and confirm the position at 8th needle position.
If the needle position is not at center of needle hole, please refer to [4-3-1 Check / Adjustment of needle bar change unit].

8. Please confirm 1st and 15th needle also.


9. After adjustment the positon for 1st head, please adjust 2nd head to last head.
Please refer to [4-2-5 Adjustment of needle position (left and right) Adjust for 2nd to last each head].

4-2-5 Adjustment of needle position (left and right)

Adjust for 2nd to last each head

Please set Thread break detecting switch to ON for adjusting head. Other head, please set to JUMP.


1. Move the Moving head to 8th needle and remove the Front panel (Upper) and cord clip.

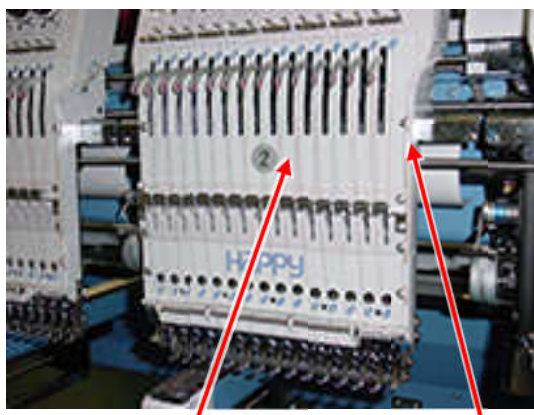

Upper shaft cover

Cord clip


2. Just loose 4 screws showing picture below.

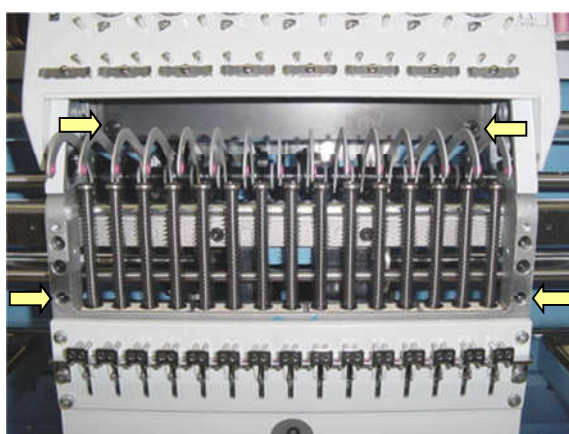

3. Down needle till point of need with face of the needle plate.
Please refer to [5 User maintenance mode].



4. You can move Moving head right and left for position adjustment by hand. Then tight 4 screws.

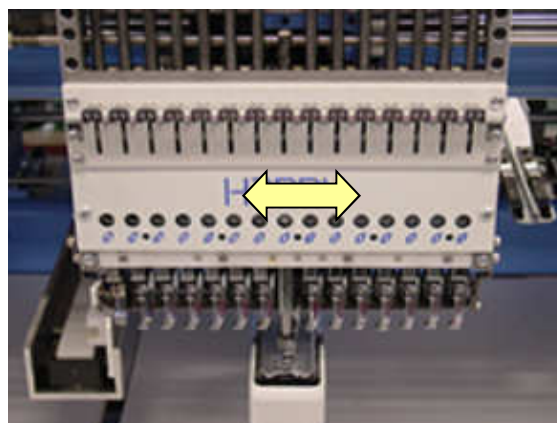

5. Please confirm 1st and 15th needle also after 8th needle.
If the needle position is not at center of needle hole, please replace.

6. After adjustment, Please confirm needle height and rotary hook timing.
Please refer to [4-2-6 Adjustment of needle height]
[4-4-1 Adjustment of rotary hook timing].


7. Set the front panel (upper) and cord clip.

4-2-6 Adjustment of needle height

1. Remove the front panel (upper) and cord clip.

Slide front panel (lower) to left or right direction up to the position that you can see needle bar to be adjusted.

In case you need to slide front panel (lower) further, please slide front panel (lower) on neighbor head.

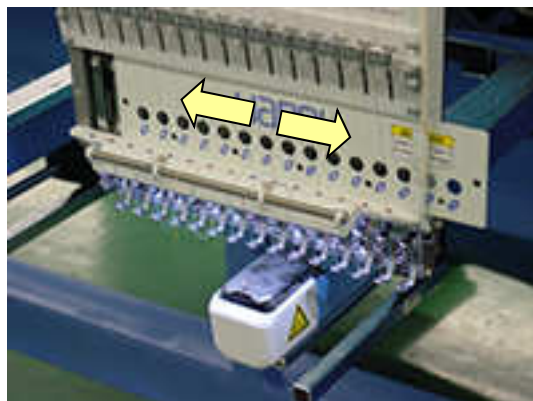

2. Remove bobbin case.



3. Bring needle bar down.


Please refer to [5 User maintenance mode].



4. Turn upper shaft to set dial disc to [10 degrees].



5. Loosen screw on needle bar boss.

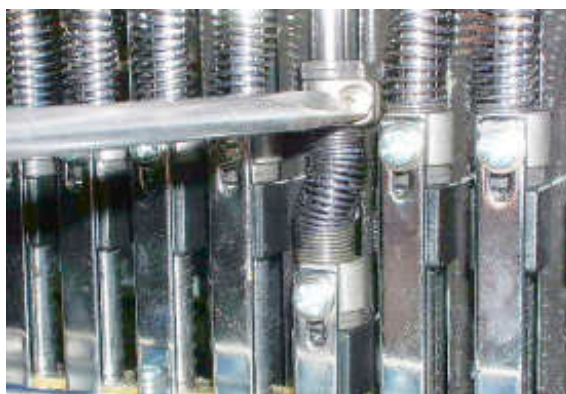

6. Put needle height gauge in rotary hook.




4-2-6 Adjustment of needle height

7. Adjust the needle bar height up and down till the needle tip touches to the gauge slightly.



8. Set direction of needle stop as illustrated below.

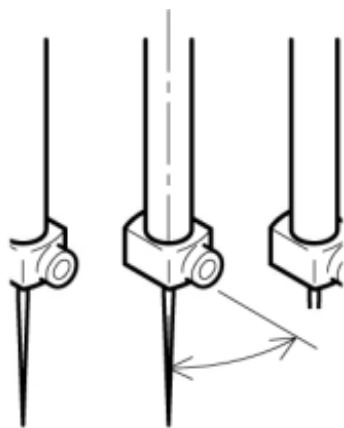

About 30 degrees

9. Tighten the screw of needle bar boss.




10. Take Needle height gauge out from Hook.

11. Back main shaft to [270 degrees (C point)] position.

12. Set "front panel (lower)" and cord clip, set "bobbin case" then end of process.

4-2-7 Adjustment of needle bar lowest point

1. Take Upper shaft cover.

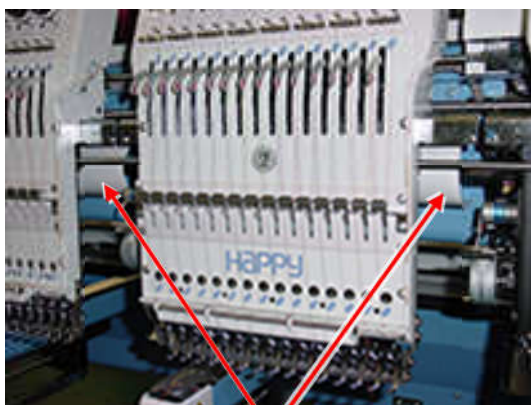


Upper shaft cover

2. Move moving head to the position that 14th needle is active.

Take Thread catcher cover.

3. Turn off the brake switch.

Turn upper shaft to set dial disc to [C point (270 degrees)].

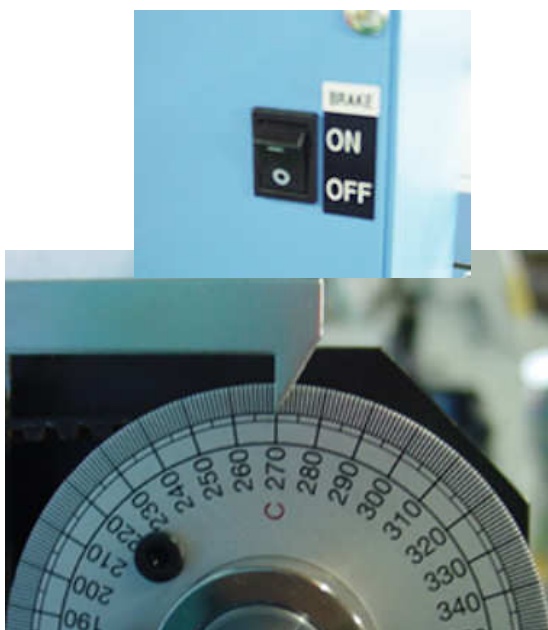

4. Bring needle bar down.




5. Turn upper shaft to set dial disc to [355 degrees].



6. Turn on the brake switch.



7. Fix Dial-gauge set on left side of bed.

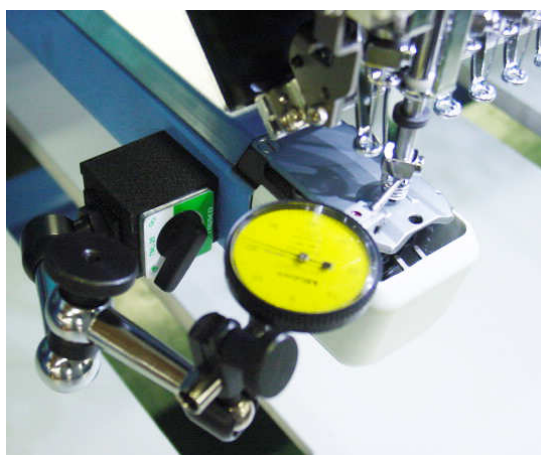


8. Set lever of the Dial-gauge at lower surface of needle holder then, adjust position of the Dial-gauge so as to move pointer of the Dial-gauge around 1mm.



4-2-7 Adjustment of needle bar lowest point

9. Loosen a fixing screw of fasten collar.

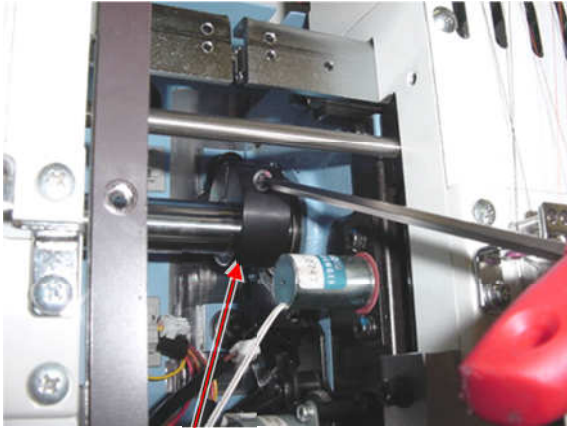

Fasten collar


10. Turn Fasten collar to the forward direction and move needle bar.

< Note > Please do not turn the fasten collar so much, because the measuring range of the Dial-gauge is limited.

In case needle bar can not be moved,
Fixing screw for Fasten collar is loosen too much.
Tight fixing screw for Fasten collar gradually up to the position that needle bar can be moved.

< Note > If loosen too much, fasten collar will start slipping against needle bar cam.

If tight too much, needle bar can not be moved again.

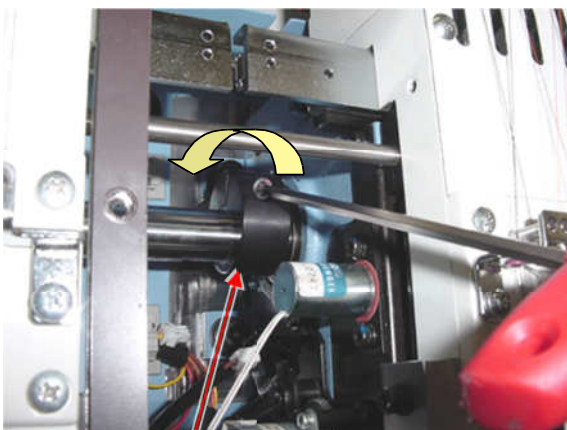


Fasten collar

11. Check movement of the Dial-gauge with turning fasten collar forward and back ward then, find needle bar lowest point that the movement of the dial-gauge stops.



12. Tighten fixing screw of fasten collar.

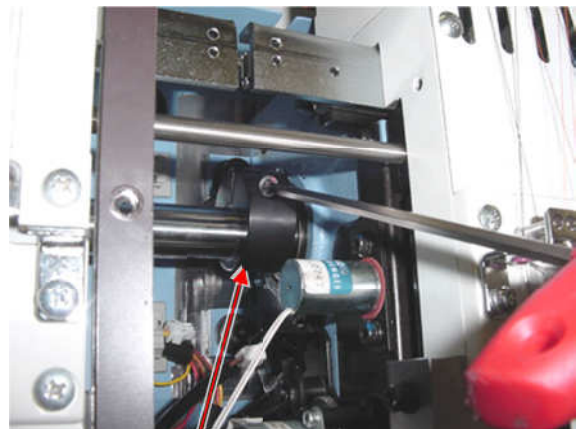

Fasten collar

13. Turn brake switch off.

14. Turn upper shaft to set dial disc to [355 degrees], Turn main shaft forward and back ward with checking the Dial-gauge movement then, stop the main shaft at needle bar lowest point.

Confirm that the dial disk is located at 355 degrees.

If the angle is not correct, repeat steps from 9 to 14.

15. Put removed all parts back to finish.

16. After adjustment, confirm the needle height and rotary hook timing also.

Please refer to [4-2-6 Adjustment of needle height]

[4-4-1 Adjustment of rotary hook timing].


4-2-8 Adjustment of needle bar stopper

1. Turn the machine power on.
2. Remove thread adjusting unit assembly from a head which requires adjustment. Then, remove two(2) pieces of screws indicated with red arrows.




Thread Adjusting Unit Assembly

3. Loosen a screw of a needle which requires adjustment.

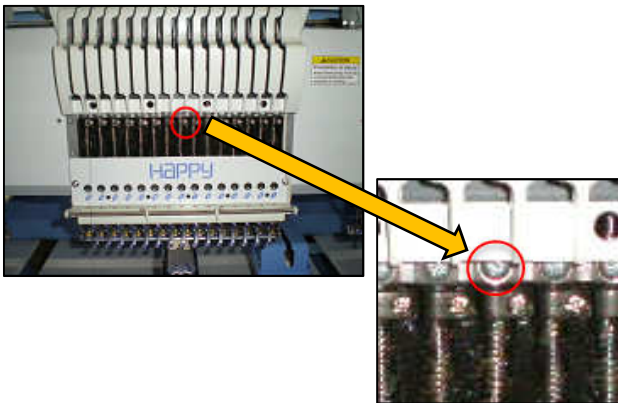


4. Put down needle bar assembly of a needle manually which requires adjustment down.

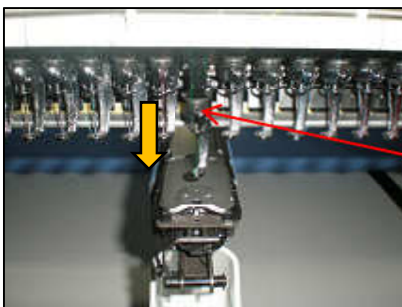


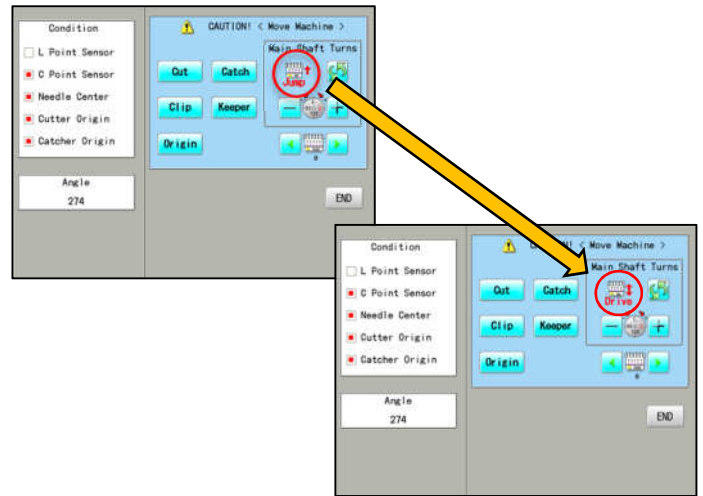
Needle Bar Assembly

5. Push "MENU"  and then push "OTHER" 


6. Push Maintenance

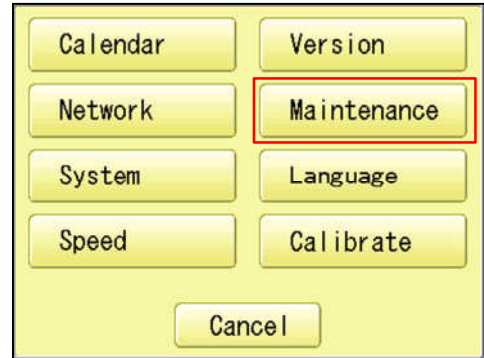

7. Push , and then change to "Drive" from "Jump" at "Main Shaft Turns".



8. Push "Angle", and then rotate a main shaft by 180 degrees.

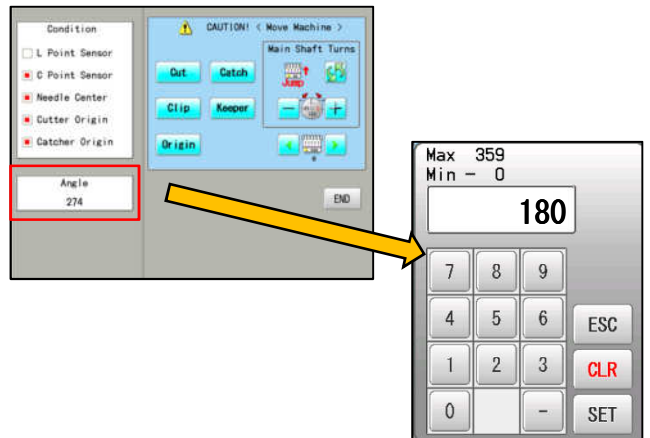

9. Check an angel on a disk visually, and then loosen a screw of a needle which requires adjustment. If an angel on the disk deviates from a required angle, try to adjust an angle on the disk and tighten the screw when an required angle is secured.

10. After completion of the above step No. 9, deactivate thread detection, and then check if a needle bar works correctly with a machine activated.

Note: If a needle bar does not work correctly, go back to the above step No. 8 and lower an angle by every two(2) degrees as appeared at Example below.

Tighten a screw of a needle which requires adjustment when an appropriate angle is secured.

Then, go back to the above step No. 10.

Example: $180 \Rightarrow 178 \Rightarrow 176 \cdot \cdot \cdot \cdot \cdot$

11. Put thread adjusting unit assembly back on.


Steps complete.

4-2-9 Exchange of needle bar, needle bar spring, cushion and pressure foot block

1. Referring to [4-1-5 Exchange of pressure foot], remove pressure foot.



2. Loosen screw on needle bar boss.

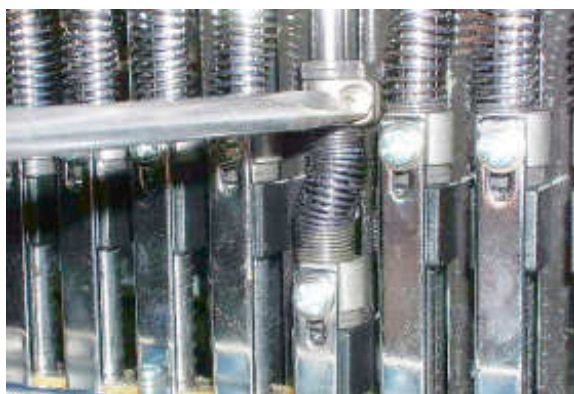

3. Take off "Needle bar boss".



At this time, remove pressure foot spring (lower), pressure foot block, cushion, pressure foot boss and needle bar boss.


4. Set good parts to needle bar.

At this time, if insert extra needle bar from under, you can work more easily.

< Note > Care to insert direction for "Pressure foot" and "Pressure foot boss".

Pressure foot block

Check shape of direction.

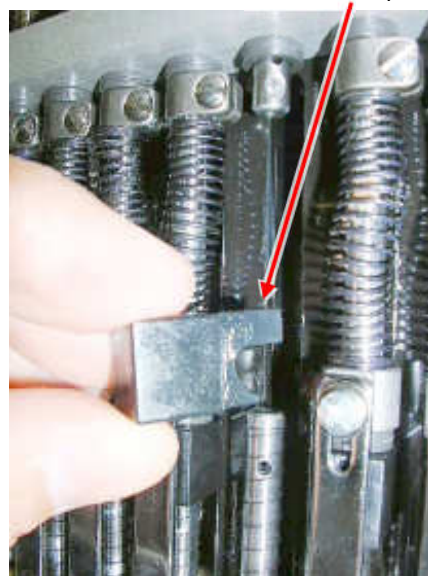

Pressure foot boss

Should hole to under side



5. Fix needle bar spring.

Finally, push upper needle bar and string all parts then pull out lower extra needle bar.



Slide needle bar to lower.



6. Fix pressure foot.



7. Fix needle, needle holder and cushion.



8. Adjust needle height.

Please refer to [4-2-6 Adjustment of needle height].

9. Adjust pressure foot height.

Please refer to [4-1-4 Adjustment of height of pressure foot].

10. Put removed parts back to finish.

4-2-10 Fixing of needle bar boss check plate

1. Remove moving head.

Please refer to [4-2-1, 4-2-2 Assemble and remove moving head].



2. Exchange of needle bar boss check plate.

3. Temporarily, use the pan head screw to center the needle bar boss check plate then fix the screw



4. Fix positioning needle bar boss check plate.



5. Put moving head and other removed parts back to finish.


4-2-11 Exchange of take-up lever

1. Remove moving head.

Please refer to [4-2-1, 4-2-2 Assemble and remove moving Head].



2. Loosen screw on take-up lever shaft. (Fixing screw 2 pcs)

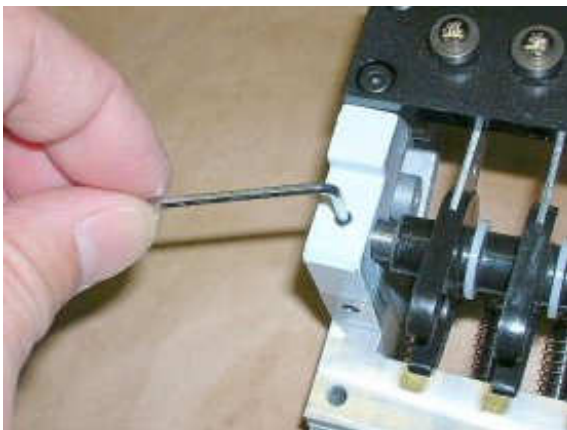


3. Remove the E-ring.




4. Please do not miss "Plastic thrust washer" between E-ring and Take up lever.


Remove plastic thrust washer. (1 pcs)

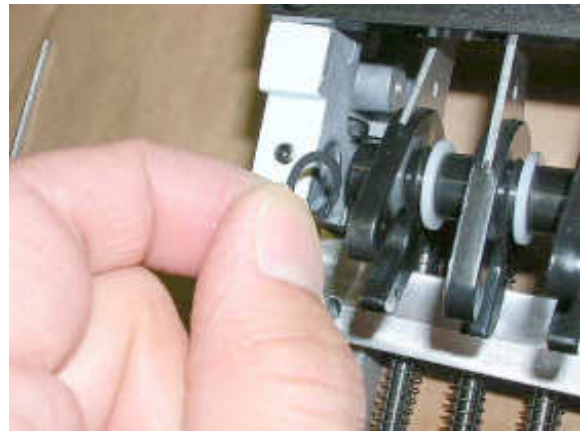

5. Remove the take up lever shaft first then remove the take-up lever.

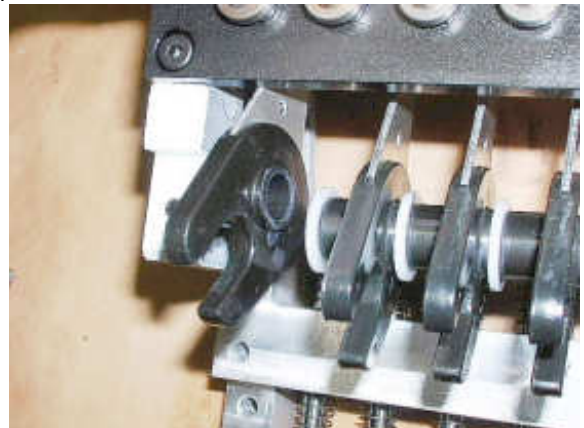


6. Remove plastic washer.

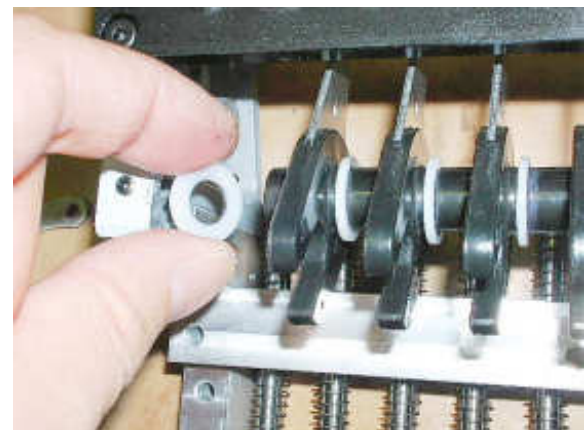

4-2-11 Exchange of take-up lever

7. Install good take-up lever assembly with plastic thrust washer, plastic washer, E-ring.

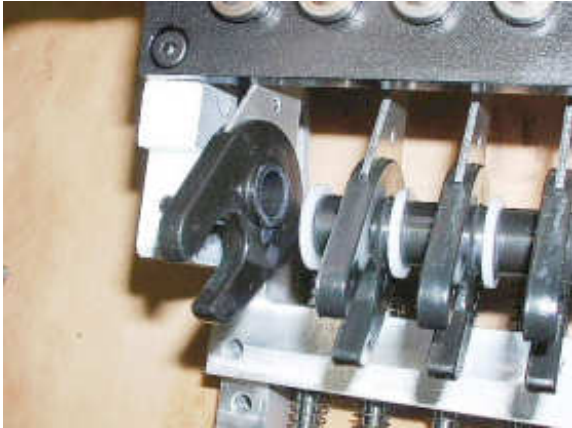

8. Leave space of [0.2mm] between take-up lever and moving head .

Tight screw for "Take up lever shaft"



9. Put moving head in previous position to finish.

4-2-12 Adjustment of tension of thread adjusting spring


1. Remove thread adjusting unit ass'y. (Fixing screw 4 pcs)



2. Block has spring groove to be able to adjust in three steps.

Put tip of spring in upper groove.

Strongest tension will be obtained in upper groove.

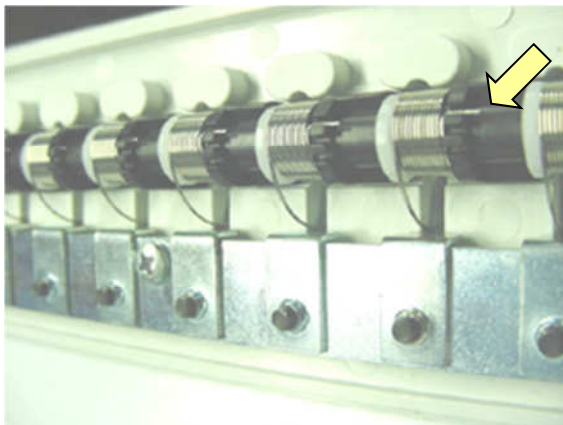

3. Fix thread adjusting unit ass'y to finish.

4-2-13 Adjustment of stroke of thread adjusting spring


1. Loosen screw on adjuster.



2. Move adjuster lower position with small flat-head driver.

When you move adjuster upward, stroke will get small.

When you move it down, stroke will get large.

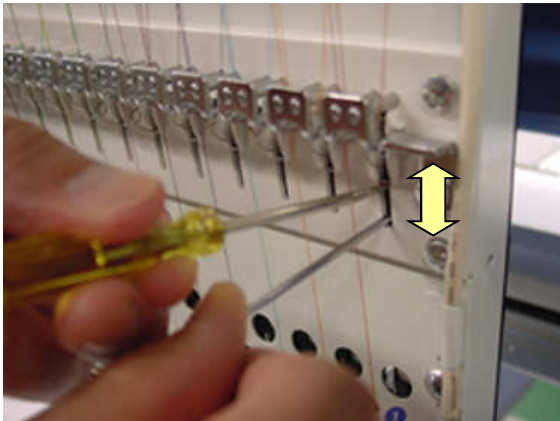


* The lower position is default setting.

3. After adjustment, tighten screw to finish.

4-2-14 Adjustment of thread holder

1. Loosen screw to the extent that thread holder moves.

(Fixing screw 4 pcs)

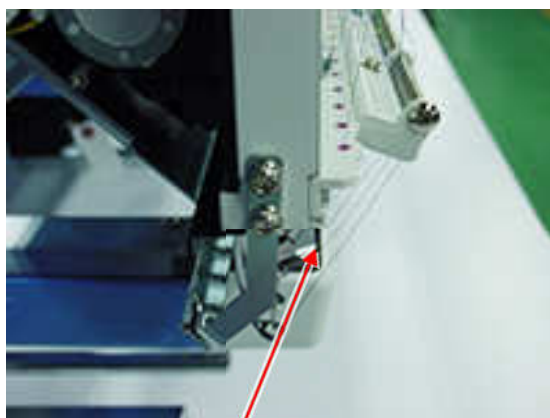

Screw

2. Please put out and withdraw thread catcher by your finger and fix holder position at smoothly moving position.


<Note> Please check smoothly moving at 1st and 15th needle.



Positional relationship between pressure foot and holder


(lower)

When downing the needle, should have gap more than 1 mm between holder and presser foot.

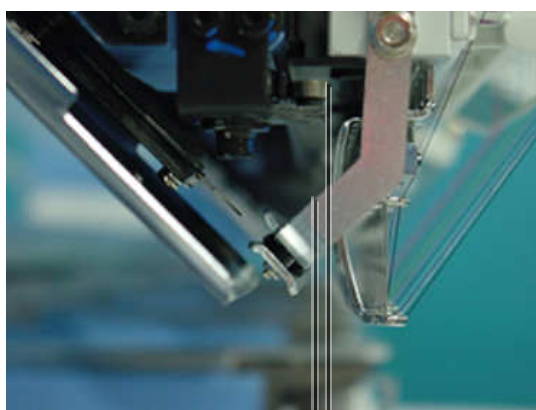

Gap

3. Thread catcher device should be adjusted if above clearance is not keepable.

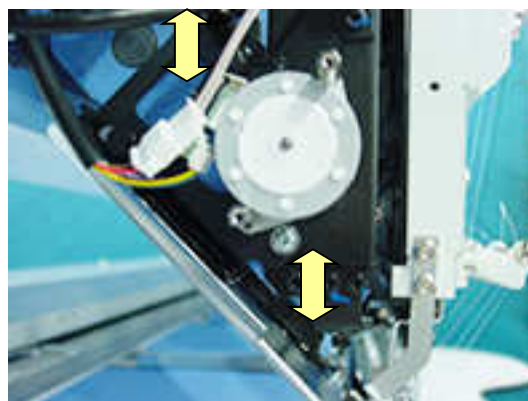

4. Press thread trim key and confirm whole thread trim revolution.

4-2-15 Adjustment of clip-type thread holder

1. Loosen screw to the extent that clip-type thread holder moves. (Fixing screw 4 pcs)



Screw

2. Please put out and withdraw thread catcher by your finger and fix holder position at smoothly moving position.

Hook has to touch surface of clip holder (lower).

< Note > Please check smooth moving at 1st and 15th needle.




Positional relationship between pressure foot and holder


(lower)

When downing the needle, should have gap more than 1 mm between holder and presser foot.

When is hook pull out, space between hook and bottom of pressure foot should be more than 1mm.

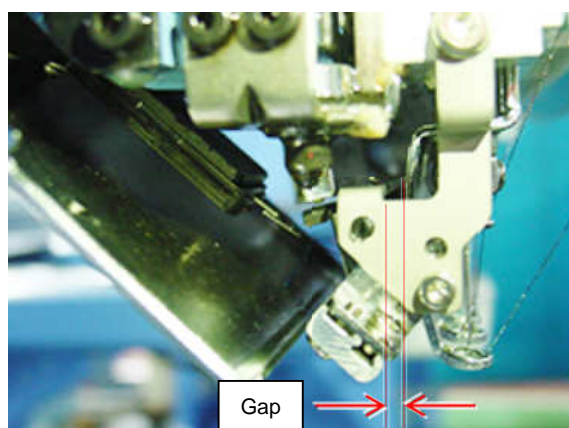


3. Thread catcher device should be adjusted if above clearance is not keepable.

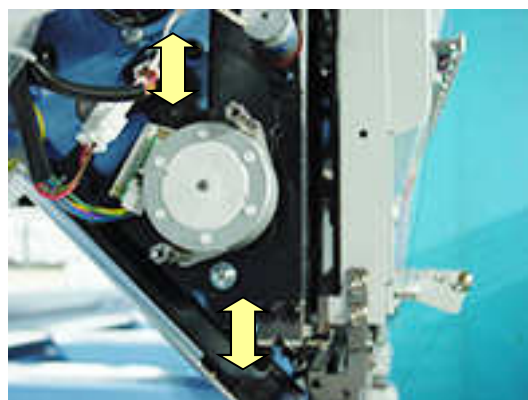

4. Space between Clip drive and clip should be 1-2mm.

< Note > Please check at 1st and 15th needle.

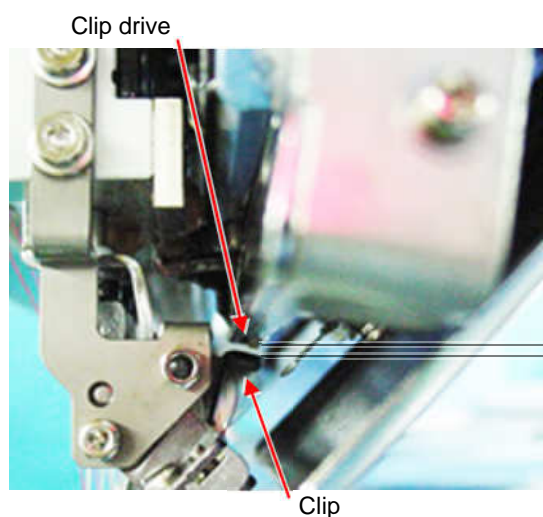


5. Press thread trim key and confirm whole thread trim revolution.


4-2-16 Adjustment of clip drive unit

1. Move moving head to the position that 1st needle is active.


2. Temporary fix Clip drive unit.

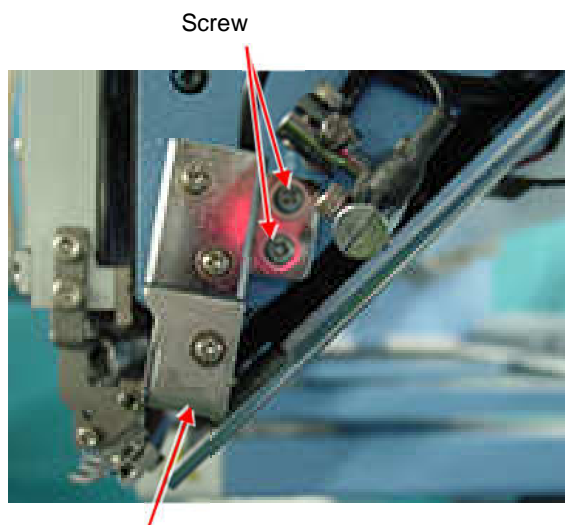

3. Connect cables and bundle by wiring clamp.

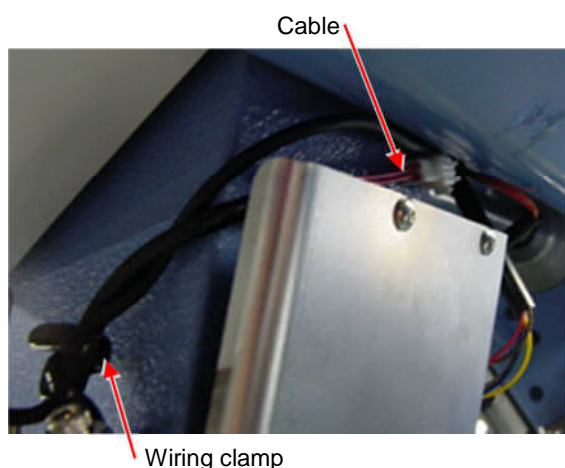

4. Space between Clip drive and Clip should be 1-2mm and push point of Clip Drive should be center of clip(right and left). Fix Clip drive unit at the position that unit is not touching to holder.

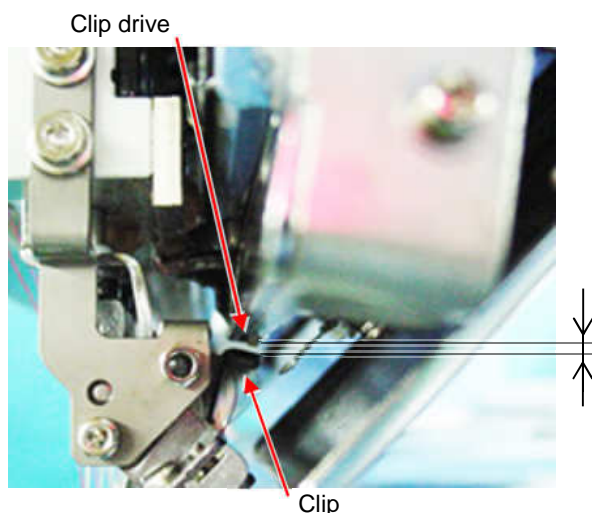


5. Turn power switch ON, and move moving head to 15th needle. Please confirm space between Clip drive and clip is same as space at 1st needle.


6. If case above space at 1st needle and at 15th needle is not same, position of clip holder may be incorrect. Please check position of Clip holder and Clip drive unit.

7. Refer to [E5-1 How to enter maintenance mode] and enter maintenance mode.

8. Press **Machine Test**.

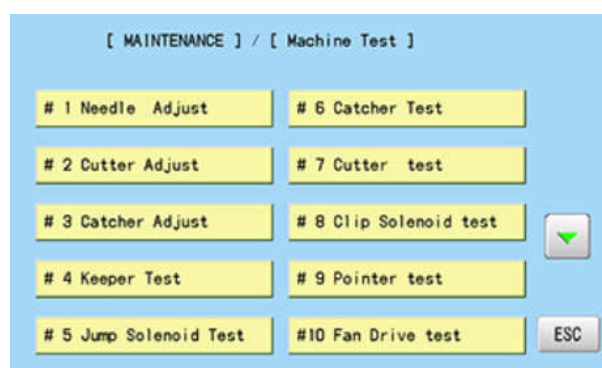


9. Press **#8 Clip Solenoid Test**.

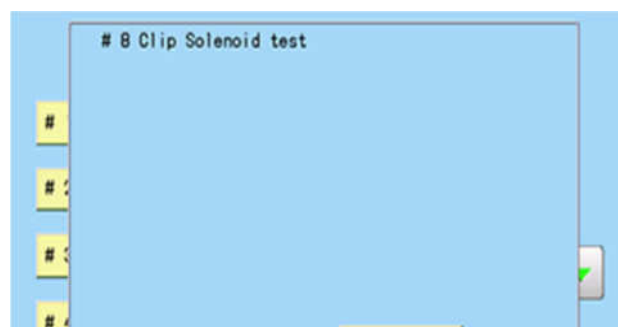

Please confirm that clip opens more than 2mm.

< Note > Please check at 1st and 15th needle

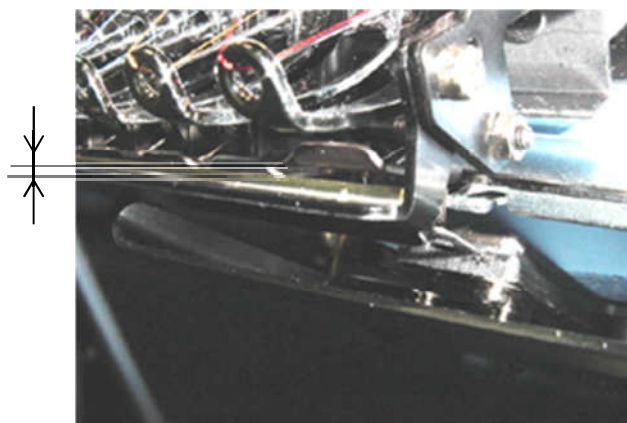

10. Press thread trim key and confirm whole thread trim revolution


4-3-1 Check / Adjustment of needle bar change unit

1. Remove cover for needle bar change unit.




Cover

2. Turn the knob to flat position of the cam and push moving head right and left side for confirm should not have a play the Cam.

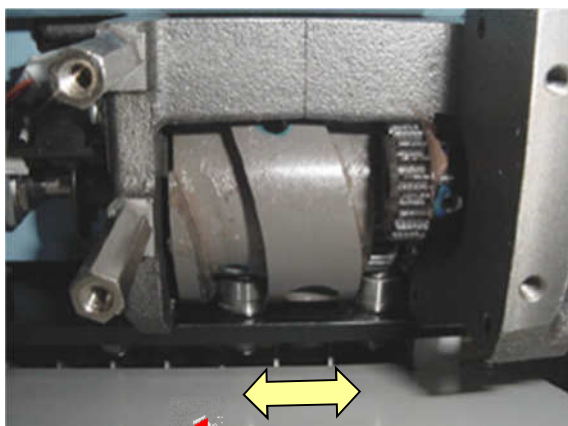

Moving head

2-1. If you had feel a play the cam, please loose the set screw on cam.

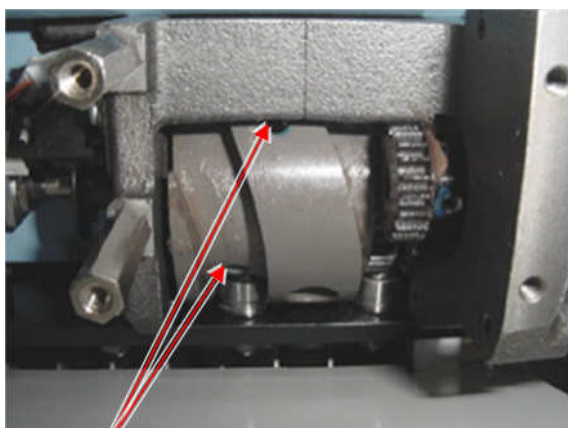


Set screw


Both hole has 2 pcs of set screw.

Inner set screw is "Cup Point" type and outer set screw is "Flat Point" type.

2-2. Push the Cam to **right** and push drive shaft to **left** side and tight Cam screws.

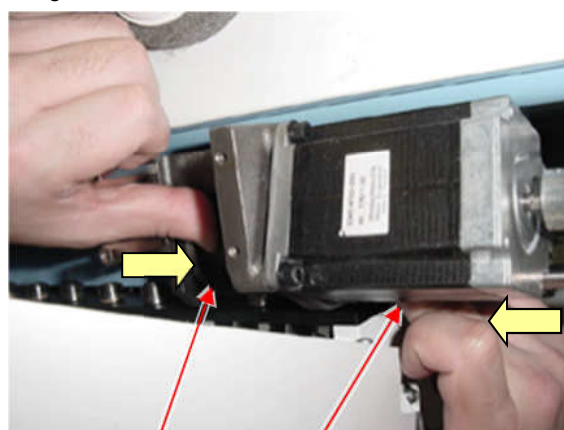

Cam Drive shaft

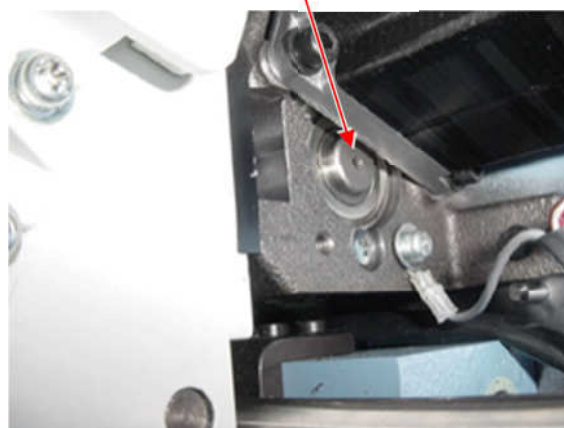


2-3. Check the cam should not have play.

After this adjustment, please check and adjust the needle position.

Please refer to [4-2-4 Adjustment of needle position (left and right)].


3. Turn the knob and stop at needle stopping point and confirm Sensor and slit position reference following image.

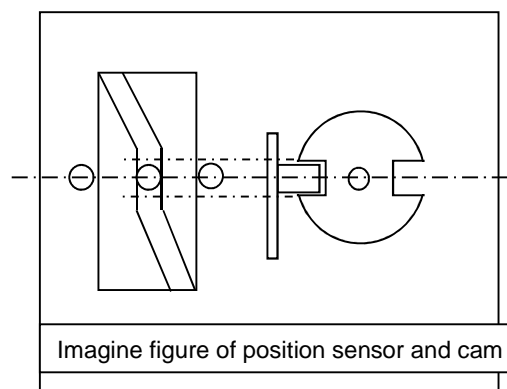

4-3-1 Check / Adjustment of needle bar change unit

3-1. For adjustment the sensor and slit position, please loose a screw on the slit.


< Note > Please do NOT loose LEFT side screw.

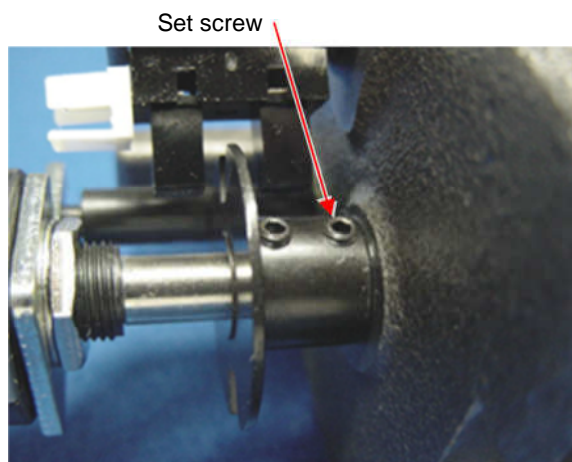

3-2. Please adjust slit position to center of slit gap against sensor when needle selection cam is middle position on flat. Then tight screw of slit.




3-3. Turn the knob and confirm position of sensor and slit. When needle selection cam is position on flat, angle of slit against sensor should be even like below drawing.

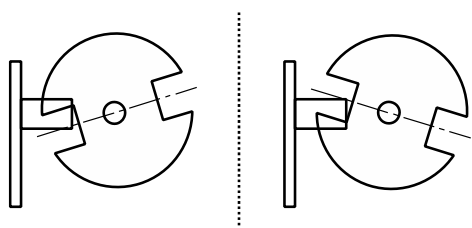

4. Turn the knob and move moving head to 15th needle.

5. Enter maintenance mode, referring to [E5-1 How to enter maintenance mode]

6. Press **Machine Test**.

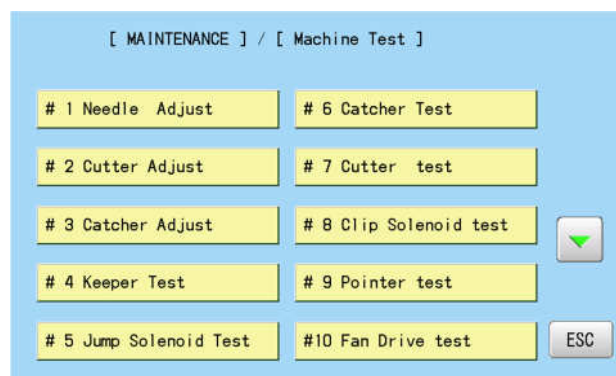


7. Press **#1 Needle Adjust** and press **Position**.

Should showing [Needle Number 15*] and has beep sound.



7-1. If your machine showing different (wrong needle number or non * mark) message, potentiometer position is not correct. Please loose left side screw of slit.

< Note > Please do NOT loose right side screw.

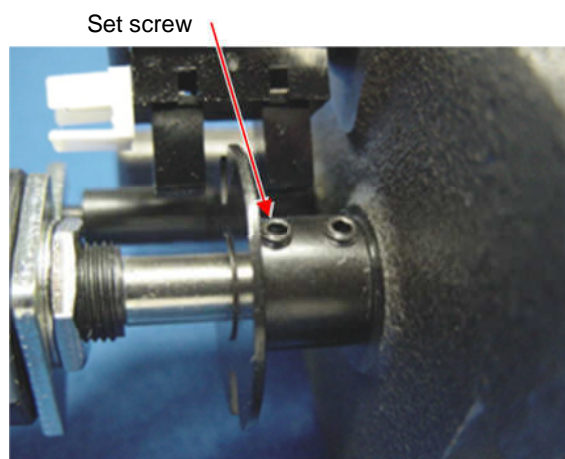

4-3-1 Check / Adjustment of needle bar change unit

7-2. Turn shaft of Potentiometer and tight screw at middle position on showing [*] mark.



7-3. Move Moving head to 1st head and press **Position**.


Confirm indication to [Needle Number 1*].

7-3. Move Moving head to 1st head and press **Position**.

7-4. Press **BACK** to complete settings.

8. Please check needle position to needle plate and back on cover.

< Note > Positioning image for needle selection Cam, Slit, Sensor.

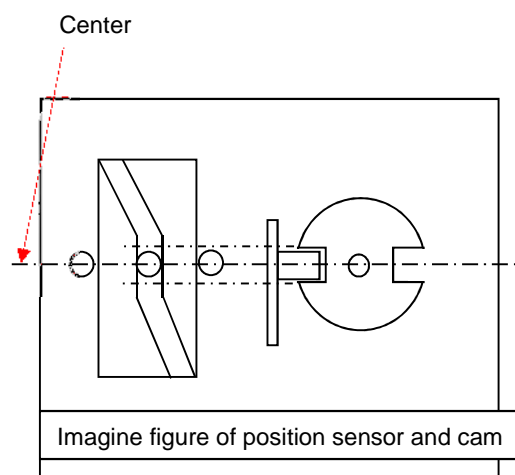


4-4-1 Adjustment of rotary hook timing

1. Move moving head to the position which 8th needle is active.


Remove bobbin case and needle plate.

(Fixing screw 2 pcs)

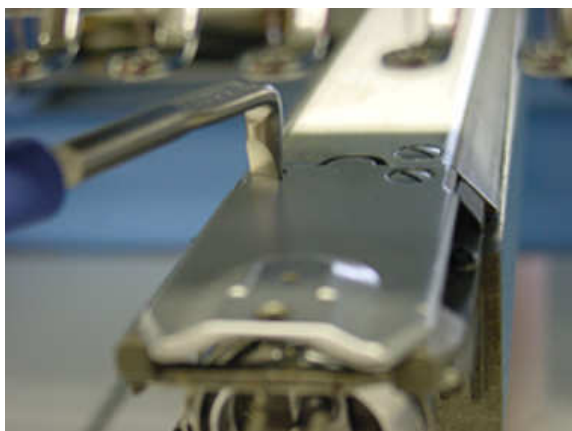

2. Loosen screw on rotary hook. (3 places)

<Note> Please do not loose screws too much.

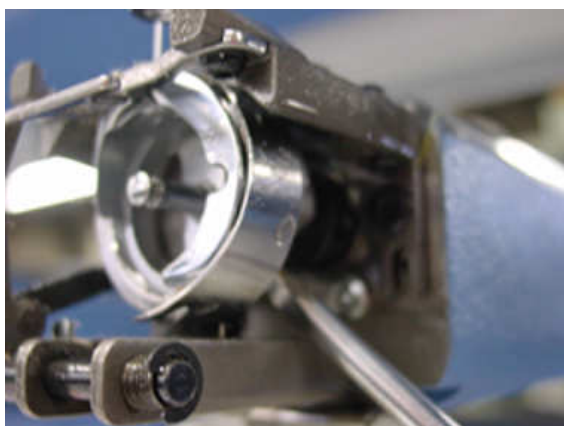

3. Bring needle down up to the needle lowest position.

Refer to [5 User maintenance mode].


<Note> Please do not loose screws too much.




4. Turn upper shaft and set dial disc to [25 degrees].

< Note > Turn upper shaft anti-clockwise

Turn brake switch ON.


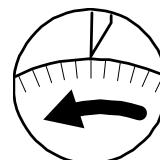


5. Set the position of needle and tip of hook as below.

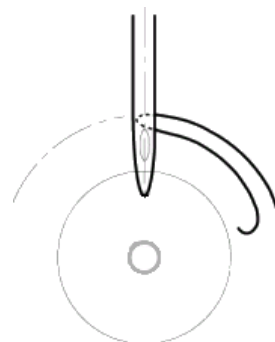


4-4-1 Adjustment of rotary hook timing

6. Clearance between needle and rotary hook should be [0.1 ~ 0.2mm]

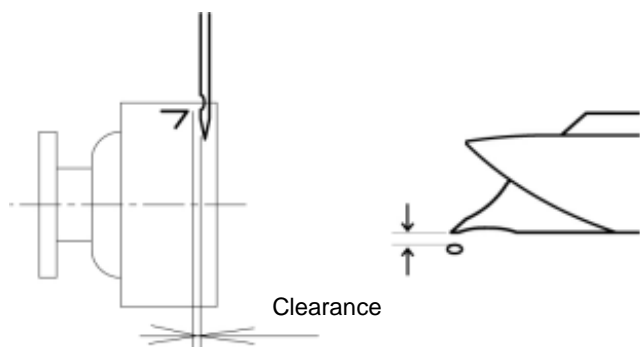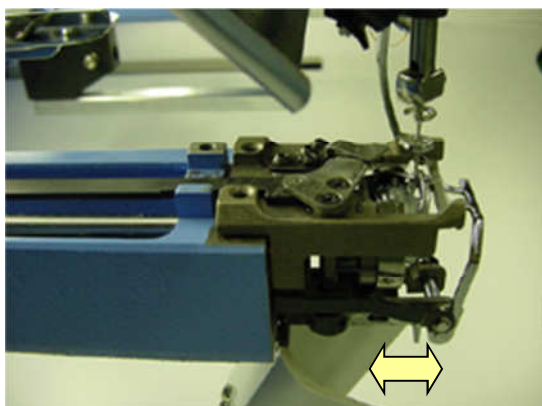

7. Check and adjust with 1st, 8th and 15th needle.

8. Tighten screws on rotary hook

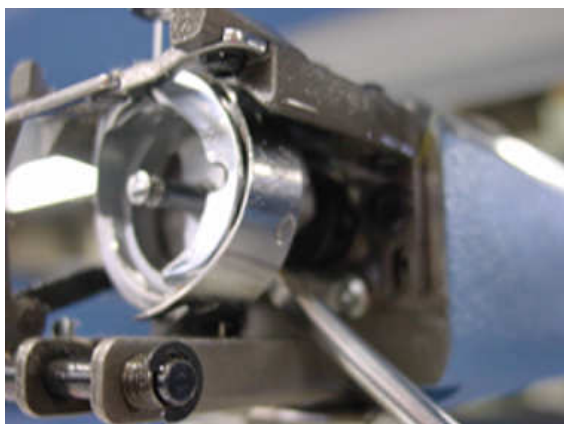


9. For making sure, check position of retainer on bobbin case holder.

Please refer to [4-4-2 Adjustment of retainer on rotary hook]



10. Set needle plate keeping needle position is center of needle hole on needle plate

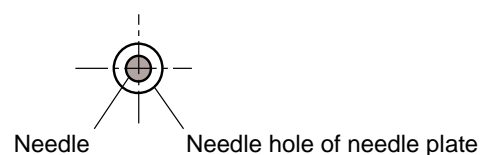

11. Adjustment has finished.

4-4-2 Adjustment of retainer on rotary hook


Loosen screw to the extent that retainer moves. (1 pcs)



2. Adjust position back and forth, left and right.

Using adjustment gauge and adjust space to be [0.8mm] for back and forth. (insert gauge between retainer and inner hook)


The position for right and left is center of the needle.

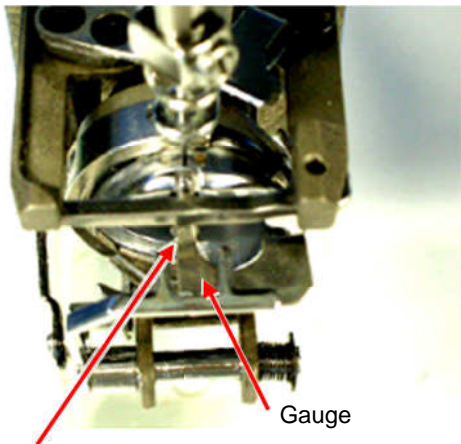

Center of needle and center of retainer to be adjusted



Gauge

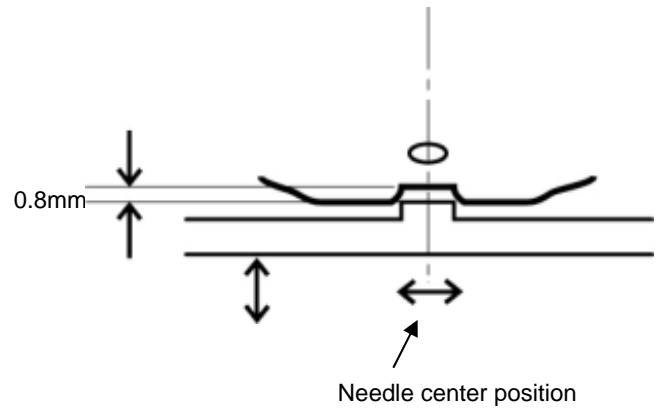

4. Adjustment has finished.

4-4-3 Exchange of rotary hook shaft

1. Take hook shaft out

1-1. Take hook retainer out.

(Hexagon socket button head screw : M3-5)

(Plain washer : M3)

1-2. Loosen screw and take hook out.



1-3. Loosen screw of collar.

(Hexagon socket set screw : M4-4 2 pcs)




Please loose screw enough, because shaft has flat face.

1-4. Take cover of bed.

(Screw for needle plate : 2 pcs)

1-5. Lossen screws (see below picture) total 4 pcs.

(Hexagon socket set screw : M4-4 4 pcs)

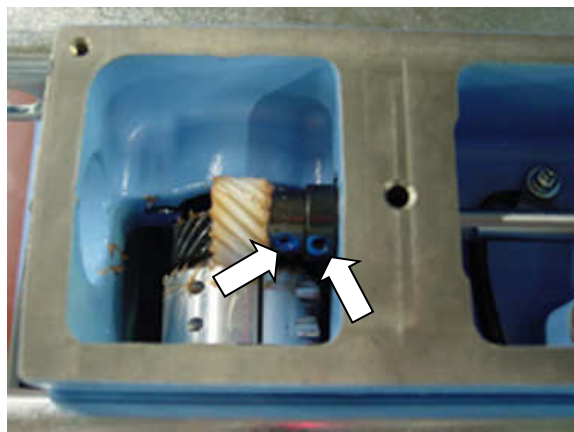

1-6. Take gear out.

1-7. Pull shaft out.



Take hook shaft out has finished.

4-4-3 Exchange of rotary hook shaft

2. Install new shaft.



The parts which has one flat face is for hook side.

2-1. Insert shaft and adjust position of flat face and screw position.



2-2. Shaft is 15mm out from collar.

Please fix screw


(Hexagon socket set screw : M4-4 2 pcs)



2-3. Put gear and fix.

Set screw position to flat face of shaft, and tighten screw.

(Hexagon socket set screw : M4-4 2 pcs)

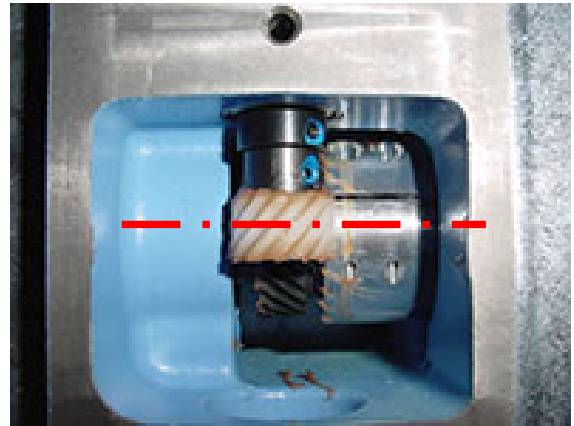

Center of gear should be center of shaft.

(please adjust position of gear)

2-4. Please put grease on gear.

<Grease> [Shell alvania EP Grease](#)



< Note > Put grease equally.

2-5. Put cover of bed.

(Screw for needle plate : 2 pcs)

4-4-3 Exchange of rotary hook shaft

3. Install hook

3-1. Temporary fix hook and hook retainer.

(Hexagon socket button head screw : M3-5)

(Plain washer : M3)



3-2. Adjust rotary hook timing.

Please refer to [4-4-1 Adjustment of rotary hook timing].

3-3. Adjust retainer on rotary hook.

Please refer to [4-4-2 Adjustment of retainer on rotary hook].

Exchange has finished.

4-5-1 Check of thread cutting driver

1. remove table support cover, cover for thread cutting driver.



Cover for thread cutting driver

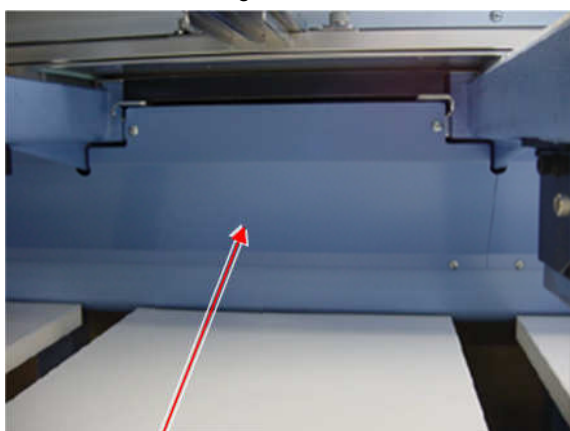


Table support cover


2. Keep Moving knife to closing.

Please refer to [5 User maintenance mode]




3. Check clearance between Driver base and Fasten block for guide [18 ~ 19mm].

Please confirm bulge right side point of "Slide shaft" position like following picture.

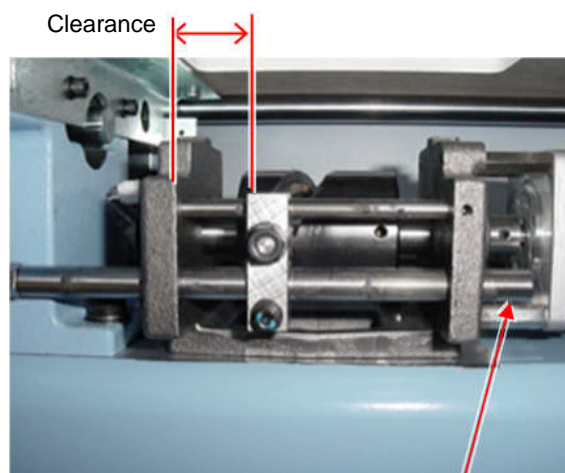

Slide shaft

4. Turn the Cam till stop end. And confirm a ditch of Cam has allowance.

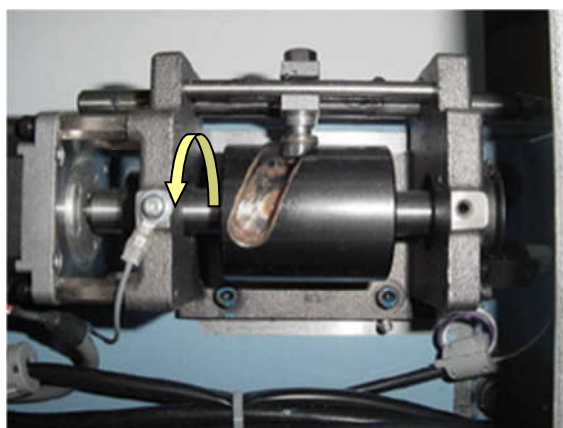

5. Keep Moving knife to opening.


Please refer to [5 User maintenance mode]



4-5-1 Check of thread cutting driver

6. Check clearance between "Driver base" and "Fasten block for guide" [40 ~ 41mm].

Please confirm bulge left side point of "Slide shaft" position like following picture.

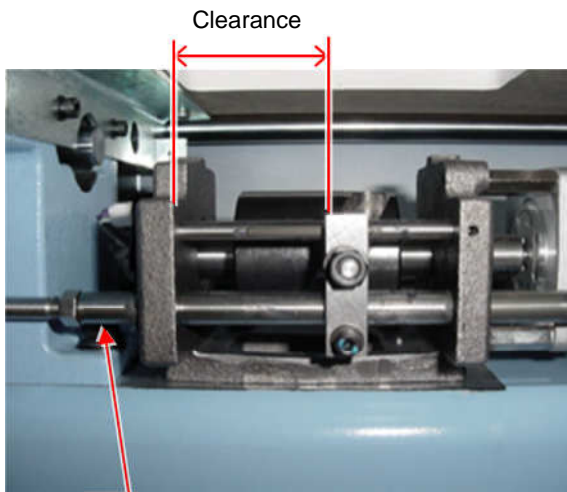

Slide shaft

- If you have some error in the step 3. ~ 6, please adjust [4-5-2 Adjustment of thread cutting driver].


7. Please keep Moving knife to closing.

Please refer to [5 User maintenance mode].

Return cover to previous places to finish.

4-5-2 Adjustment of thread cutting driver

1. Remove "Table support cover", and "Cover for thread cutting driver".

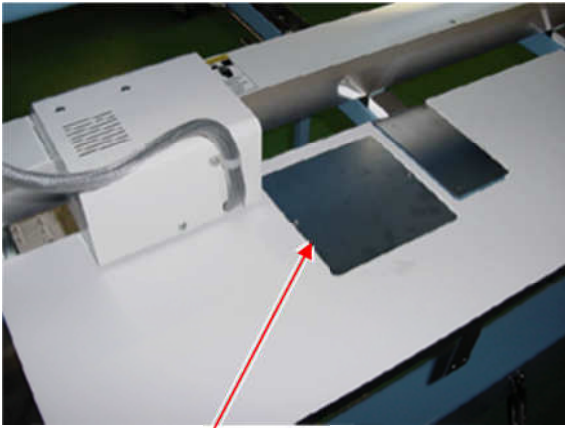

Cover for thread cutting driver



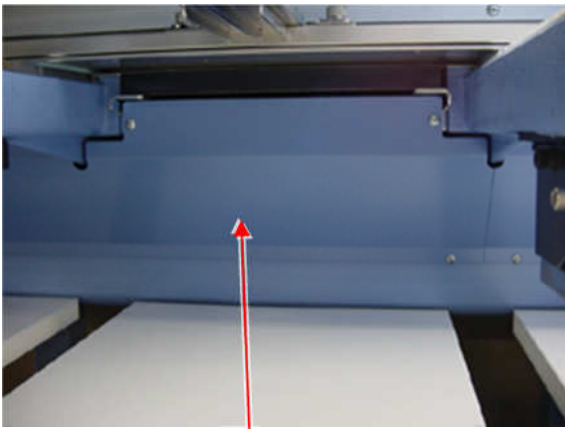


Table support cover

2. Turn the Thread cutting cam and move Fasten block guide to center area of the bracket.

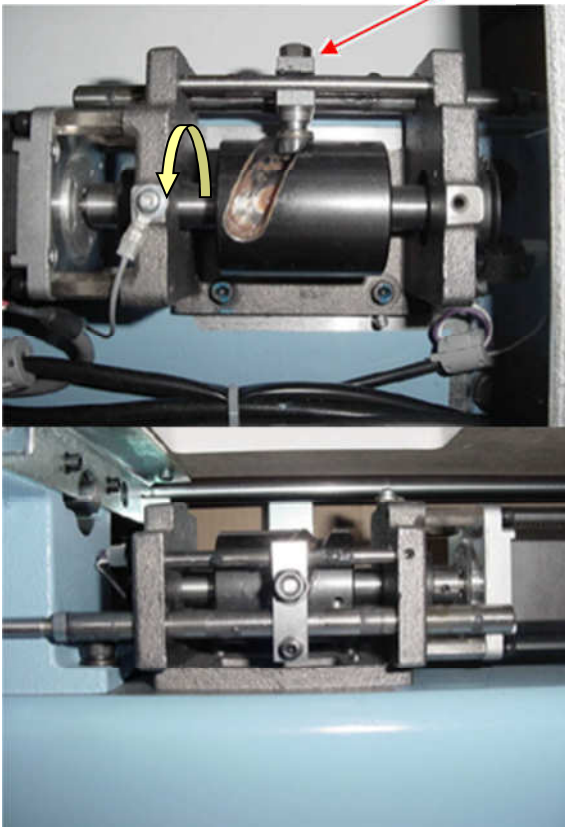

3. Loose Fasten screw and adjust slide shaft position to even protuberance against face of driver base and tight the screw.

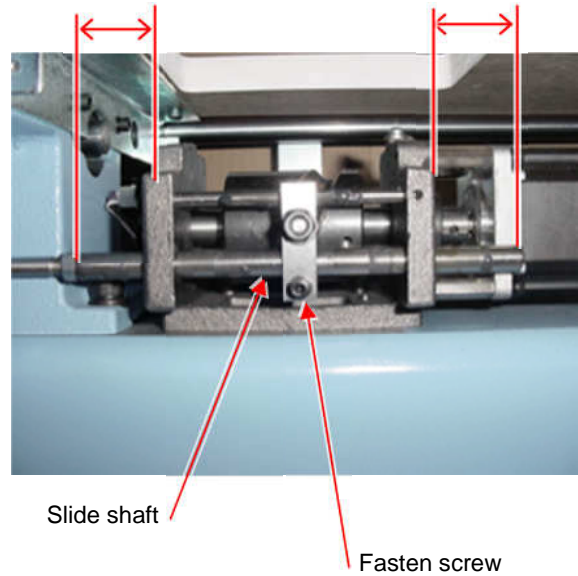


Slide shaft

Fasten screw

4. Turn the Thread cutting cam till end position.

(Please see picture below)

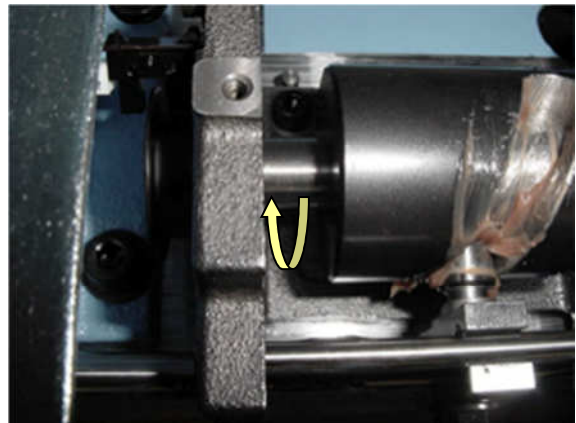


Please keep this position for next adjustment.

4-5-2 Adjustment of thread cutting driver

5. Adjust Slit right position against sensor.

If you off the position, please adjust sensor position by screw on sensor bracket.

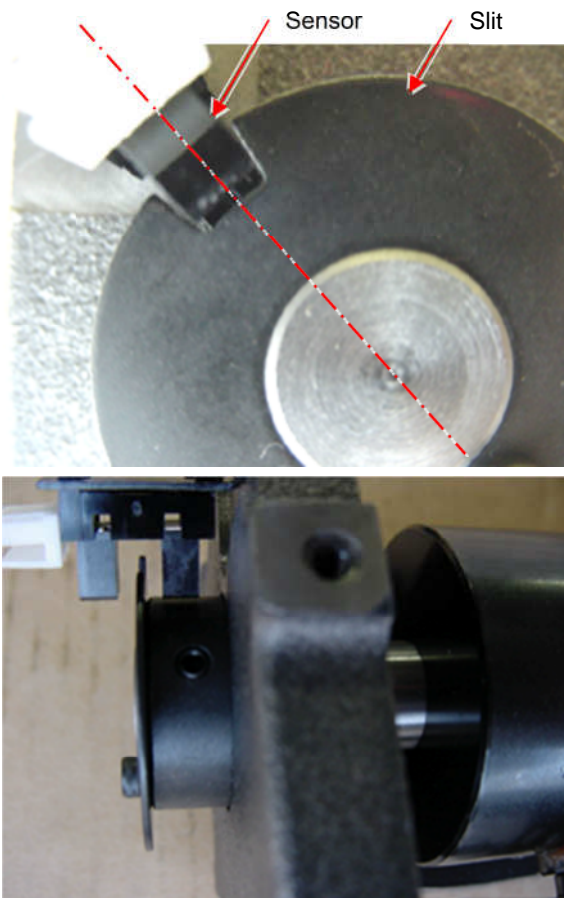

6. After it, please adjust [4-5-5 Check / Adjustment of position of moving knife].

7. Confirm Moving knife position to CLOSE.

Please refer to [5 User maintenance mode].

Back on covers to previous position.

4-5-3 Exchange of moving knife

1. Remove needle plate. (Fixing screw 2 pcs)




2. Open moving knife.

Please refer to [5 User maintenance mode].

3. Remove knife drive shaft retainer.



4. Pull out knife drive shaft ass'y.

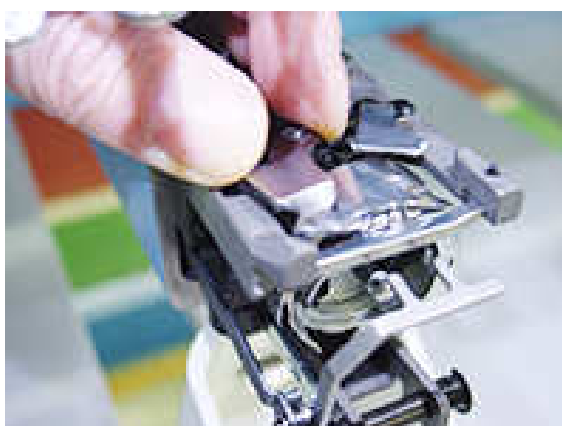

5. Exchange moving knife.



6. Setting drive link hole to moving knife, insert knife drive shaft assembly.



7. Pushing down moving knife and knife drive shaft retainer like putting them together, fix knife drive shaft retainer.

Fix so that there is no backlash in upward and downward direction.



8. Close moving knife.

Please refer to [5 User maintenance mode].

9. Referring to [4-5-6 Adjustment of moving knife and fixed knife], check how well thread is cut and adjust, then finish this process.

4-5-4 Exchange of fixed knife

1. Remove needle plate.




2. Remove fixed knife.



3. Exchange fixed knife.



4. Tighten fixed knife pushing to forward as full as possible.

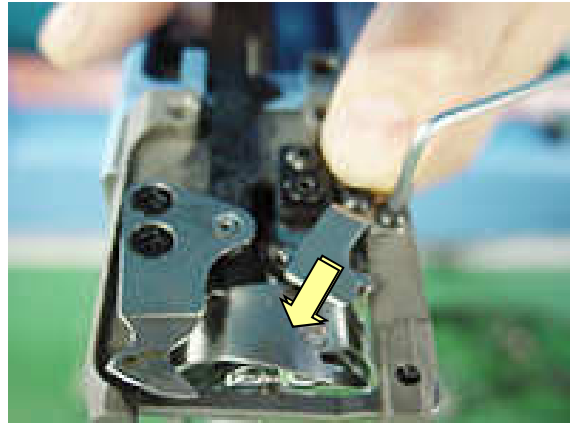


< Note > In case moving knife and the left side of fixed knife overlaps excessively when closing, adjust the position of fixed knife slightly to the right direction.

5. Referring to [4-5-6 Adjustment of moving knife and fixed knife], check how well thread is cut and adjust, then finish this process.

4-5-5 Check / Adjustment for position of moving knife


1. Remove the Needle plate

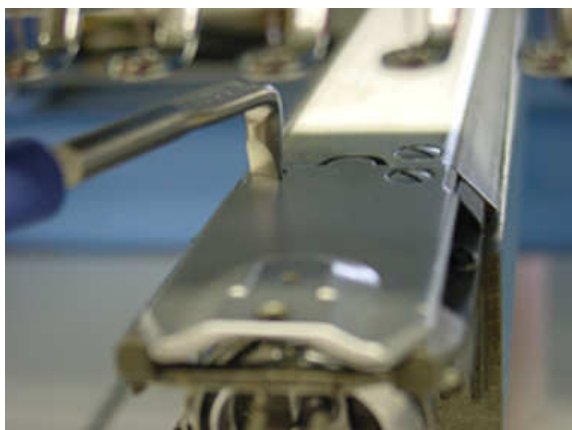

2. Please check knife closing position to following drawing.

(Point of moving knife same face with fixed knife cutting line)


Please refer to [5 User maintenance mode] for easy adjustment for this progress. You can open and close the knife manually.

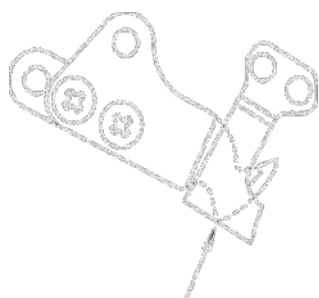

"Same face"

3. For this adjustment, remove Table support cover on front and go to next step.



4. Loosen screw on Thread cutting link and slide the link to right side for open the moving knife.

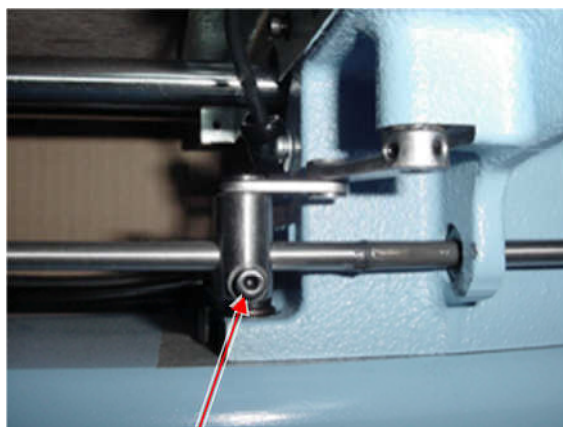

Screw



5. Slide the Thread cutting link to left side for close Moving knife and stop at right position of knife-closed point like bellow.

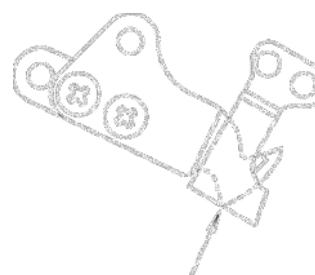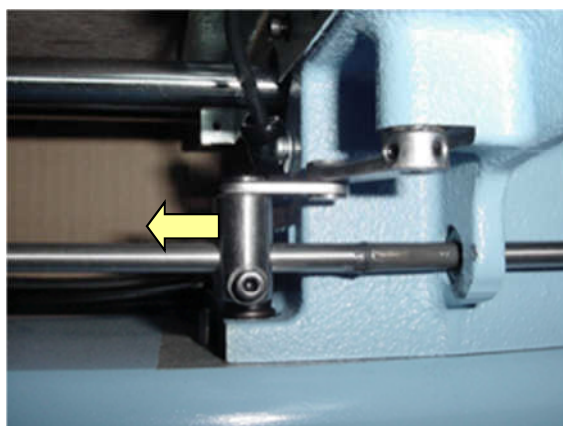


"Same face"

4-5-5 Check / Adjustment of position of moving knife

6. Keep the Thread cutting link position on "Step 5" and tight screw.

Please confirm play the Link plate.

If you have not playing the plate, possible moving knife not open correctly.

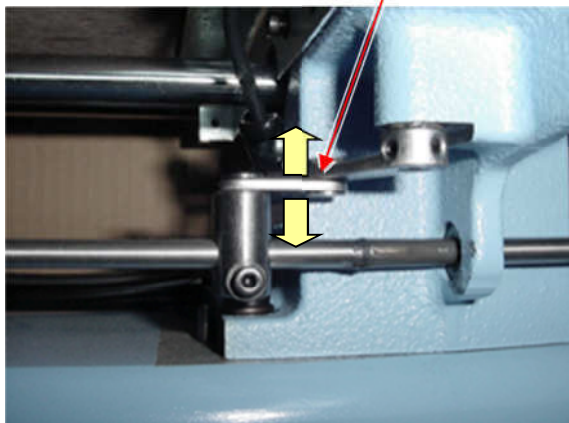


7. Check Moving knife closing point.



- If the closing position is not right, please back Set 5. and 6.

Please check opening point.

Should open the "Moving knife" to left till "point of Moving knife" overfrom "Rotary hook retainer".

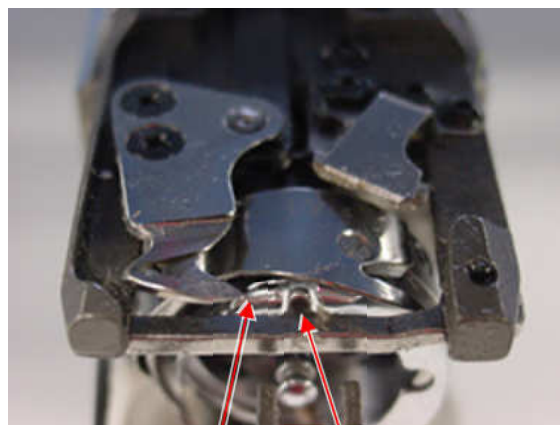

Point of Moving knife

Rotary hook retainer

- If the position is not right, please check "Thread cutting driver".

Referring to [4-5-1 Check of thread cutting driver].

8. After confirm, please back cover and needle plate.

4-5-6 Adjustment of moving knife and fixed knife

1. Remove needle plate



2. Check if knife drive shaft has no backlash in up and down direction.

If backlash is found, adjust it referring to [4-5-3 Exchange of moving knife].




3. Adjust slant of fixed knife with [upper adjustment screw] and [lower adjustment screw] that fix fixed knife.

< Note > Rub these screws together to the extent that you don't feel resistance.



4. Cut thread and check how well it is cut.

Use two polyester threads for checking.

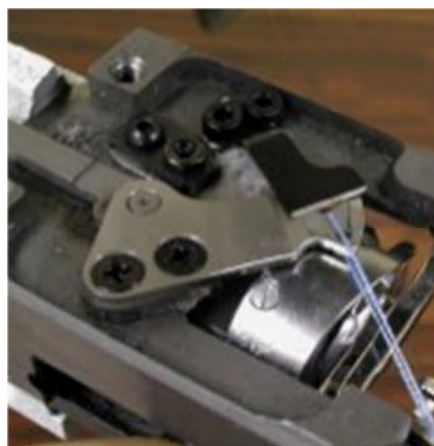

5. Check several times and if no mistakes are found, finish this process.

4-5-7 Adjustment of bobbin thread holder


1. Remove needle plate. (Fixing screw 2 pcs)



2. Close moving knife like putting bobbin thread between moving knife and bobbin thread holder.



3. Adjust height of bobbin thread holder with adjusting screw.

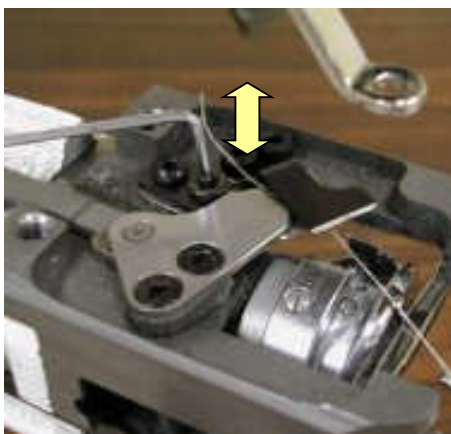

4. Pull bobbin thread toward arrow mark and see that bobbin thread comes off with tensile gauge [20 ~ 25g].




5. Tighten lock nut. (Don't move adjusting screw.)



6. Check several times and if OK, finish this process.


4-5-8 Adjustment of position of keeper

1. Remove needle plate and bed cover.

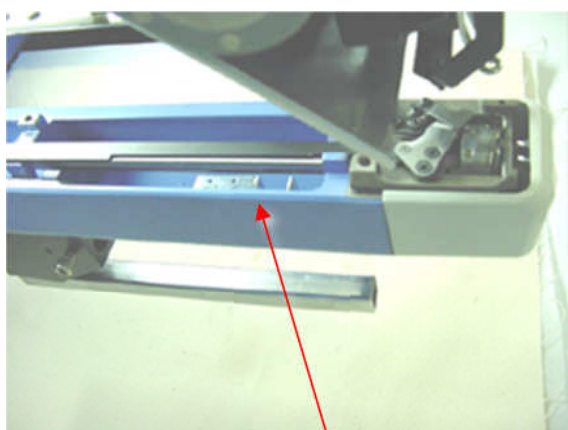


Solenoid base

2. Loosen screw on solenoid base. (Fixing screw 2 pcs)

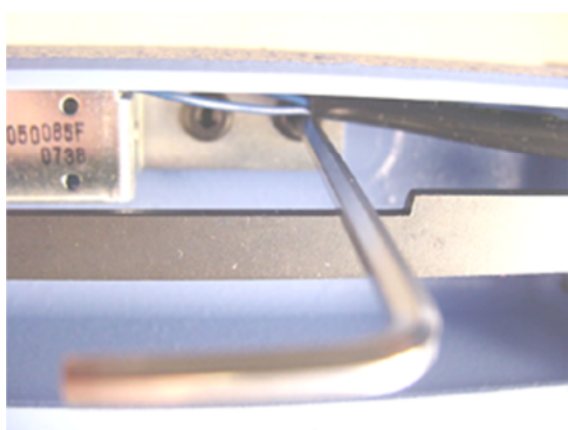

3. Loosen screw for stopper. (1 pcs)

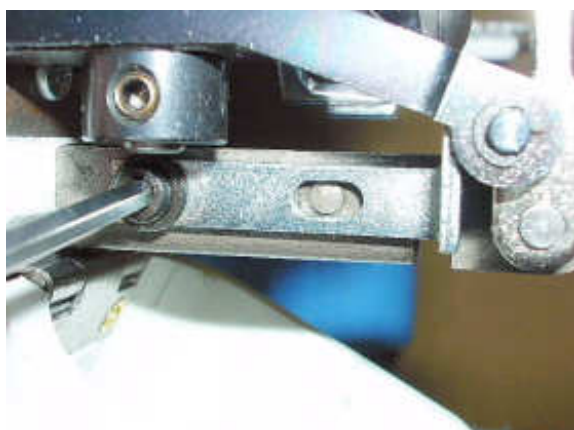


4. Insert keeper positioning gauge (Bobbin) into rotary hook.




5. Refer to [E5-1 How to enter maintenance mode] and enter maintenance mode.

6. Press **Machine Test**.

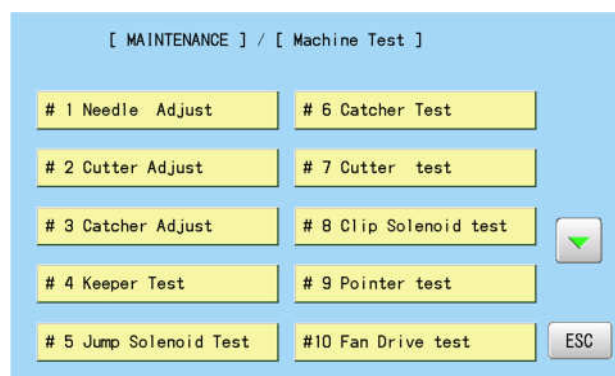



4-5-8 Adjustment of position of keeper

7. Press #4 Keeper Test.

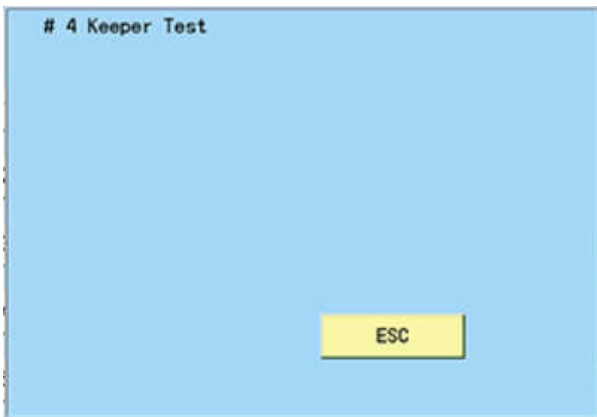


Adjust solenoid base where tip of keeper contacts slightly to the gauge then tighten bracket screw.

Clearance between bobbin and keeper is [about 1.0mm].

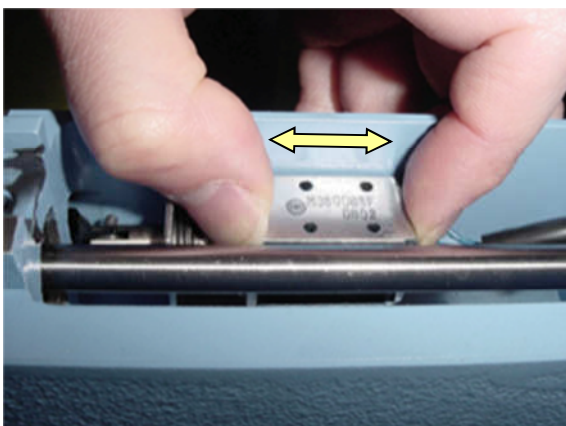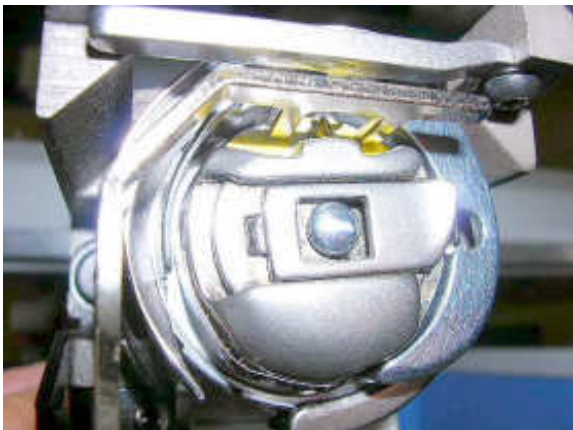


< View from right >

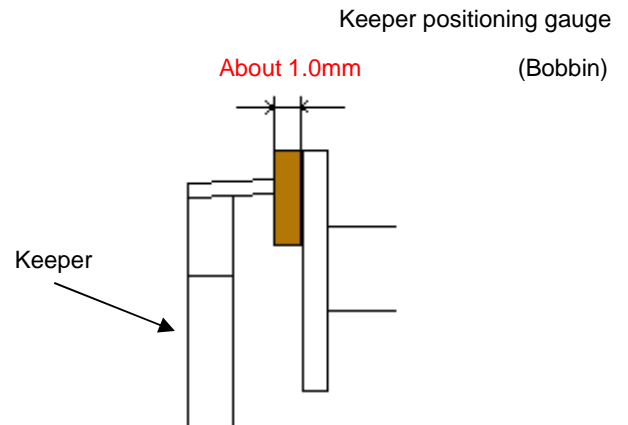

8. Adjust position of stopper.


This is the position where tip of keeper contacts to gauge.

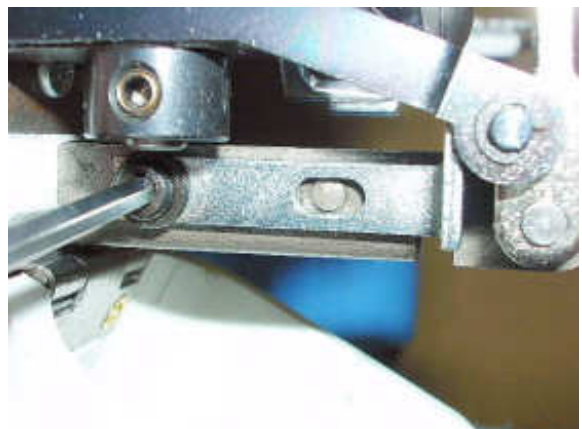

9. Adjustment has finished.

4-6-1 Adjustment of X carriage drive belt tension (S.No. ~1096009)


1. Remove base cover and drive unit cover.

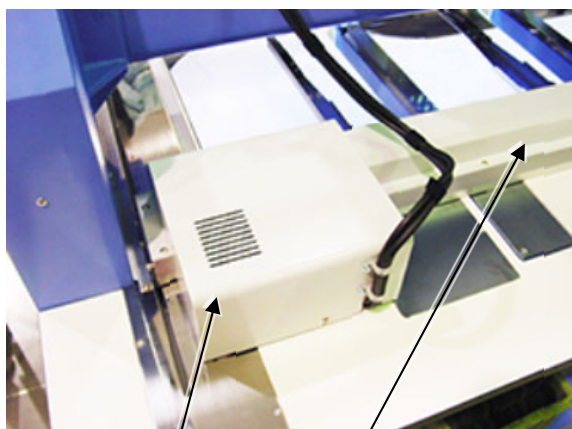

Drive unit cover Base cover


2. Loosen the adjusting lock nut.

<Spanner> 7mm

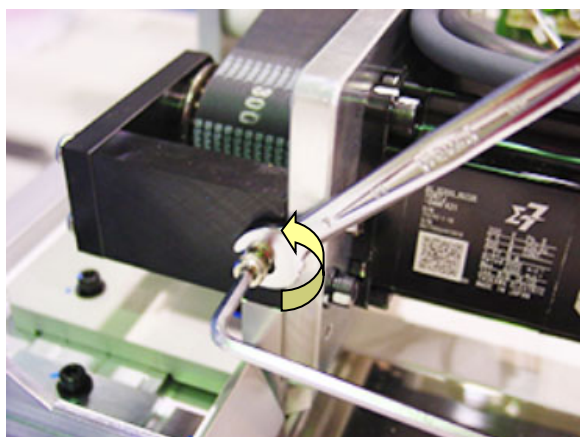


3. Loosen screw of Pulse motor bracket half turn

(3 pcs)

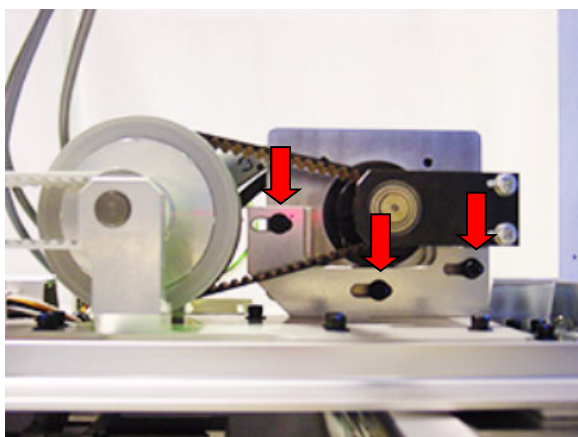


4. Set tension adjustment screw position 8.5mm from face of bracket of shaft support.

Tighten screw by 1/4 turn.

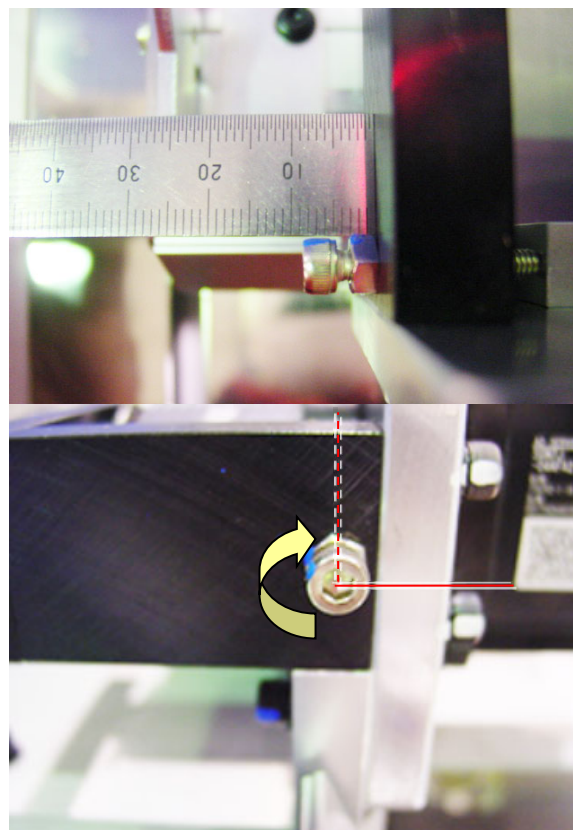

5. Tighten screw for the pulse motor bracket.

6. Tighten the adjusting lock nut.

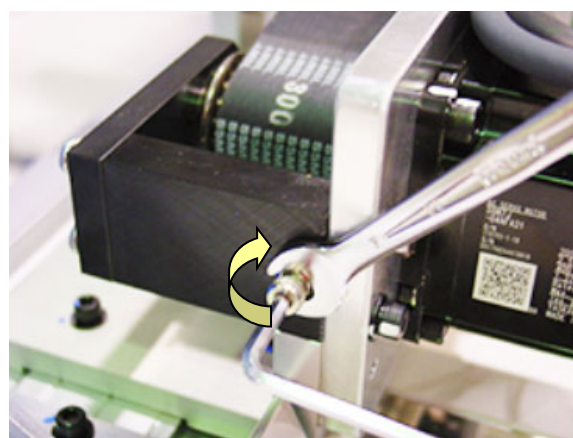


4-6-1 Adjustment of X carriage drive belt tension (S.No. ~1096009)

7. Return base cover and drive unit cover to previous places.

8. Please refer to [E5-6 Position- Registration of coordinates for positioning sensor], register embroidery area and finish this adjustment.

4-6-1a Adjustment of X carriage drive belt tension (S.No. 1096010~)


1. Remove base cover and drive unit cover.

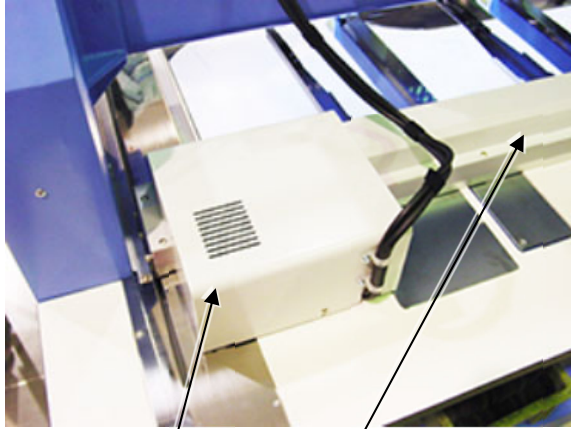

Drive unit cover Base cover

2. Loosen the adjusting lock nut.


<Spanner> 7mm

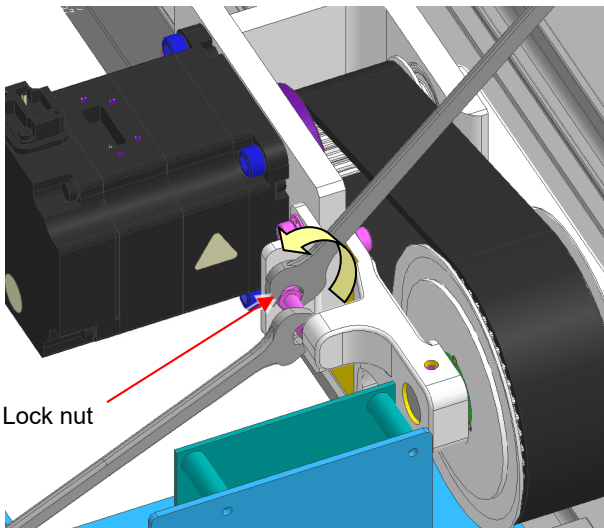

Lock nut

3. Loosen screw of Pulse motor bracket half turn


(3 pcs)

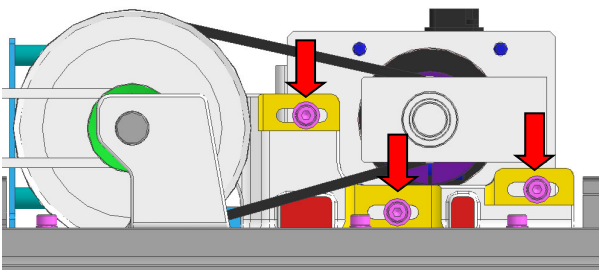


4. Put ruler on belt, push belt at center of belt by push gauge with 500gf.

Please adjust tension of belt by tension adjusting screw moves 1mm.

< Note > Push gauge should touch belt with 90 degrees.

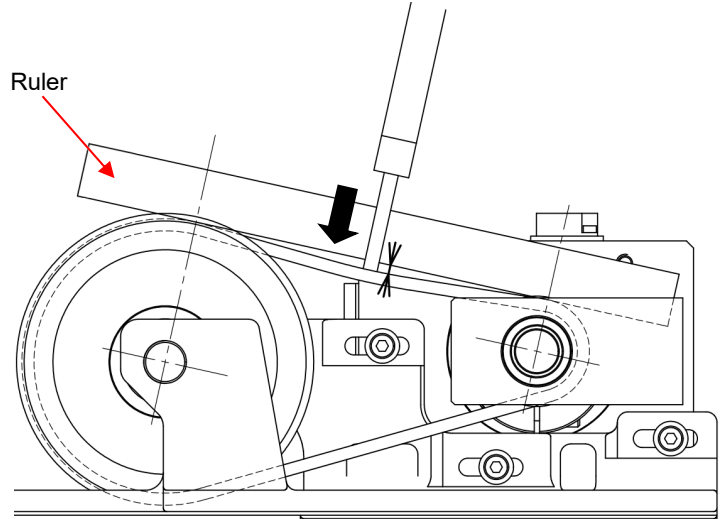


Ruler

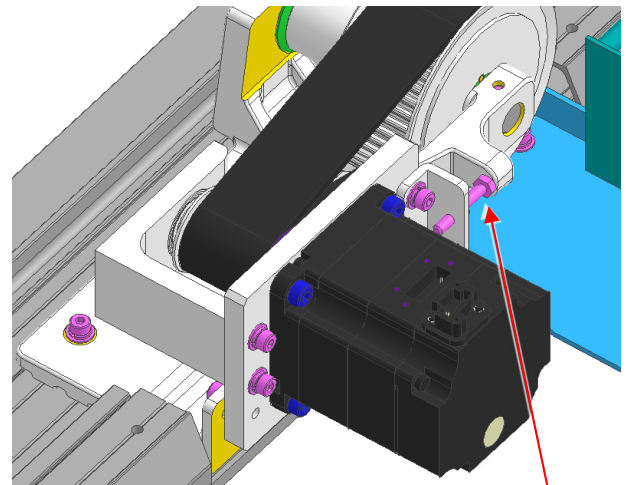

Tension adjusting screw

5. Tighten screw for the pulse motor bracket.

6. Tighten the adjusting lock nut.

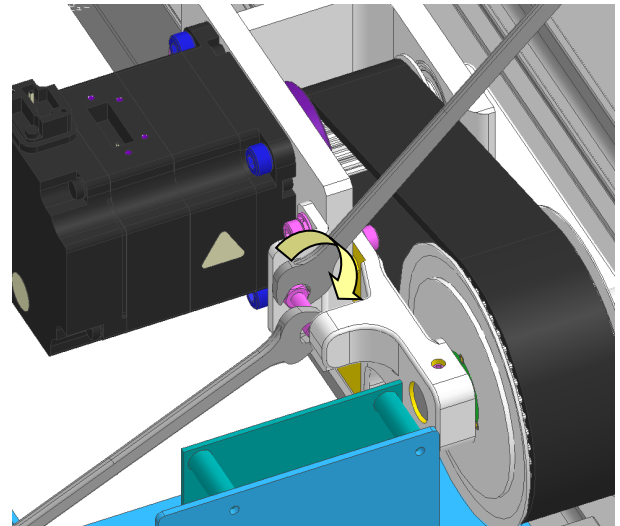


4-6-1a Adjustment of X carriage drive belt tension (S.No. 1096010~)

7. Return base cover and drive unit cover to previous places.

8. Please refer to [E5-6 Position- Registration of coordinates for positioning sensor], register embroidery area and finish this adjustment.

4-6-2 Adjustment of X carriage timing belt tension


1. Take drive unit cover and X carriage base cover out.

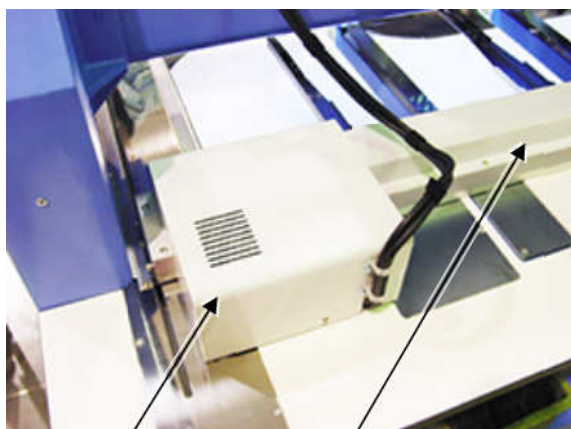

Drive unit cover X carriage base cover

2. Loosen lock nut for tension adjusting nut.

<Spanner> 7mm

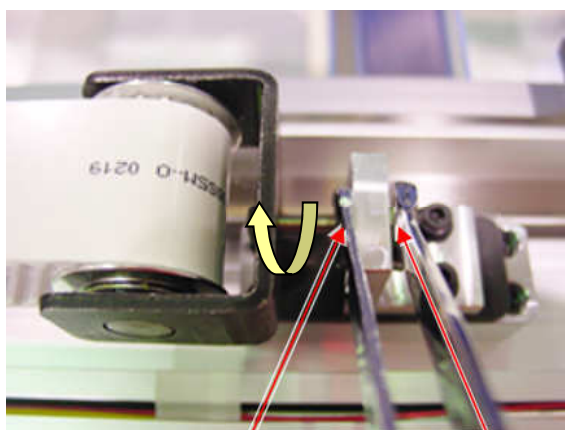


Lock nut

Adjusting nut



3. Loosen screws of tension plate half turn.

(2 screws)

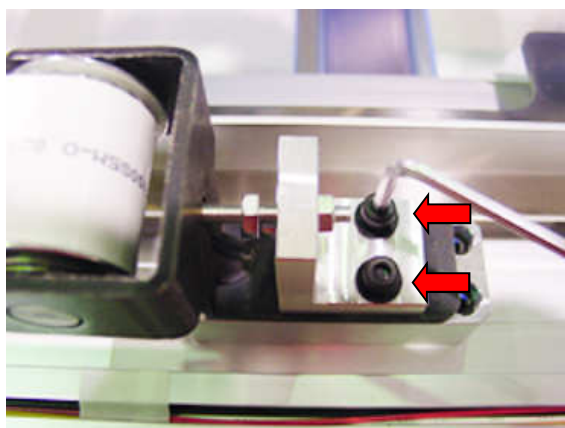


4. Push belt at center of belt by push gauge with 500gf.

Please adjust tension of belt by adjusting nut that belt moves 3-4mm.

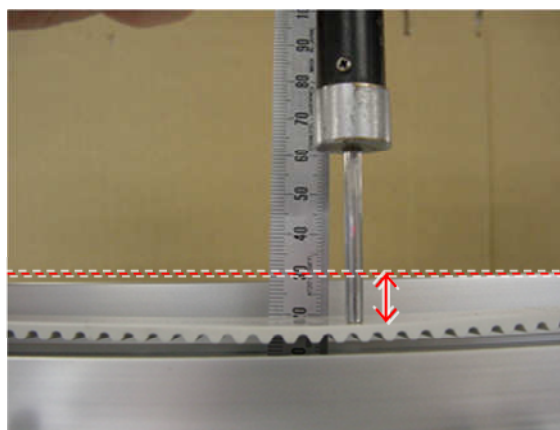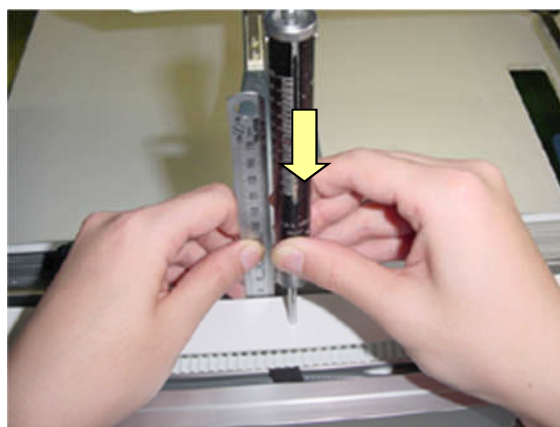

5. Tighten the screws of tension plate.

6. Tighten the lock nut for tension adjusting nut.

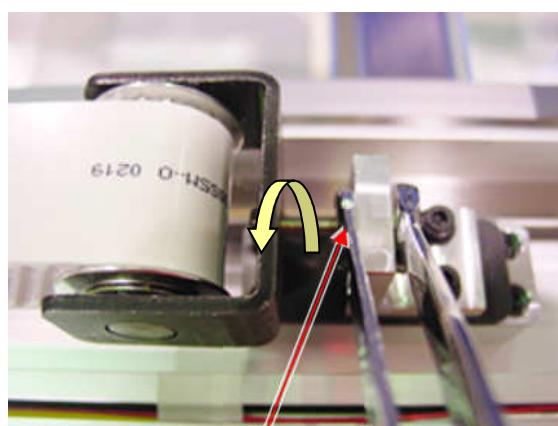

Lock Nut

4-6-2 Adjustment of X carriage timing belt tension

7. Return base cover and drive unit cover to previous places.

8. Please refer to [E5-6 Position- Registration of coordinates for positioning sensor], register embroidery area and finish this adjustment.

4-6-3 Adjustment of Y carriage drive belt tension

1. Take table rear, middle cover and rear cover out.

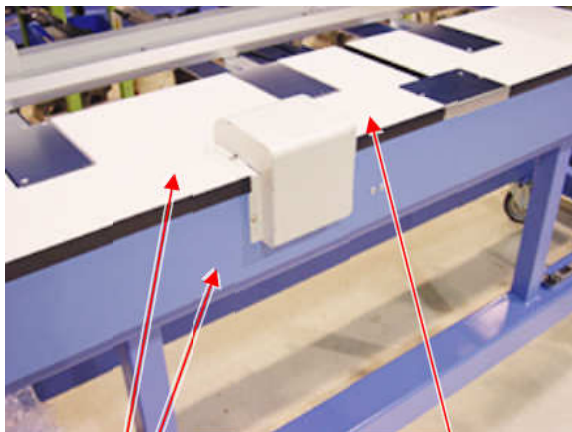


Table rear
Rear cover
Middle cover

2. Take out table support cover located front of middle cover.


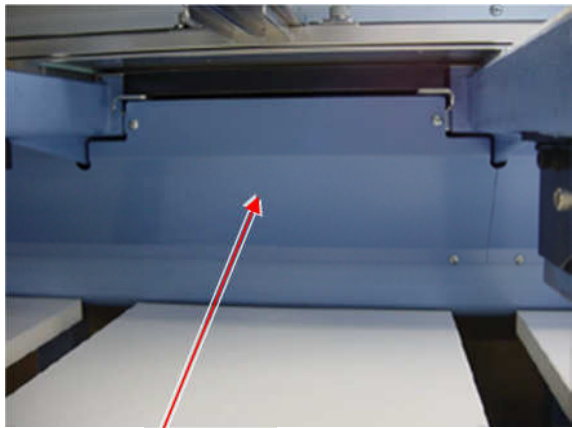


Table support cover

3. Loosen lock nut of tension adjusting screw.


(you can find this screw under table)

<Spanner> 7mm

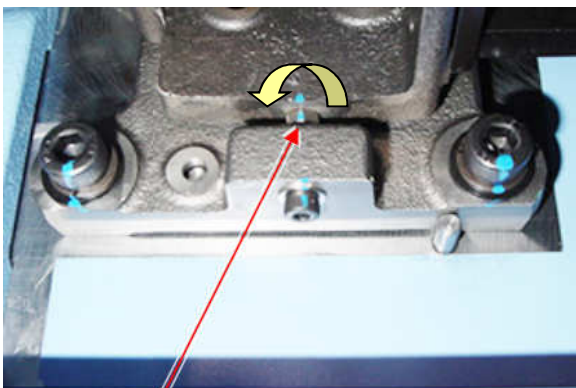

Lock nut


4. Loosen screws of Y motor base by half turn.

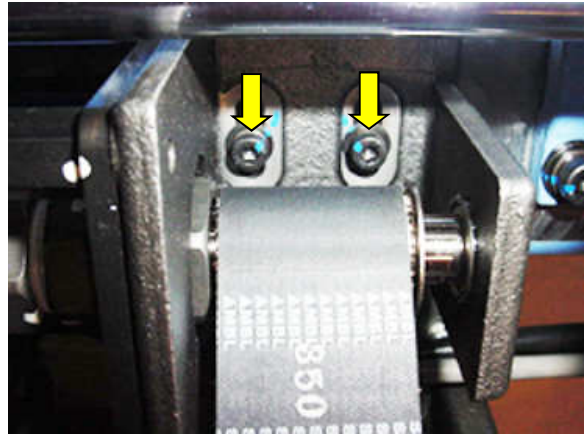

5. Put ruler on belt, push belt at center of belt by push gauge with 500gf.

Please adjust tension of belt by tension adjusting screw moves 1mm.


< Note > Push gauge should touch belt with 90 degrees.

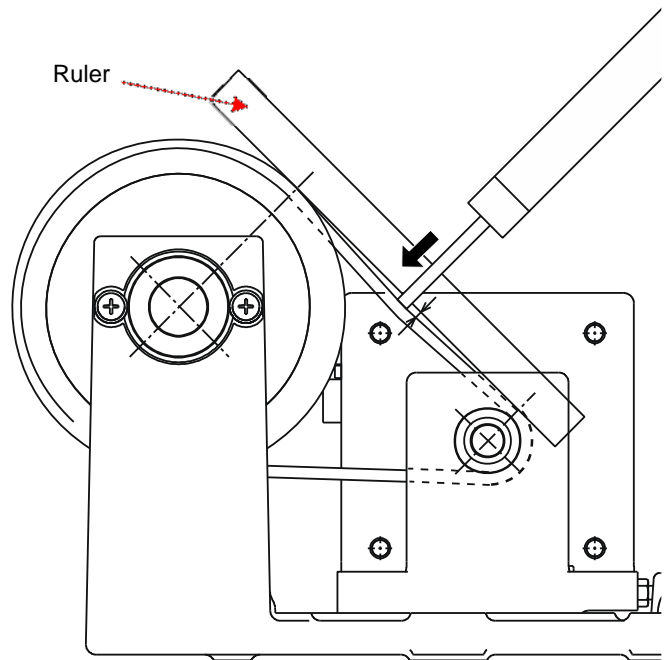


Tension adjusting screw

4-6-3 Adjustment of Y carriage drive belt tension

6. Tighten screws of Y motor base

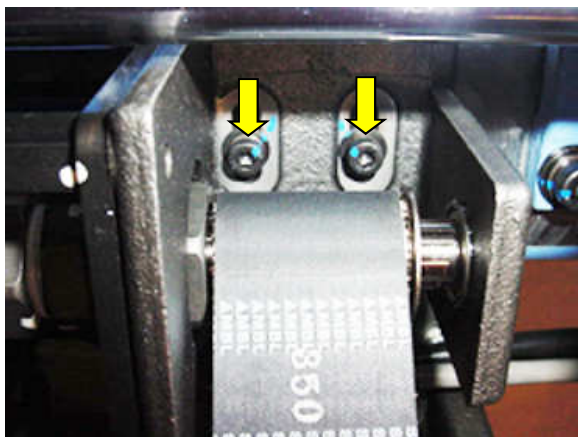

7. Tighten lock nut of tension adjusting screw

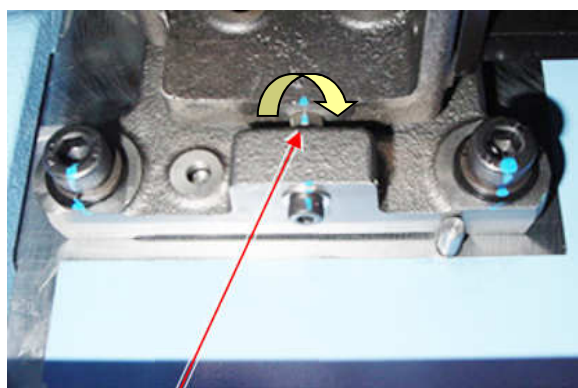

Lock nut

8. Set table support cover

9. Set rear cover and middle cover

10. Please register frame position


Please refer to [E5-6 Position- Registration of coordinates for positioning sensor].

4-6-4 Adjustment of Y drive timing belt tension

The way of adjustment of Y drive timing belt is same right side and left side.

Below explanation is for right side.


1. Take Y cover bracket and Y cover out.

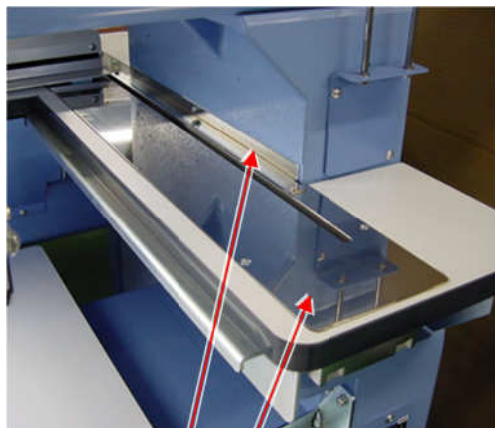

Y cover bracket

Y cover


2. Move X carriage 150mm from center of idler pulley, and put a mark at 75mm.

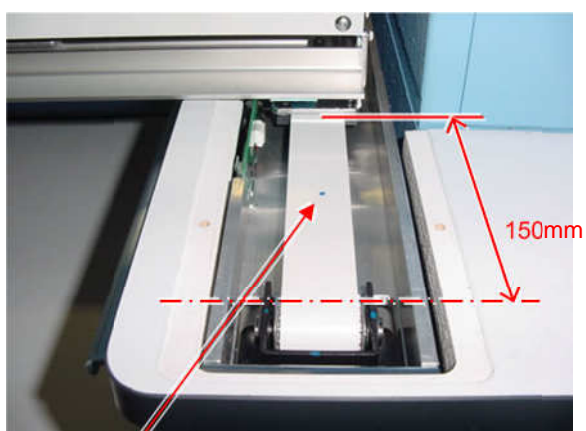

A mark


3. Loosen lock nut for tension adjusting screw.

<Spanner> 7mm

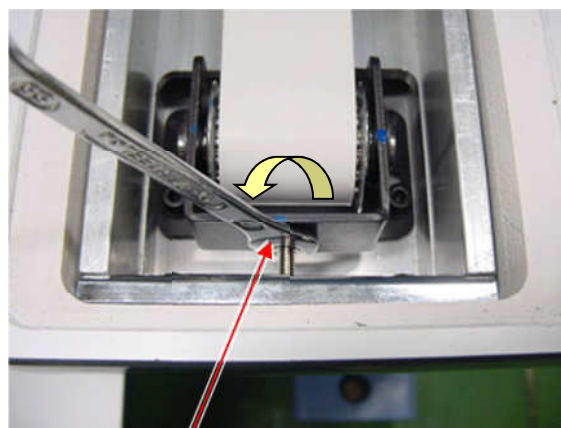

Lock nut

4. Loosen screw for idler pulley bracket by half turn.

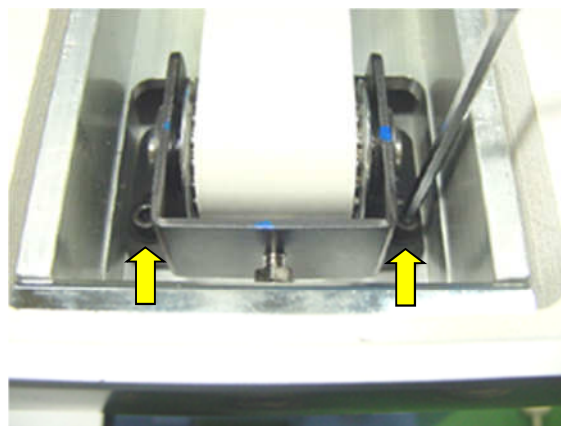


4-6-4 Adjustment of Y drive timing belt tension

5. Push belt by push gauge at a mark position.


Belt should move 1.5 ~ 2.0mm by 1kgf of push gauge.

Please adjust tension by tension adjusting screw

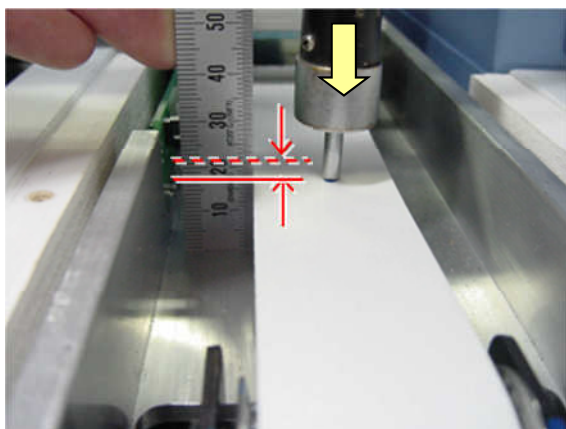


Tension adjusting screw

6. Tighten screws of idler pulley bracket

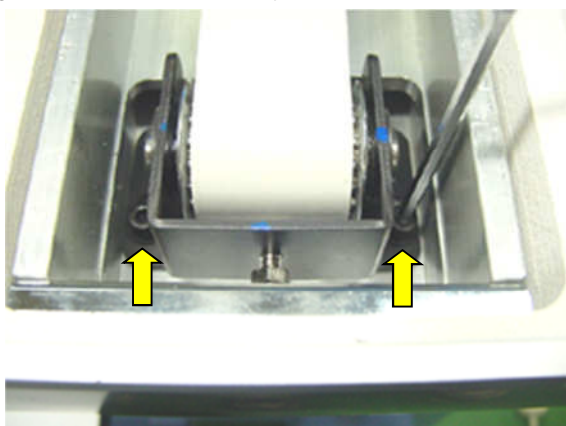

7. Tighten lock nut of tension adjusting screw

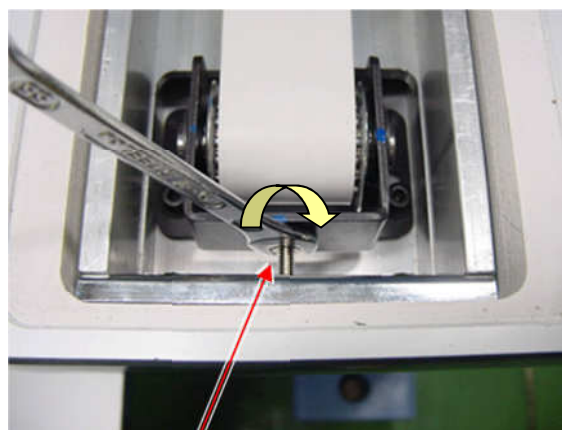

Lock nut


8. Set Y cover and Y cover bracket

9. Please register frame position.

Please refer to [E5-6 Position- Registration of coordinates for positioning sensor].

4-6-5 Adjustment of center carriage timing belt tension

1. Take middle cover and rear cover out.

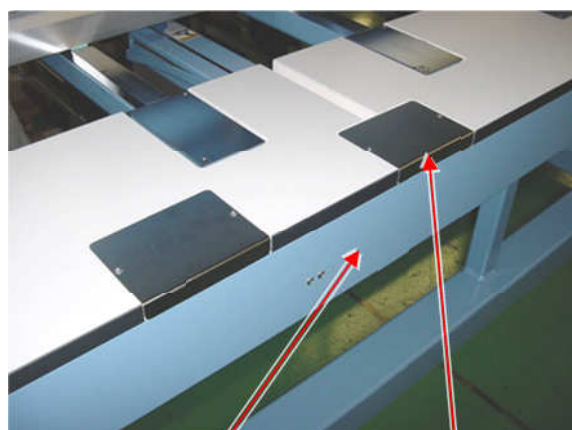


Rear cover

middle cover

2. Loosen lock nut for tension adjusting screw.


<Spanner> 7mm

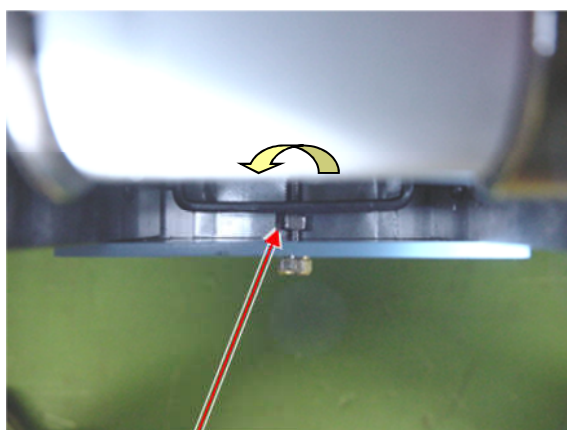


Lock nut

3. Loosen screws for idler bracket by half turn.

(2 pcs)

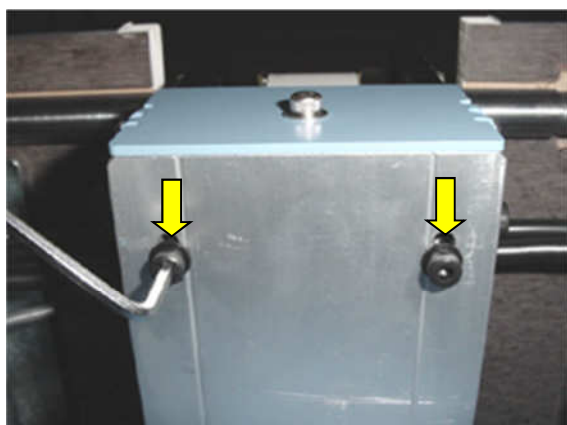


5. Adjust space between tension plate and idler pulley bracket
4mm by tension adjusting screw.

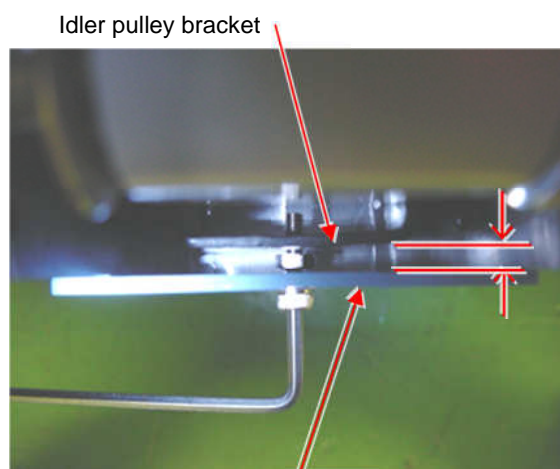

Idler pulley bracket

Tension plate

6. Tighten lock nut for tension adjusting screw.

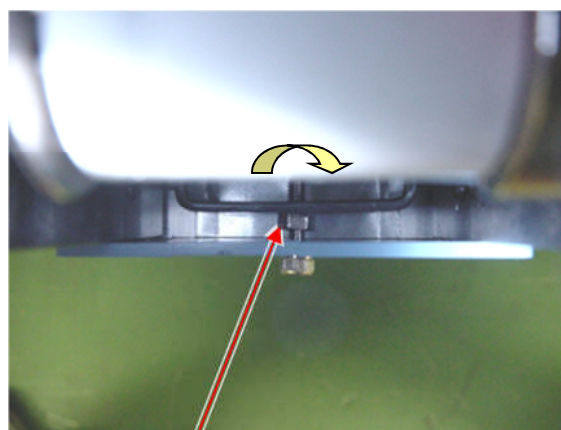

Lock nut

7. Set middle cover and rear cover.

8. Please register frame position.

Please refer to [E5-6 Position- Registration of coordinates
for positioning sensor].


4-7-1 Exchange of main shaft timing belt

1. Remove bed cover B.




Bed Cover B


2. Let a disk reach 25 degrees.

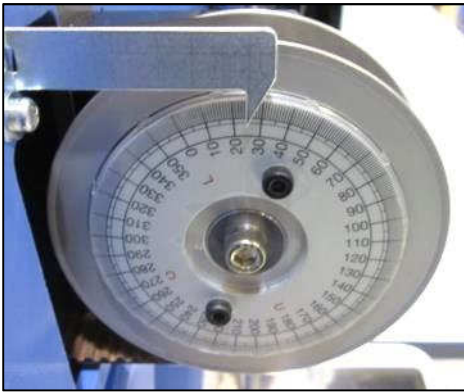


3. Loosen two(2) pieces of screws indicated with red arrows.

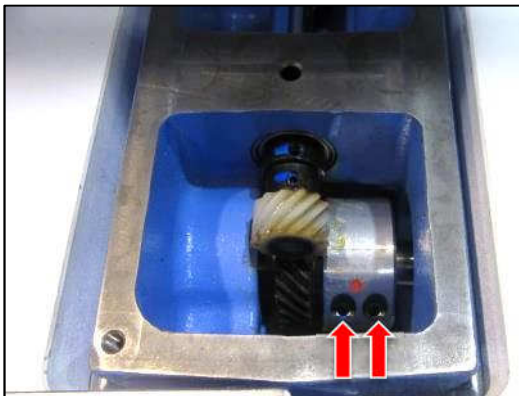

4. Remove six (6) pieces of screws, and then remove a left cover.

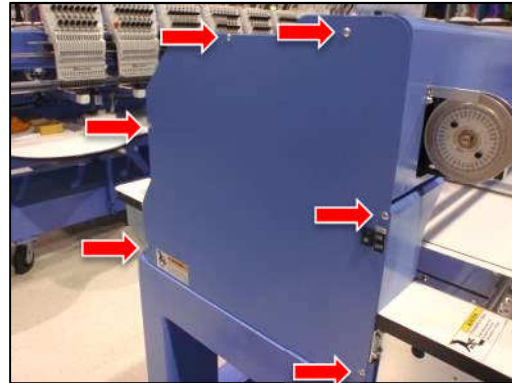


5. Loosen a nut indicated with a red arrow by using a 7mm spanner.

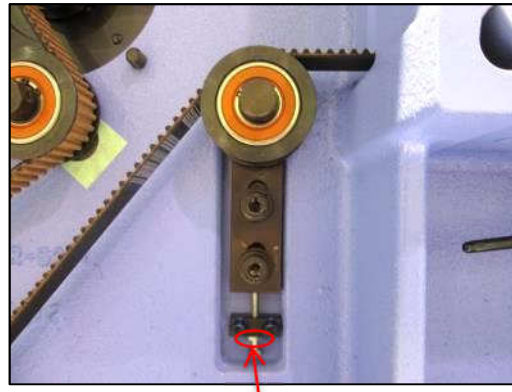


Nut for tension adjustment

6. Rotate two (2) pieces of screws mounted on a tension plate by approximate 180 degrees to loosen them.

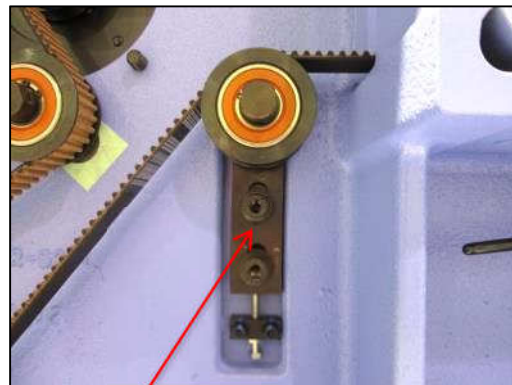


Tension Plate

7. Loosen a screw indicated with a red arrow, and then remove an idler pulley assembly.

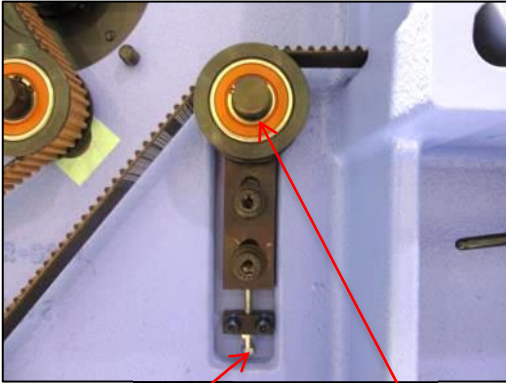


Screw for tension adjustment Idler Pulley Assembly

8. Loosen a screw mounted on fasten collar A.

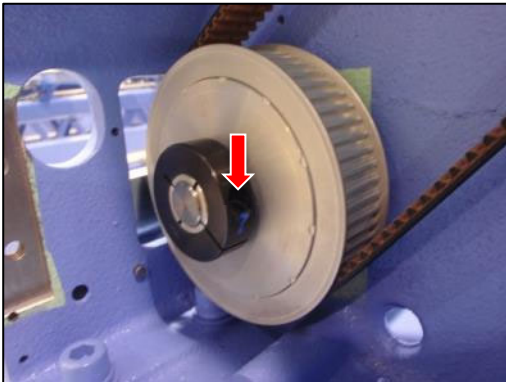


9. Remove rear left cover.

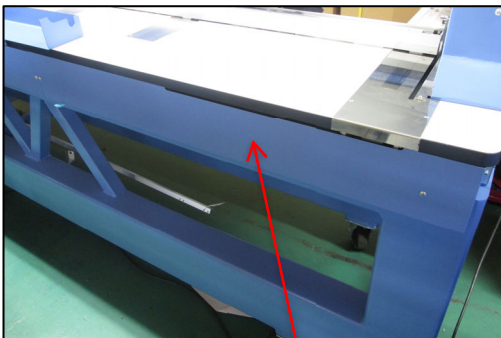


Rear Left Cover

10. Tighten two (2) pieces of screws mounted on an upper shaft collar assembly.

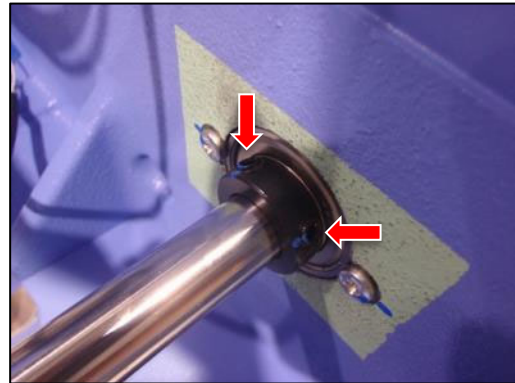


11. Slide a lower shaft, and then remove a lower shaft pulley.

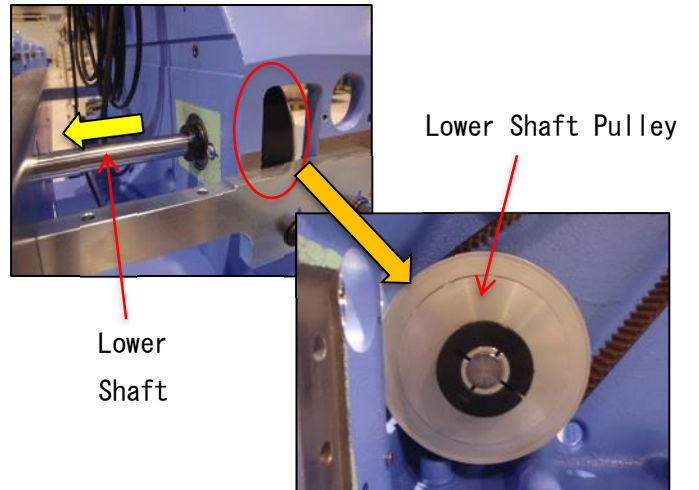

12. Remove a timing belt.

13. Put a timing belt on a lower shaft pulley, and then put a lower shaft back in. After this, loosen screws on an upper shaft collar assembly, and then fix a lower shaft pulley.


14. Put a lower shaft and a fasten collar A together to make their surfaces flat, and then tighten a screw on the fasten collar A.

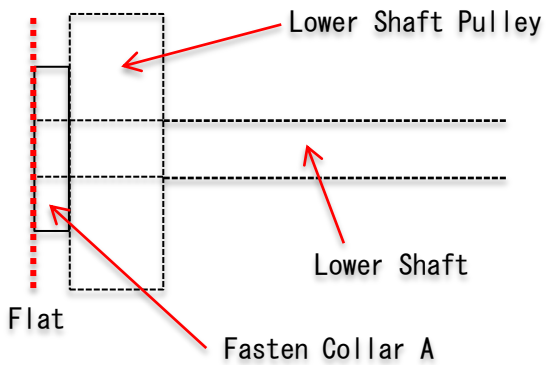

15. Put an idler pulley assembly back on.

16. Let a disk reach 25 degrees, and then tighten screws.

Note: As appeared in the picture below, screws should be tightened so that they will come face up.

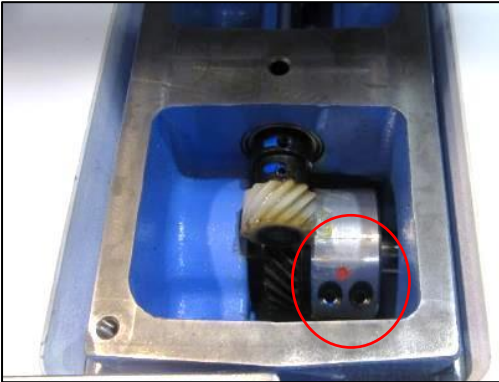

17. Go to “4-7-2 Adjustment of upper shaft timing belt tension” for more information on timing belt adjustment.
18. Put rear left cover, left cover and bed cover B back on.
19. Adjust a rotary hook referring to “4-4-1 Adjustment of rotary hook timing”.

Steps complete.

4-7-2 Adjustment of upper shaft timing belt tension

1. Take mission cover (left) out




Mission cover(left)

2. Loosen lock nut of tension adjusting screw
<Spanner> 7mm




3. Loosen screws for tension plate by half turn
< Note > Please do not turn main shaft, when screws for tension plate is loosen. Timing may be changed

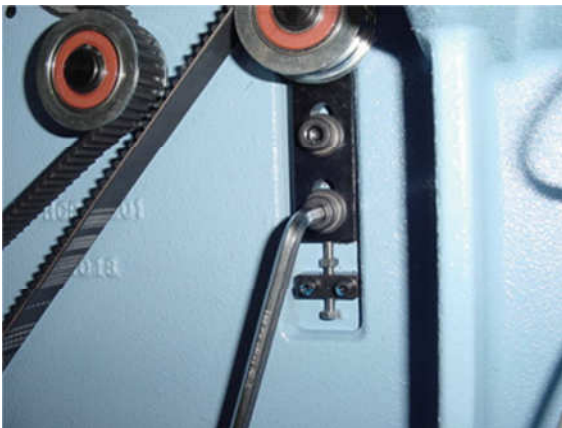


4. Adjust space between tension plate and lower tension plate
11 ~ 11.5mm (12 heads model is 12 ~ 12.5mm) by tension adjusting screw


< Note > Please Keep tension plate straight.

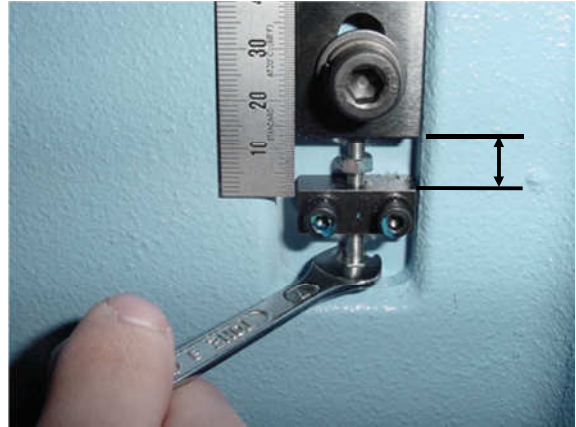

5. Tighten screws for tension plate.

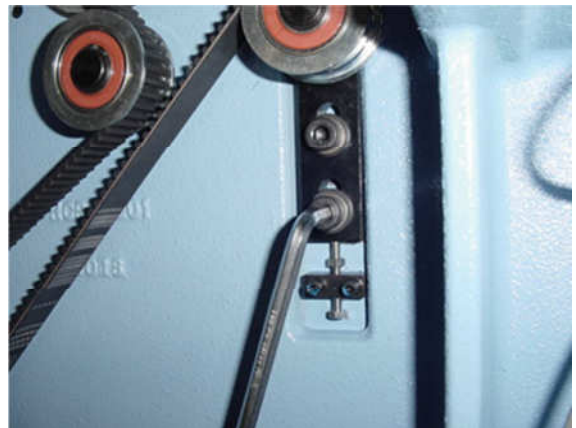

6. Tighten lock nut of tension adjusting screw.

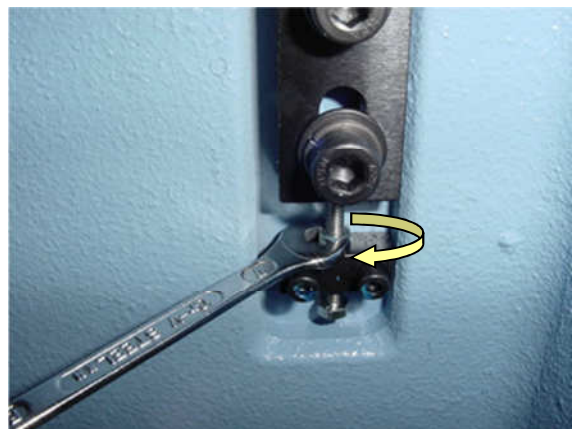

7. Set mission cover (left).


4-7-3 Adjustment of timing detecting unit

1. Remove the Head cover and Detecting cover.




Detecting cover


2. Loosen two(2) pieces of screws mounted on the timing slit in order to let the slit itself rotate manually.

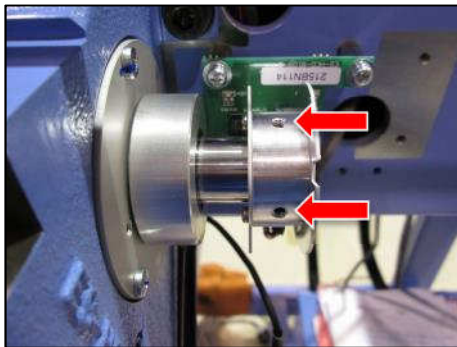

3. Move the disk 0 degree (L Point).

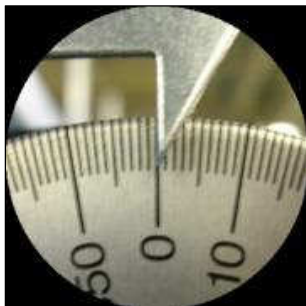

4. Rotate the timing slit clockwise at the view from the disk. Then, tighten the screws when LED4 goes off. (LED4 will go off if the timing slit blocks L point sensor.)

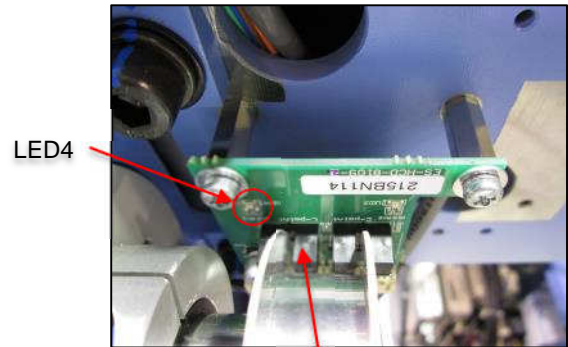


LED4

L POINT SENSOR

5. After tightening the screws, rotate the upper shaft to reach 0 degree (L Point) at the disk and confirm that LED4 goes off.


6. Rotate the main shaft in the right direction and confirm that LED3 goes on in the range between 270 through 284 degrees (C Point).

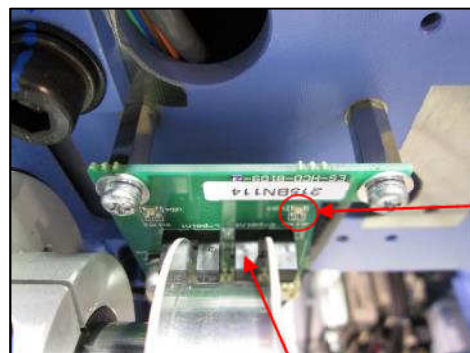

LED3

C POINT SENSOR

7. Make sure that the timing slit does not collide with the sensor on the timing detecting board.

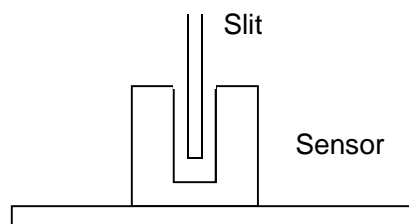


4-7-3 Adjustment of timing detecting unit


8. Finally, put the cover back on.

5 User maintenance mode


User maintenance mode has the items as below.

 Change jump——Change the needle bar's movement.

“JUMP” : Needle Jump, “DRIVE” : Needle Drive

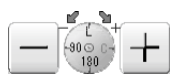 Upper shaft turns——Upper shaft turns clockwise and counterclockwise.

When release button, upper shaft stops.

 Needle change——Move the sewing head to the adjustment needle in the direction of the arrows.

[Cut] Cutter Open/Close——Open and close knife of thread trimming

[Catch] Cathcer Open/Close——Open and close thread catcher

[Clip] Clip-type thread holder (option) ——Open and close clip-type thread holder

[Keeper] Keeper Open/Close——Open and close keeperr

[Origin] Standby position——In case, each equipment position without standby position, as example “Upper shaft is not at C point, Thread cut blade is not at stop position, Thread Catcher is open position”, this key work for back to standby position automatically.

Indicates point which sensors are active.

L point sensor——The point that indicator becomes RED is L-point, when main shaft is turned.

C point sensor——The point that indicator becomes RED is C-point, when main shaft is turned.

Needle sensor——The point that indicator becomes RED is needle position, when moving head is moved

Origin point of cutter——The point that indicator becomes RED is origin point of cutter

Origin point of thread catcher ——The point that indicator becomes RED is origin point of thread cacther

Angle ——Indicate angle of main shaft.


Please use “Dial” on upper shaft, when you need to know precise angle.

5-1 How to enter “User Maintenance Mode”

1. When the machine is stopped, press  and




2. Press “OTHER”.

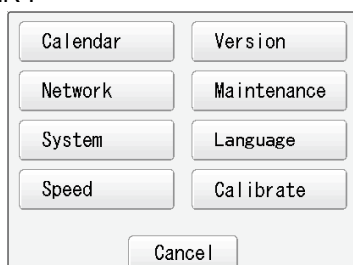

3. Press “Maintenance”.

The display shows as below.

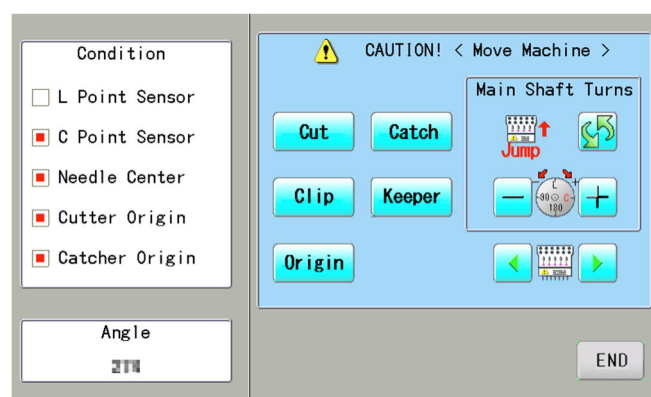


4. Please follow instruction of “5-2 Machine Movement”.

5. In case you press **END** at above display, return to Menu display.




If you press **Home** button once more, return to drive mode.

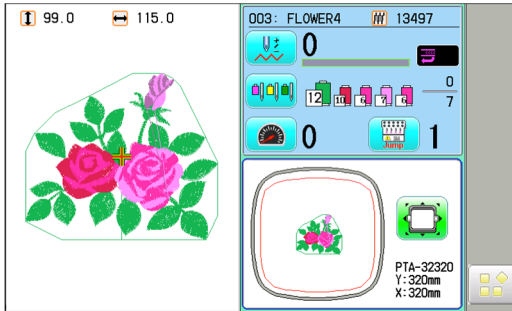

5-2 Machine Movement

1. Refer to [5-1 How to enter “User Maintenance Mode”] and enter to User Maintenance Mode.

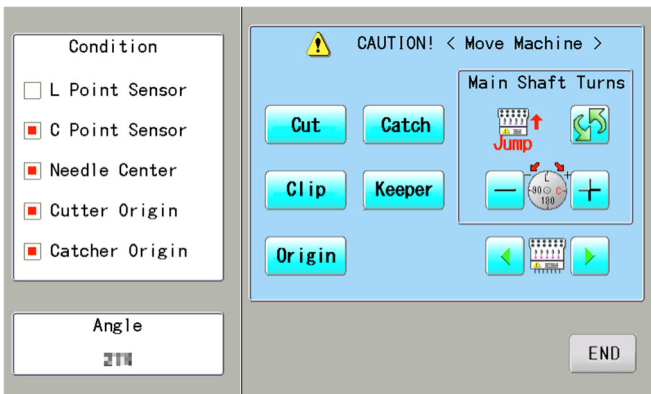

2. Press on of button on control panel and check machine movement.

< Note > The machine moves quickly.

 
please be carefull that all head move at once.

machine show following message when you press key.

C point : Upper shaft is not at C point.

Cut blade : Thread cut blade is not at standby position.


Thread Catcher : Thread Catcher is open position.






Please press **Origin** for back to standby potion and repeat step 2 again.

3. When you press **END**, close user maintenance mode and return to Menu mode.

E1 Placement of key electronic parts

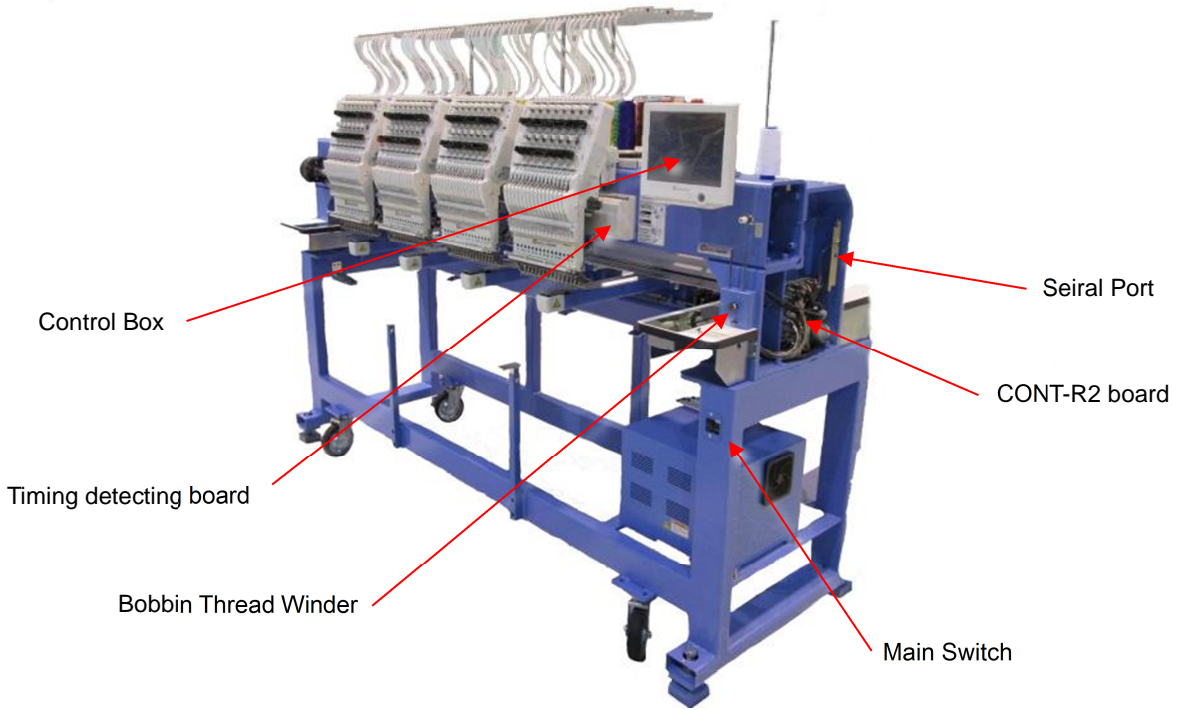

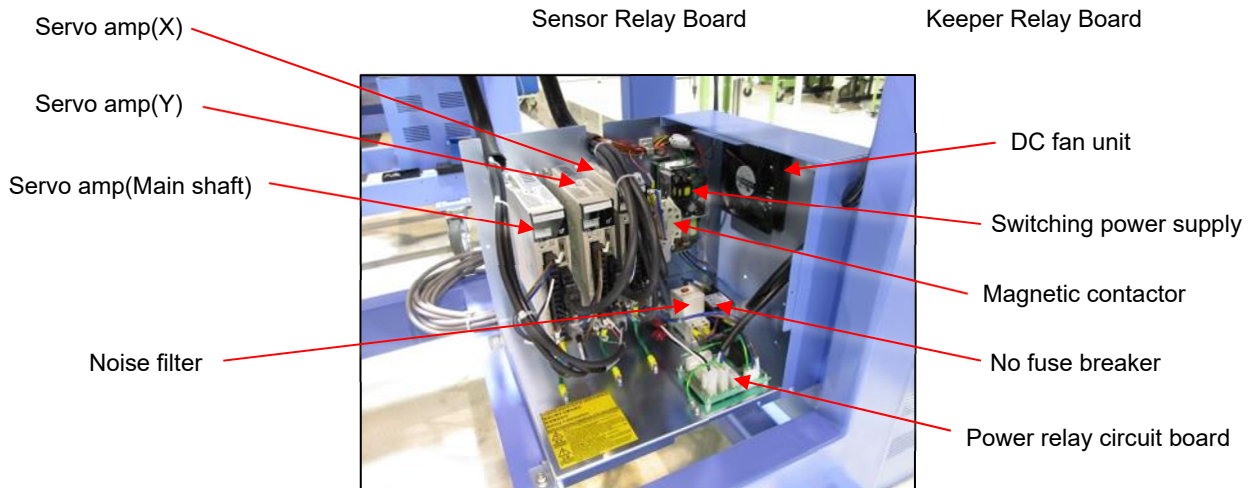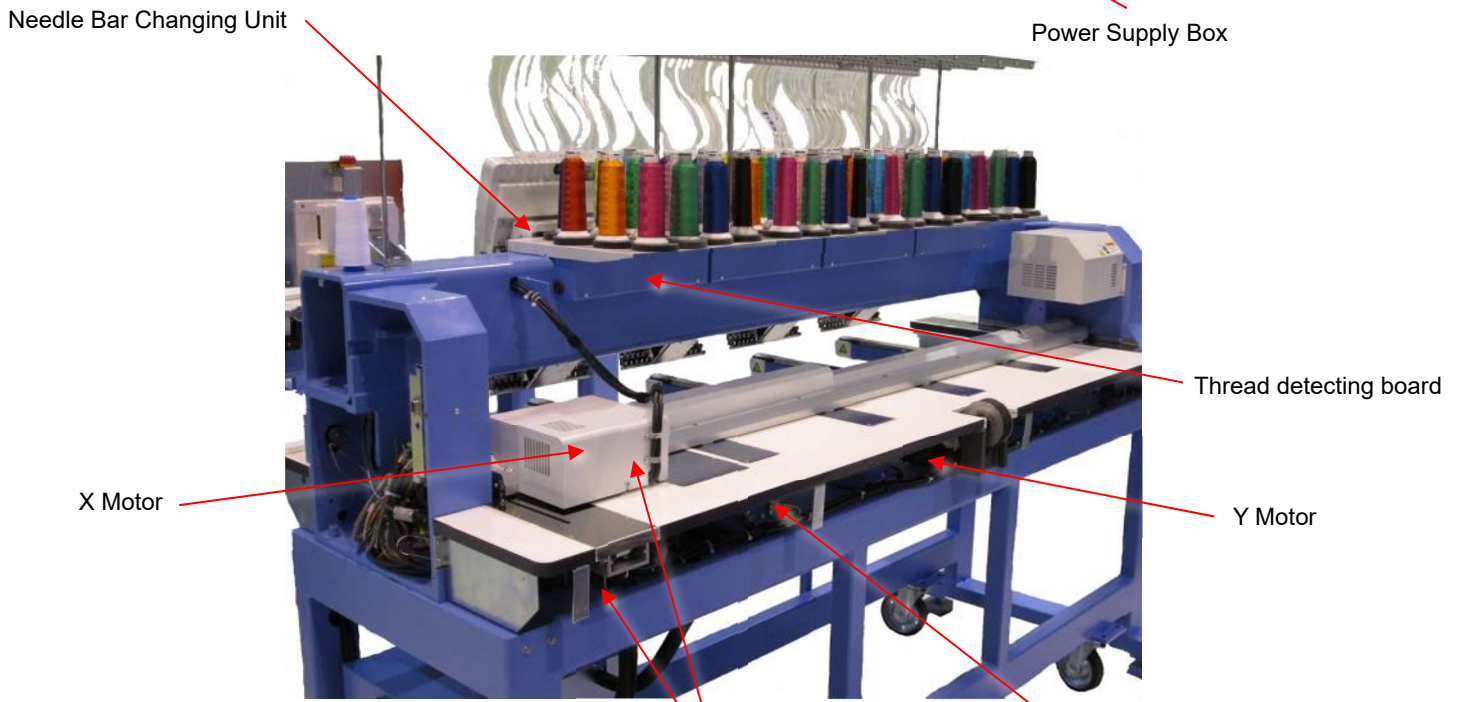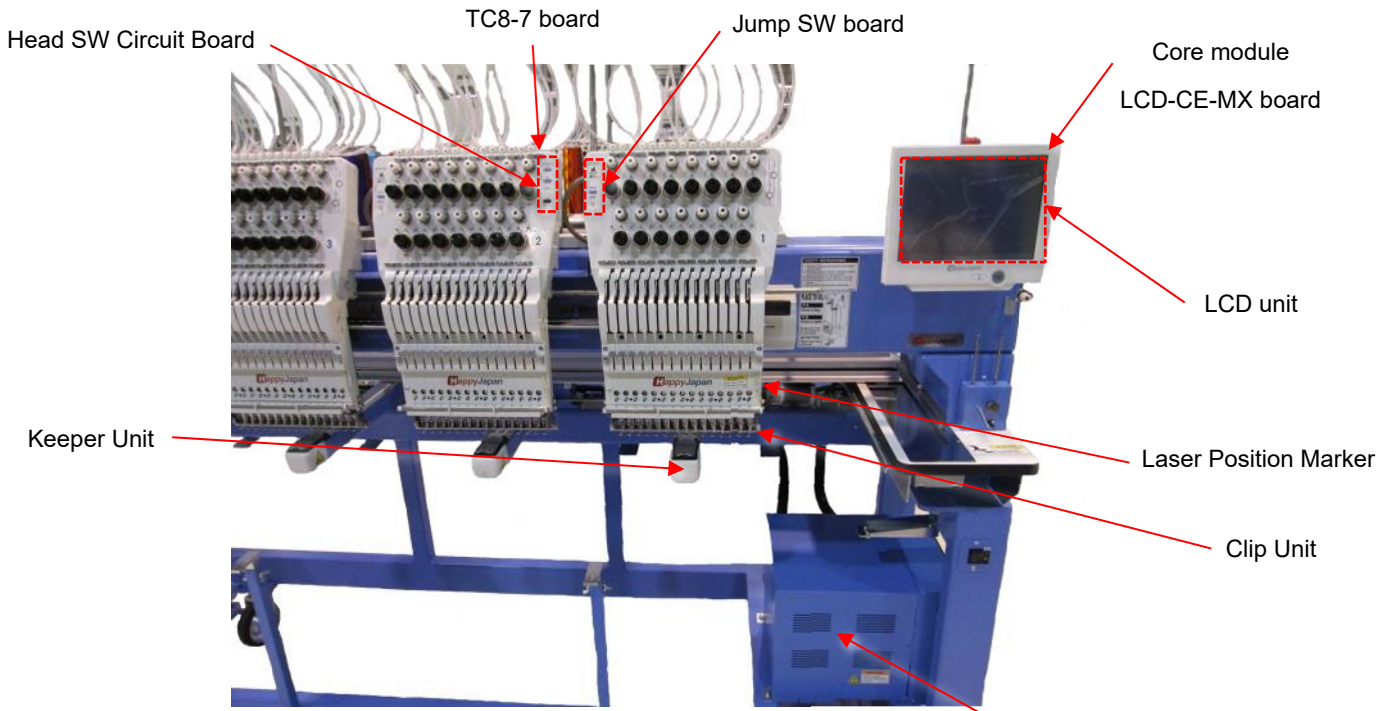


E2 Exchange and Setting of electric related component

<Note> Please take electric plug, when you exchange electric component.


E2-1 Exchange and Setting of CONT-R2 Board (S.No. ~1095015)

1. Take mission cover out.

Remove the screws at the six places below.

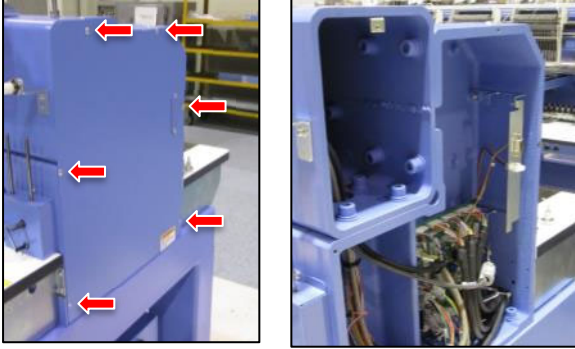

2. Remove all the Harness and 4screws and exchange to a new CONT-R2 board.

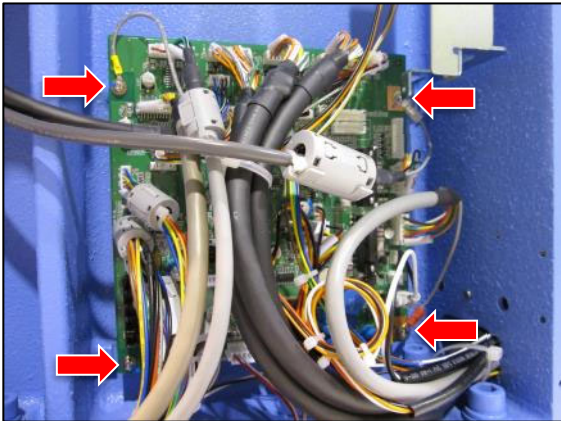

3. Connect all the harness back to the board.

4.Refer to 「E4-1 Preparation for program update」 and prepare update program.


5.Insert USB Memory stick to the machinee that contain update program.




6. Turn machine power on.




7. After showing below scree, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.

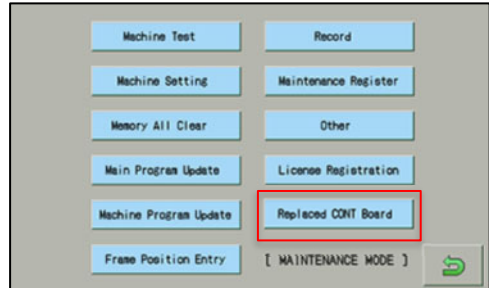


8.Press **Replaced CONT Board**

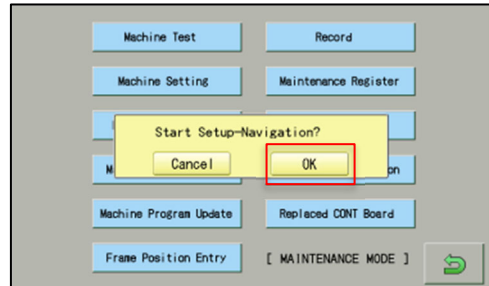


9. Press **OK**

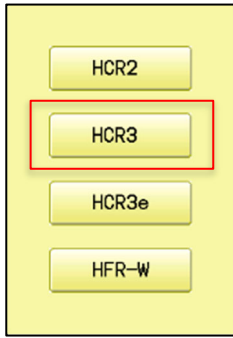


10. Select (press) **HCR3**

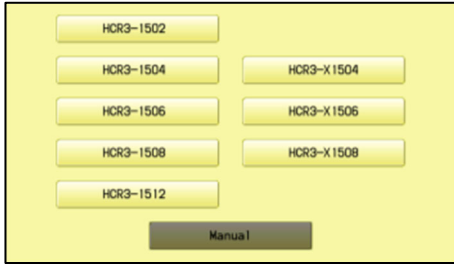

 
11. Select your machine model and press.



12. Press **OK**

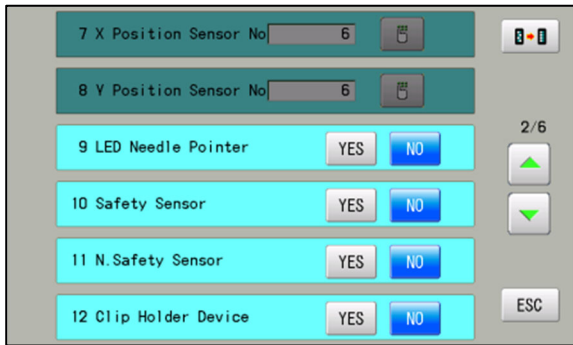

 
13. Needed Machine setting items will be displayed brighter. Please set according to your machine specification/options then press **ESC** after setting is done.



14. Press **OK**



15. Press **OK**

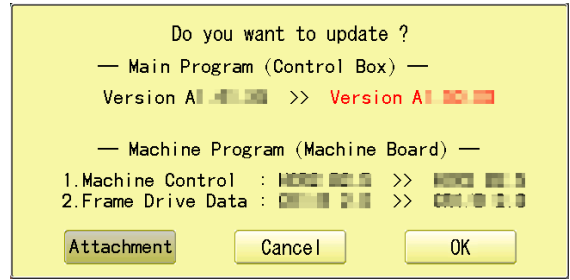

When the version of each program and the version in the update file are different, the version number is displayed in red.


<Note>

- * Please do not take out USB memory during installation.
- * Please do not turn off the power during installation (it will take for a while for completion of installation).


Retry updating when the screen shows "Error" due to writing error.

16. Press **OK** if you have new program version than current version in the machine. Installation starts after press **OK**.


Installation complete, the machine will be rebooted automatically.

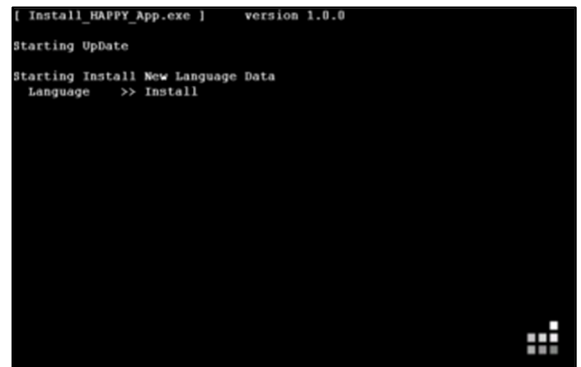

 
※ Press **Cancel** in case current program version is latest.




17. Press **OK**

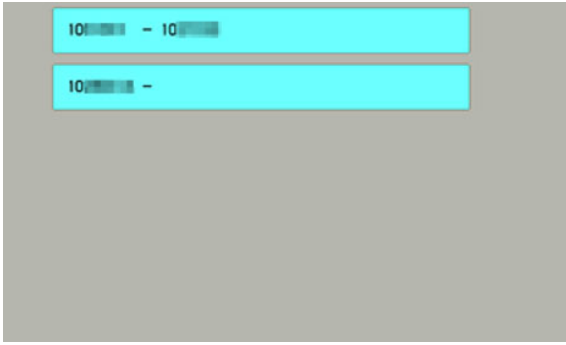

 18. Select your machine model and press.



19. Press **OK**

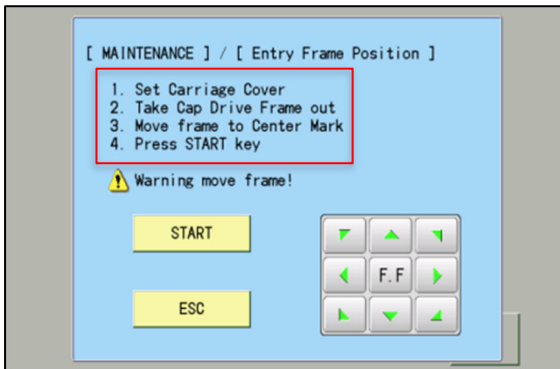

20. Operate following below instructions

- (1). Fix carriage cover
- (2). Remove cap frame
- (3). Move carriage to center mark position by



. (Refer to below display)


- (4). Press **START** button.
- (Press **ESC** button in case of cancellation.)




Center mark position of X axis

Center mark position of Y axis


21. When you press START button, registration of X axis direction will start. Frame moves as below.

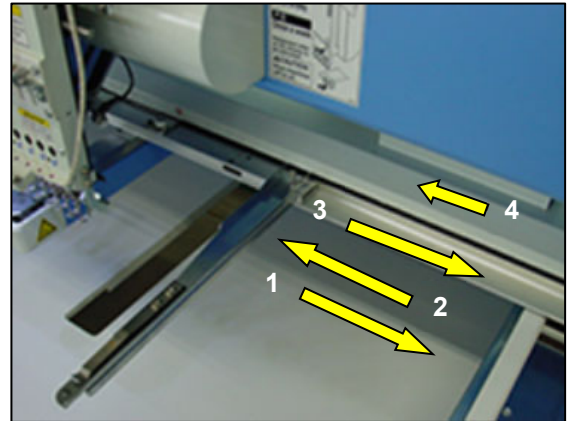

22. Then registration of Y axis direction will start. Frame moves as below.

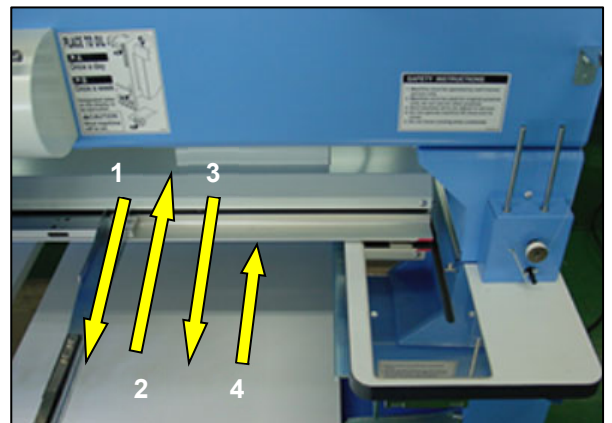

23. Below message will be displayed with successful completion.

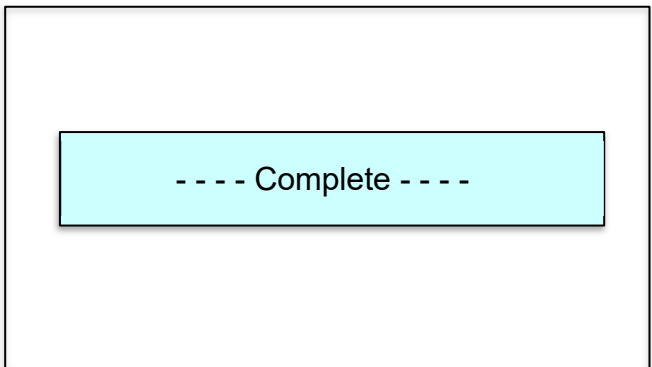

Retry from step 20, if [Error] occurs.

Final Step: Speed setting

 
OK

24. Press




25. Press 「Initializing of machine speed」 will starts
Main shaft will start rotation automatically and adjust
speed setting.

Refer to manual 「E4-3 Initialization · Initializing of
machine speed」 .



26. Press

Back to Maintenance mode menu window.

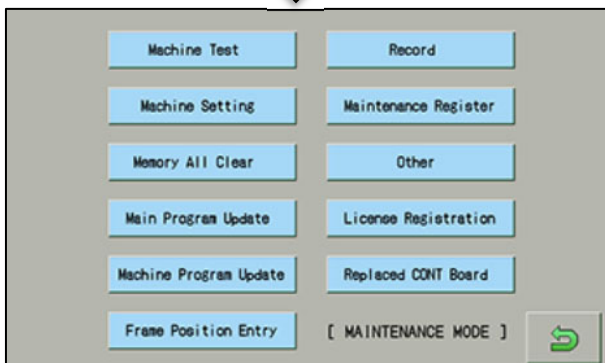


End of process.


E2-1a Exchange and Setting of CONT-R2 Board (S.No. 1096001~)

1. Take mission cover out.

Remove the screws at the six places below.

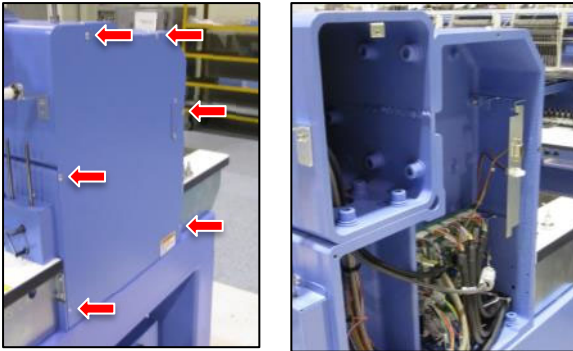

2. Remove all the Harness and 4 screws and exchange to a new CONT-R2 board.

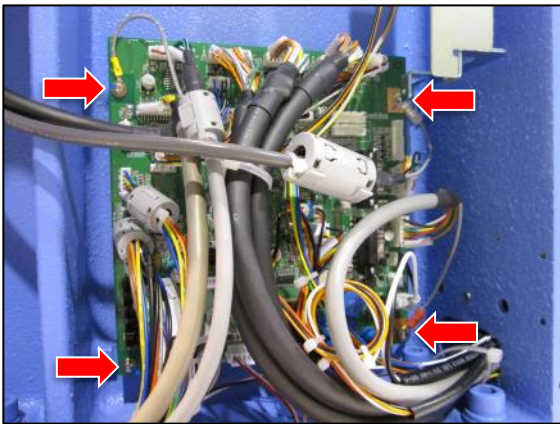

3. Connect all the harness back to the board.

4. Refer to 「E4-1 Preparation for program update」 and prepare update program.


5. Insert USB Memory stick to the machine that contains the update program.




6. Turn machine power on.




7. After showing the below screen, keep the START/STOP button pressed, then press **NEXT** to enter maintenance mode.

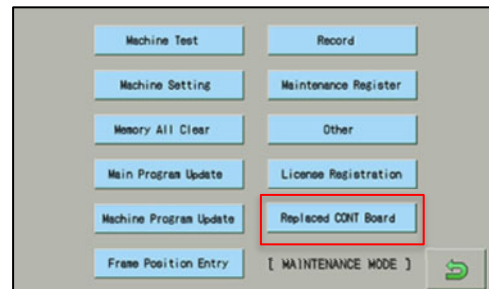


8. Press **Replaced CONT Board**

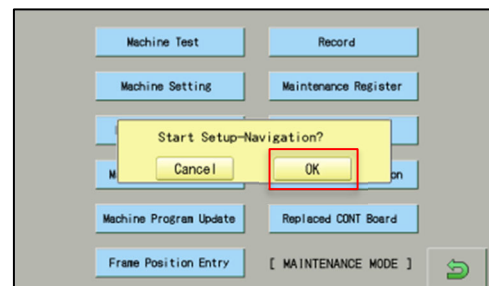


9. Press **OK**

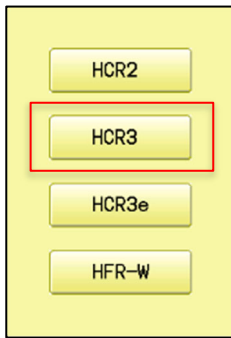


10. Select (press) **HCR3**

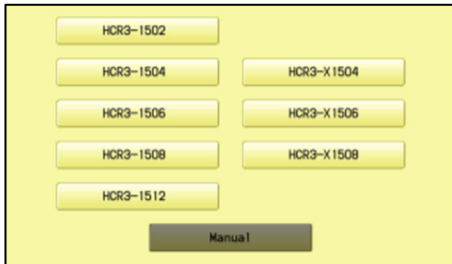

 
11. Select your machine model and press.




12. Press **OK**

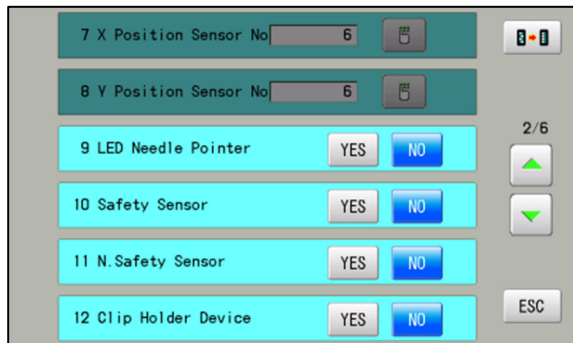

 
13. Needed Machine setting items will be displayed brighter. Please set according to your machine specification/options then press **ESC** after setting is done.



 
14. Press **OK**



15. Press **OK**

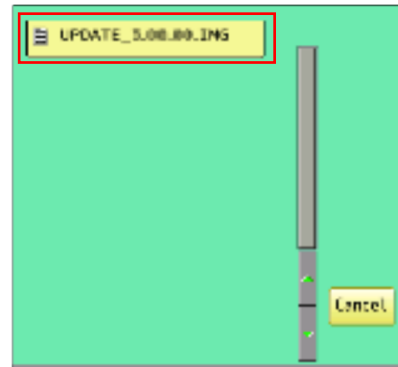

16. Select the file "UPDATE***.IMG".

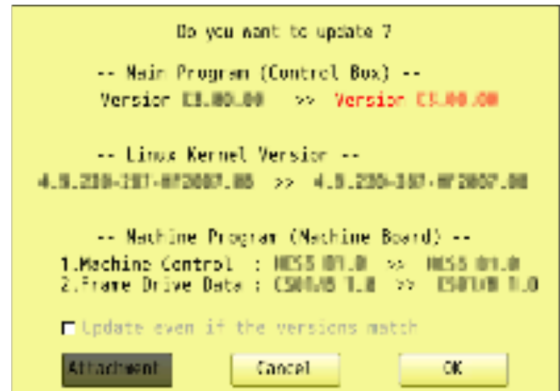


When the version of each program and the version in the update file are different, the version number is displayed in red.

<Note>


- * Please do not take out USB memory during installation.
- * Please do not turn off the power during installation (it will take for a while for completion of installation).

Retry updating when the screen shows "Error" due to writing error.


17. Press **OK** if you have new program version than current version in the machine. Installation starts after press **OK**. Installation complete, the machine will be rebooted automatically.

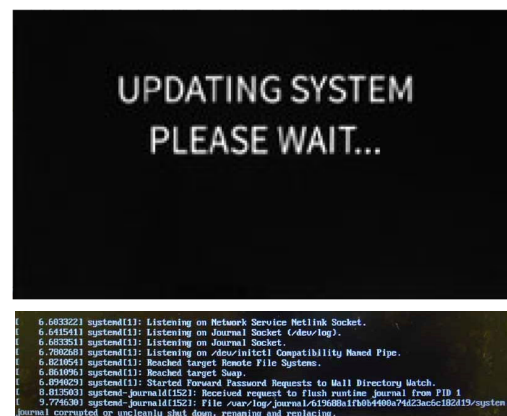

 
※Press **Cancel** in case current program version is latest.



18. Press **OK**

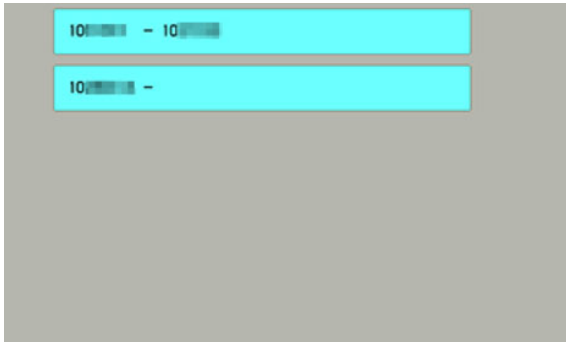

 19. Select your machine model and press.



20. Press **OK**



21. Operate following below instructions

- (1). Fix carriage cover
- (2). Remove cap frame
- (3). Move carriage to center mark position by



. (Refer to below display)

(4). Press **START** button.


(Press **ESC** button in case of cancellation.)



Center mark position of X axis


Center mark position of Y axis

22. When you press START button, registration of X axis direction will start. Frame moves as below.

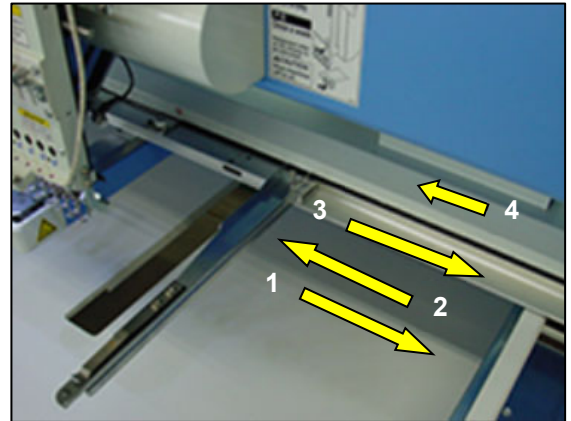


23. Then registration of Y axis direction will start.

Frame moves as below.

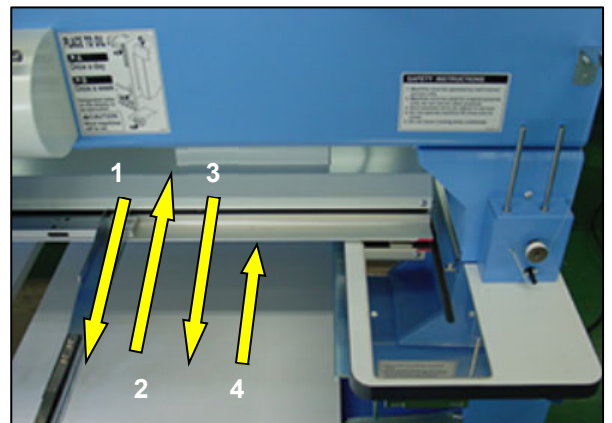

24. Below message will be displayed with successful completion.

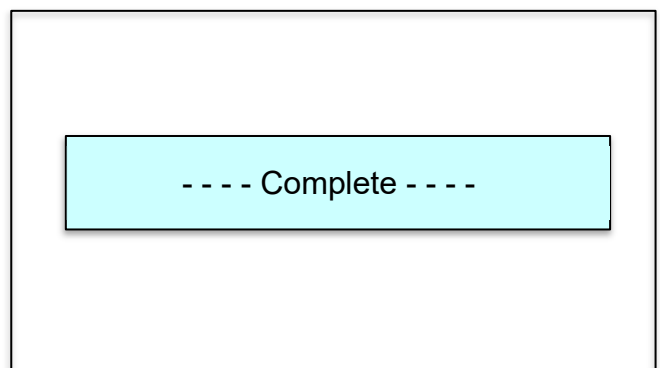

Retry from step 20, if [Error] occurs.

 
Final Step: Speed setting

OK

25. Press




26. Press 「Initializing of machine speed」 will start. Main shaft will start rotation automatically and adjust speed setting.
Refer to manual 「E4-3 Initialization · Initializing of machine speed」.



27. Press

Back to Maintenance mode menu window.

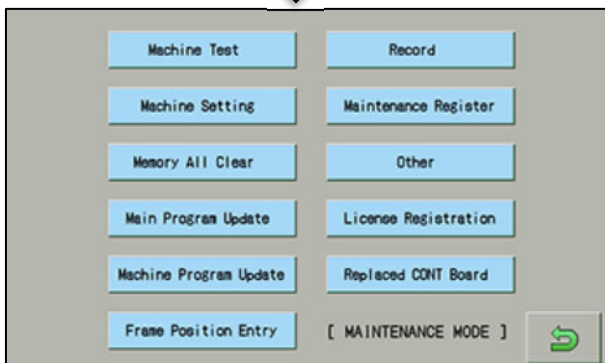


End of process.

E2-2 Exchange Timing Circuit Board


1. Remove Timing Circuit Board

Disconect Harnes and remove 2 screws

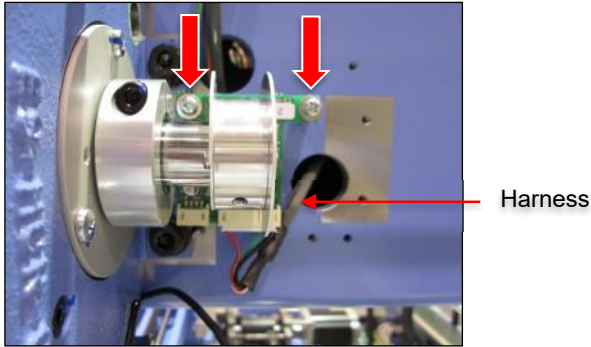


2. Install Timing circuit board


<Note> Be careful with handling, Timing Slit is very thin make the Timing slit in the sensor with care.

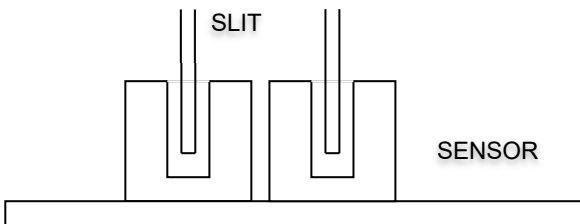


3. Loosen 2screws of detecting slit disk. Make it freely until Slit disk can rotate by hand

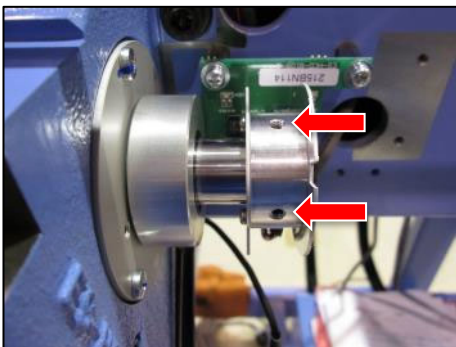

4. Adjust Angle disk with 0 [0 degree(L point)].

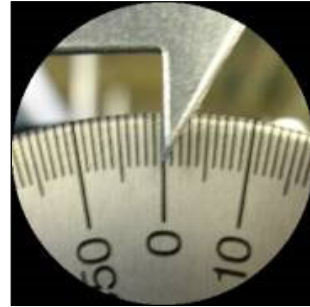


5. Rotate the Timing slit(clockwise from the Angle disk side) then fix screw when LED4 turns off point. (LED4 will turns off when Timing slit covers L point sensor)

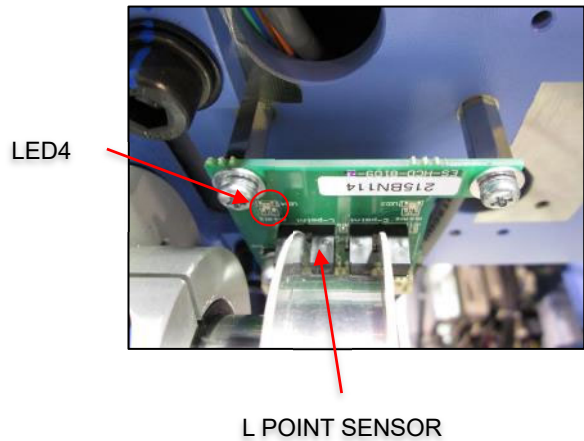


6. After installation is finish, please rotate upper shaft and confirm LED4 will turns off at 0 degrees(Lpoint)

7. Rotate Main shaft and confirm LED3 will turns off in a range of 270~284 degrees(C point)

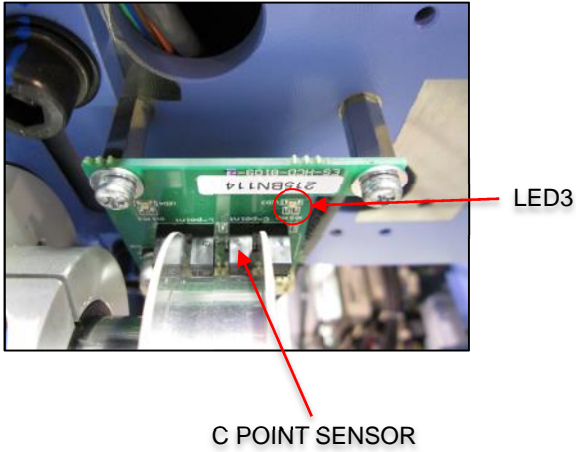

8. Check Timing sensor and Timing slit are not interfering during shaft rotation.

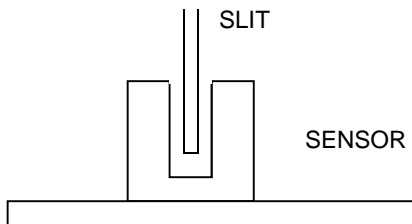


These steps are all you have to do.


E2-3 Connection of Detection Circuit Board

CN6 on Detection Circuit Board has different way of connection for each head.


Please attention to following information.

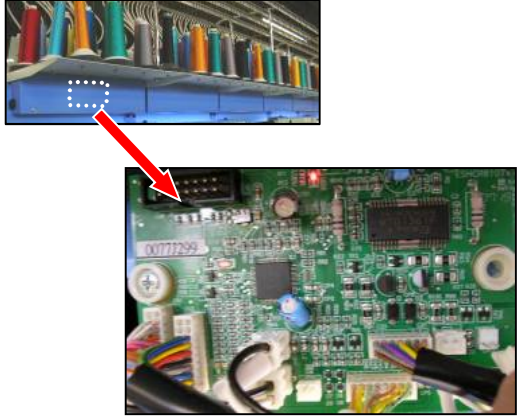


1. For Head with emergency stop SW->TC-EMG harness

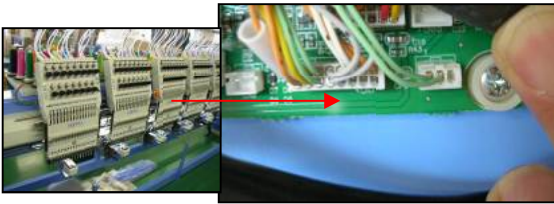

2. For Head without emergency SW->white loop harness

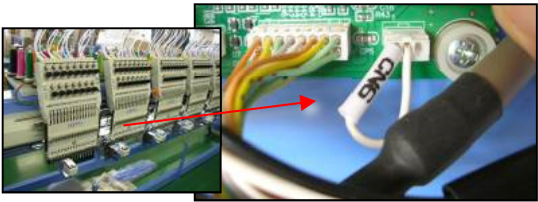

3. For last Head->Red loop harness

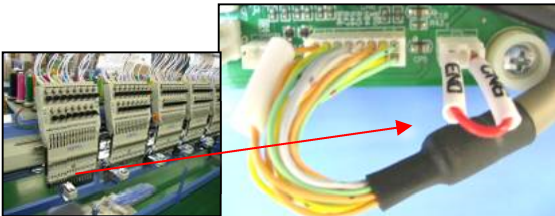

After connect all, please check if emergency SW works correctly.

E2-4 Exchange TC7-8 Circuit Board

1. Remove the thread tension bracket.


Please refer to [4-2-1, 4-2-2 Assemble and remove moving head].

2. Remove thread tension rear cover.


Remove the screws at the tow places below.




3. Disconnect connectors of Yellow allow part below.

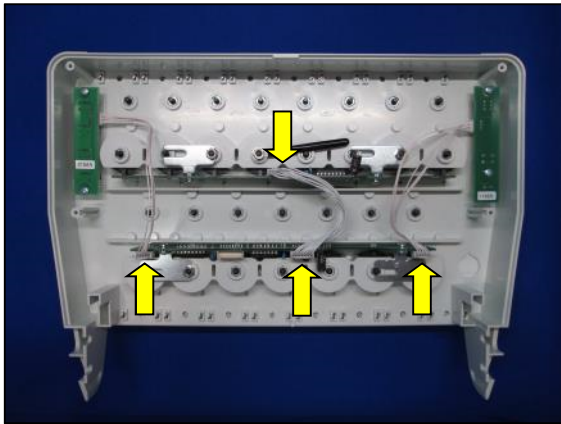

4. Remove the nuts at the bottom four places.

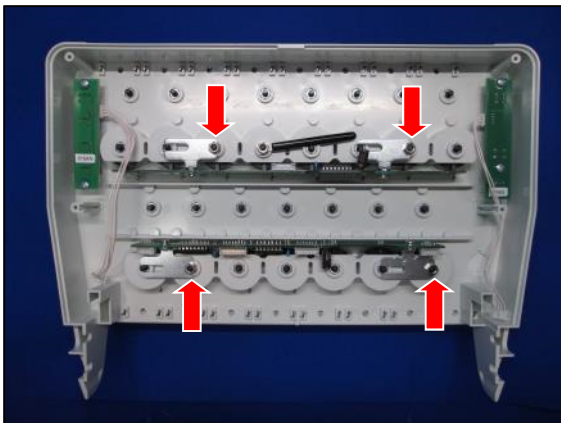


5. Remove board by sliding to the left

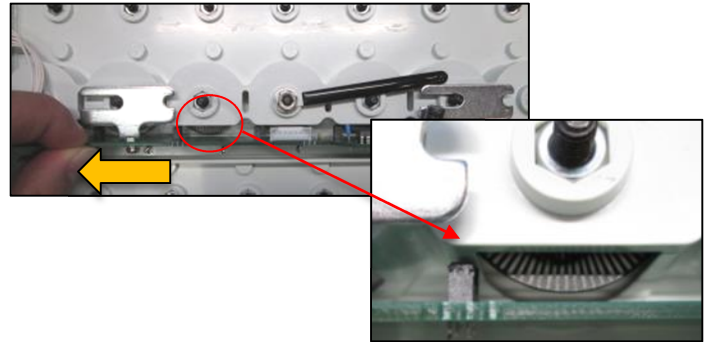

< Note > Confirm Slit is not in the Sensor groove before removing the Board. Sensor might get damaged if you pull it by force.


6. Adjust the position of Board bracket and Shaft of Detecting thread tension ass'y then slide the board to fix the position.

Board bracket

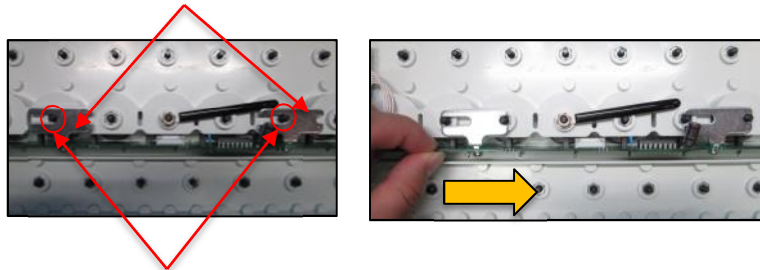

Detecting thread tension ass'y

7. Make sure Sensor and Slit are not interfering.

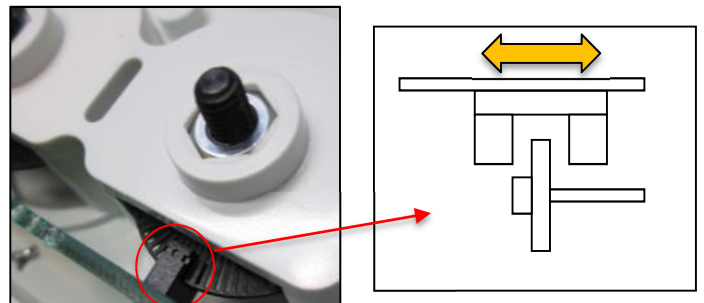

8. Put Thread tension cover back and install Thread tension unit.


End of process.

E2-5 Exchange needle stop sensor and potentiometer


1. Move head position to needle no.15 by head moving knob

2. Remove cover.


Remove the screws at the four places below.

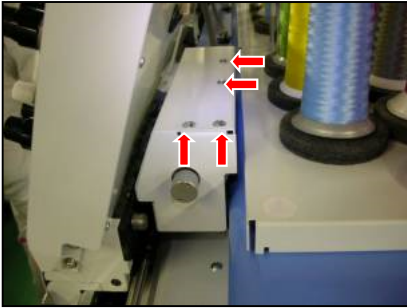


3. Disconnect a Conector (Yellow arrow part)

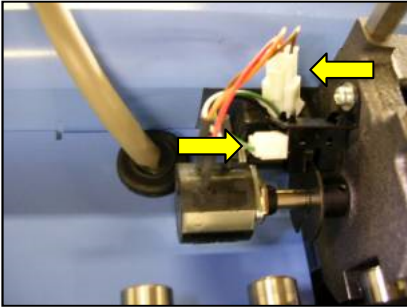


4. Remove screw and exchange Sensor board then connect to a connector back.

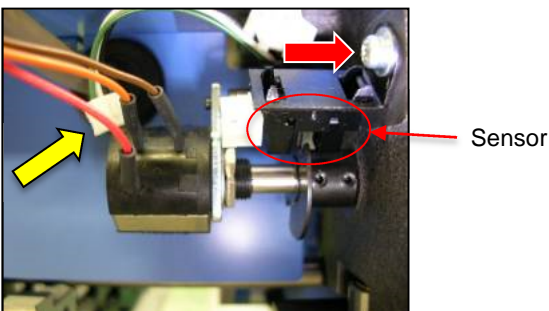


5. Loosen screw and pull potentiometer out

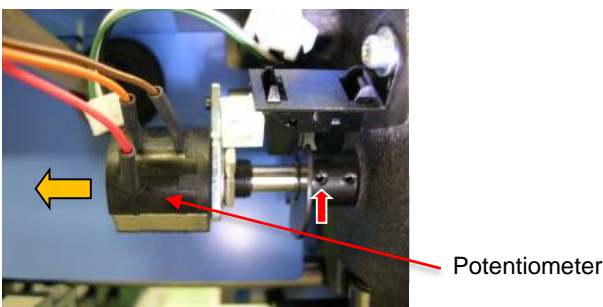


6. Loosen slit collar fixing screw and make slit collar free to turn

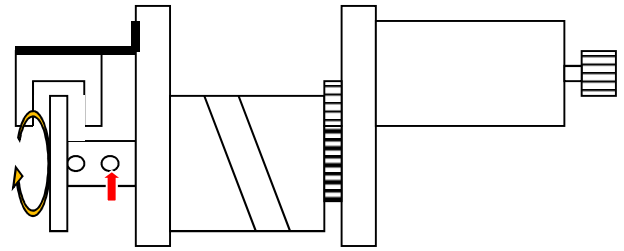

7. Adjust notch position of slit collar to be sensor, and cam position where moving head does not move

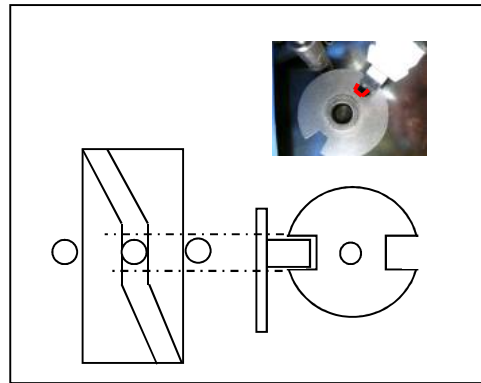

8. Connect harness of potentiometer

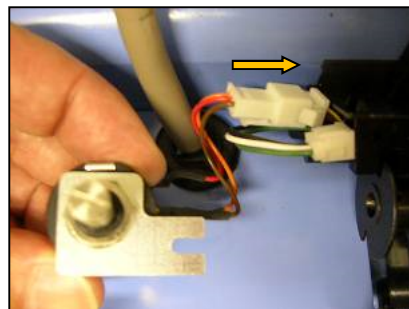


9. Turn on machine power



10. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.





11. Press **Machine Test**

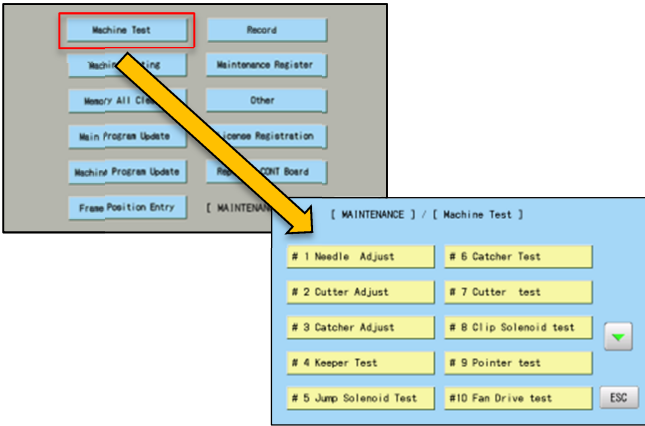


11. Press **#1 Needle Adjust** and press **Position**

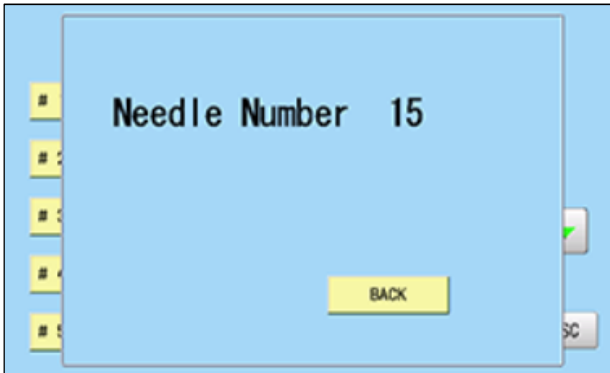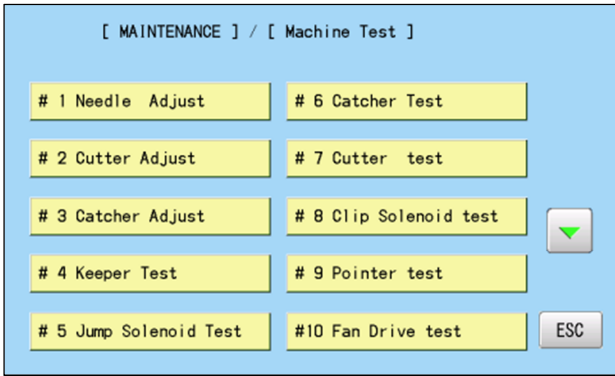

13. Turn shaft of potentiometer and set position where * mark and needle number (15) appear on screen with sound.

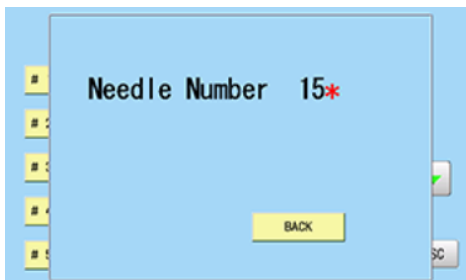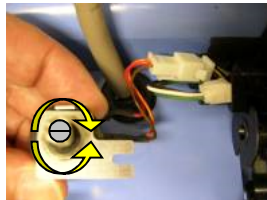


14. Set potentiometer and fix

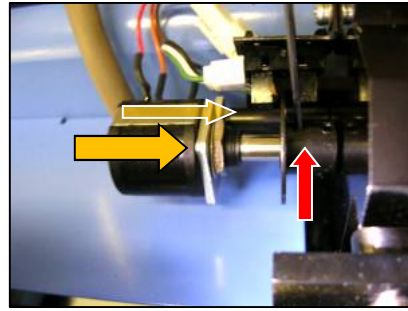

<check>

Sensor is located at notch center of slit collar and * mark is shown on screen

The position of sensor is not located at notch of slit collar, re-adjust again

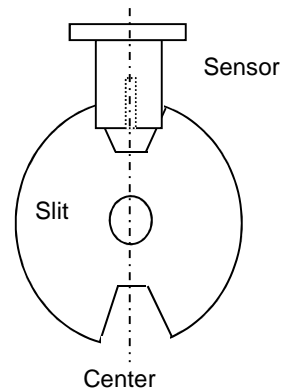

15. Turn knob and move head to 1st needle position

<check>



* mark appears, when notch center of slit collar comes sensor position. If position is not matching, please re-adjust again

E2-6 Exchange Thread trimming sensor

1. Take table cover out




2. Exchange sensor and connect haeness

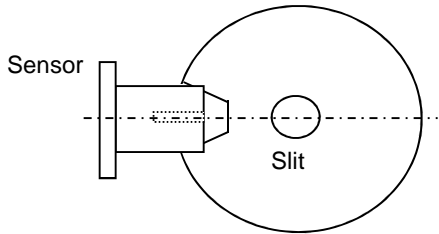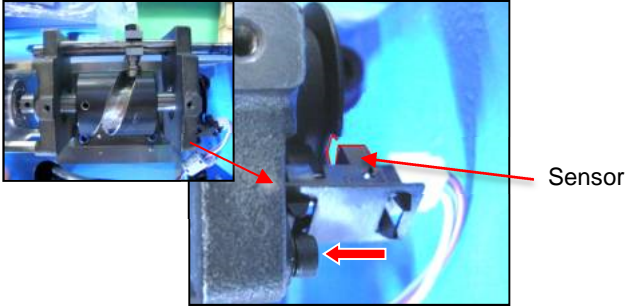


<note> Sensor should place at center of slit


3. Loosen Cap screw (1pc)

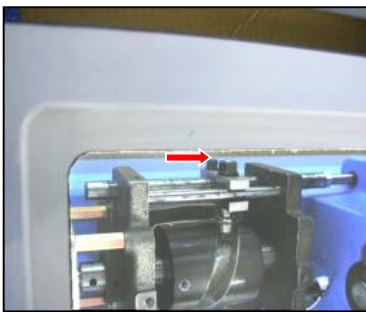


4. Turn CAM and confirm that shaft is not moving

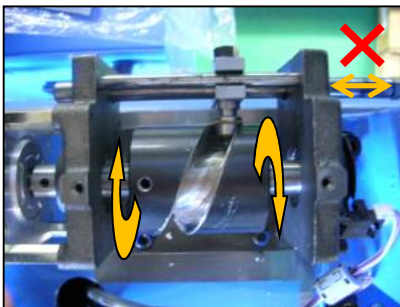


5. Turn CAM and set sensor position is out from slit. Power on and press **NEXT** on control box

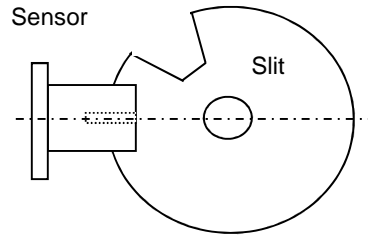

6. CAM turns and stops at stopping position automatically. Check position of moving knife

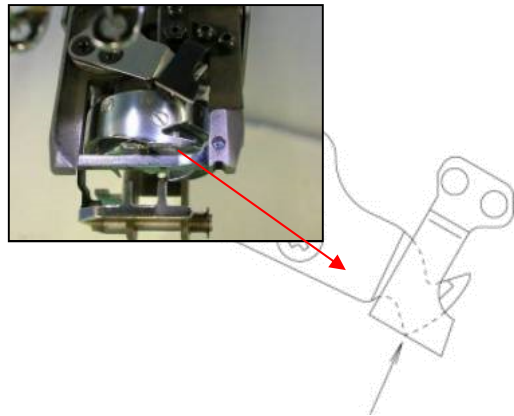

Position of Moving knife and fixed knife

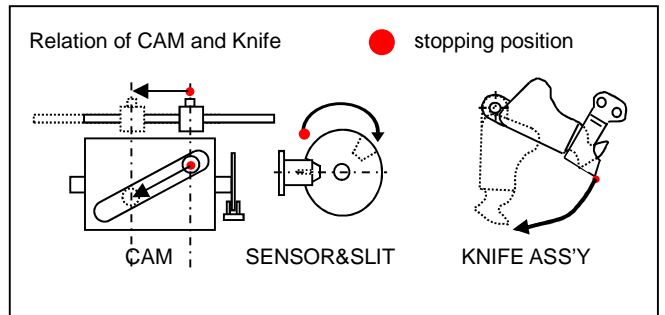


7. Fix Cap screw



Set cover


E2-7 Exchange X-Y Position Sensor

1. Unscrew and take cover out

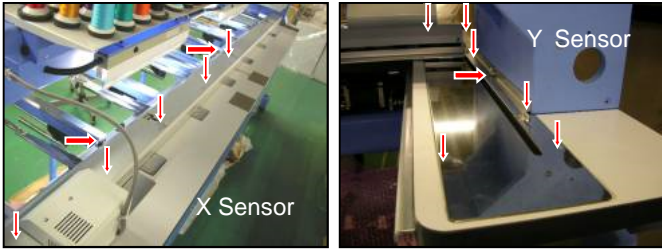


2. Unscrew and take Position Sensor Circuit Board.

Then take harness out

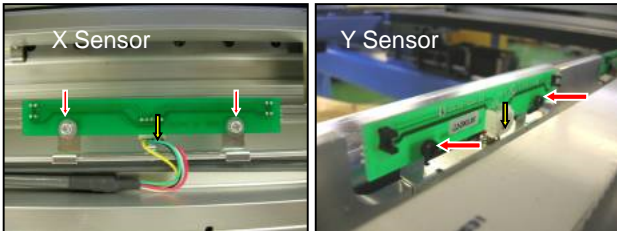

3. Replace Board and set harness, and fix by screw

<note> Adjust position of detecting plate to be center of sensor

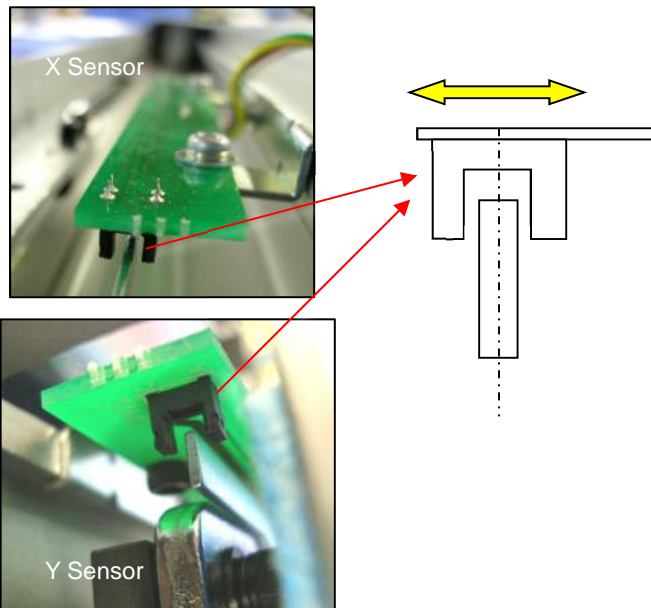

4. Set cover

5. Set coordintes

Refer [E5-6 Position- Registration of coordinates for positioning sensor]

E2-8 Exchange of Servo amplifier

In case of replacing parts was purchase as spare parts, Parameters are already pre-set at factory.


ID number of Servo amplifier is different by model, please refer to 「E7-1 / E7-2 Electrical connection diagram」

Please contact us if you will use Servo amplifier of other model.


<Note> Make sure power plug is disconnected during the process

1. Remove power supply box.

Remove the screws at the five places below.

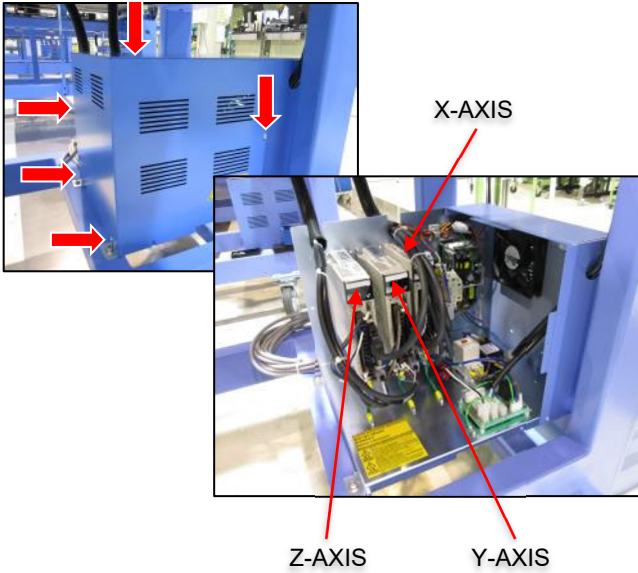


2. Disconnect a connector (Yellow arrow part) from Power relay circuit board.

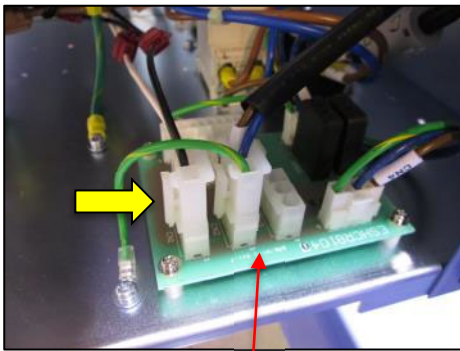


Relay board

3. Disconnect a connector (Yellow arrow part) and remove 2 screw of Earth terminal (Yellow arrow part) which need exchange.

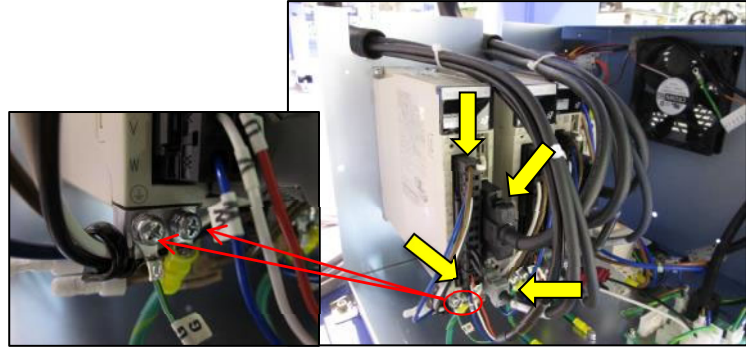

4. Remove the servo amplifier you want to replace.

Remove the screws at the tow places below.

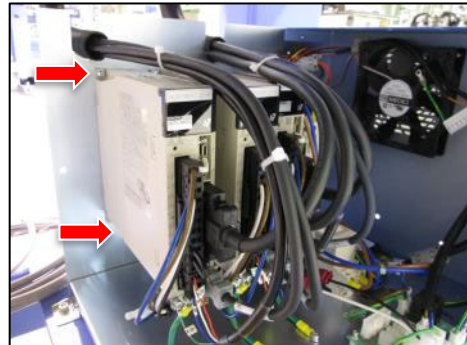

5. After exchange of Servo amplifier, proceed in reverse order and put the cover back on.

End of process.


E2-9 Servo amplifier setting

In case of replacing parts was purchase as spare parts, Parameters are already pre-set at factory.

Please refer this manual only when you need to use Servo amplifier that is set with different numbers of head.

Prepare PC and USB cable.


Please ask us for Setting data file of needed model.

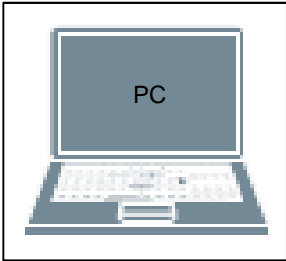

USB Cable(mini-B type)


- As appeared below, please go Yaskawa web link.
Then, please download Sigma Win and install it to a personal computer.
For more information on installation of Sigma Win, 'please refer to Yaskawa web link.

2. Connect PC(USB connector) and Servo amplifier (CN7) by USB cable.

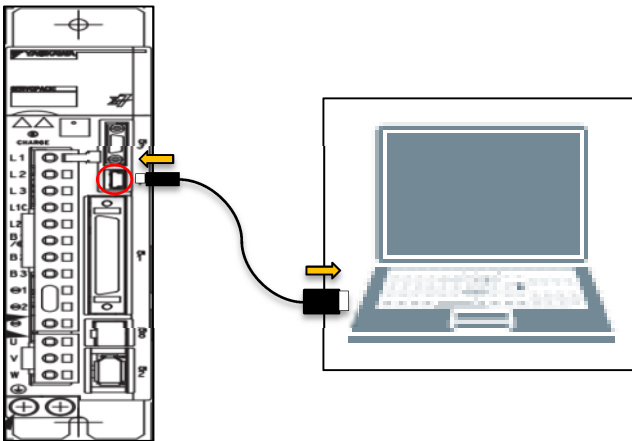


3. Start up by double-click after installation is done.


4. Please click "SERVOPACK".

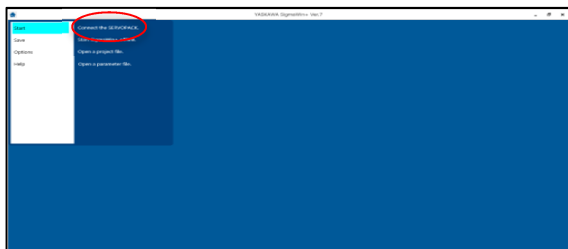


5. Please click "Search Again" to search currently 'hooked-up servo pack.

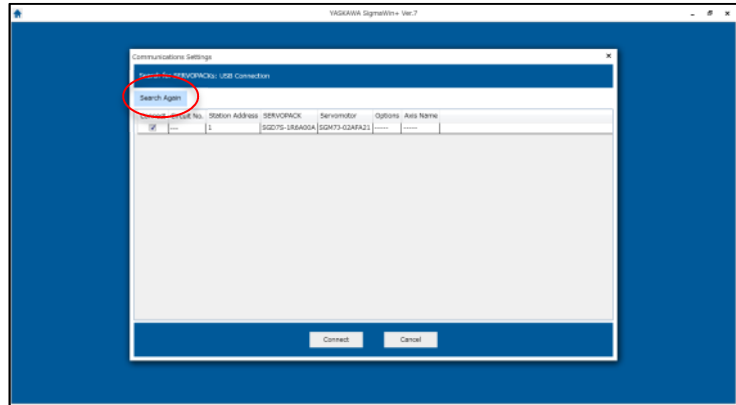


6. Please click "USB".

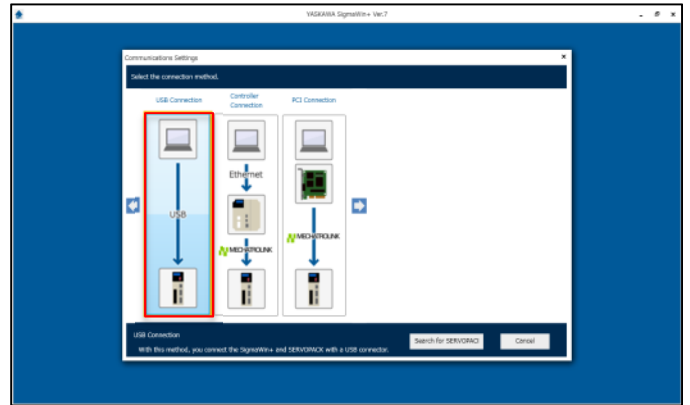


7. Search result will appear. Then, please click "Connect" 'to hook up to servo pack.

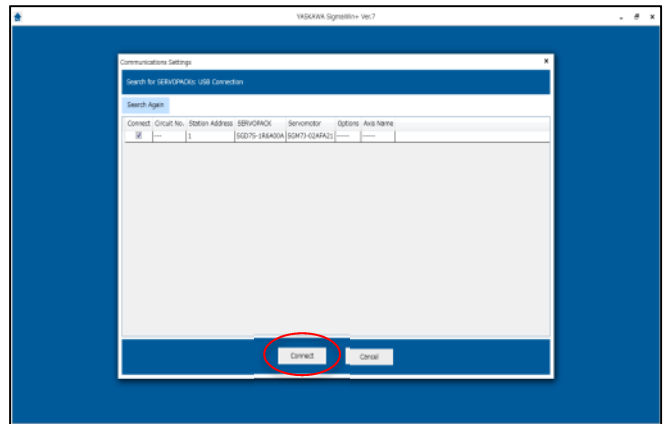


8. Please click the icon to reach menu.

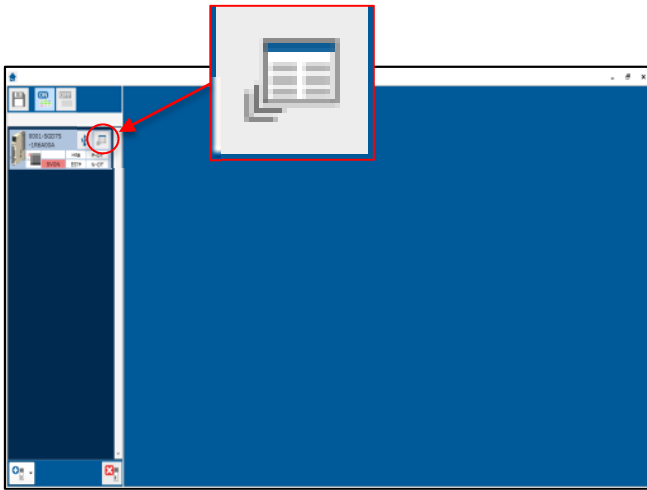


9. Please click "Edit Parameter" in menu.

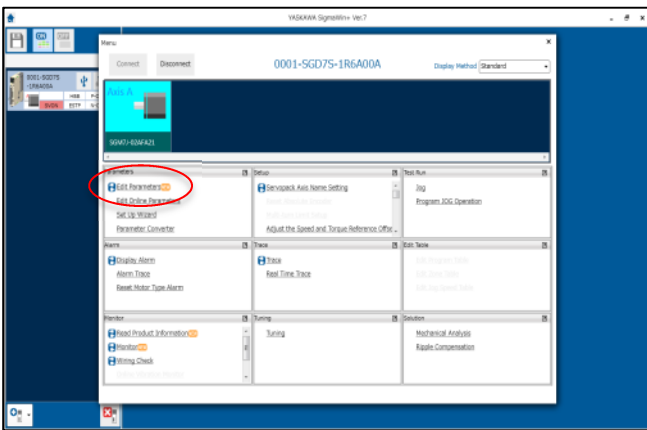

10. Please click "Import" to read setting parameter.

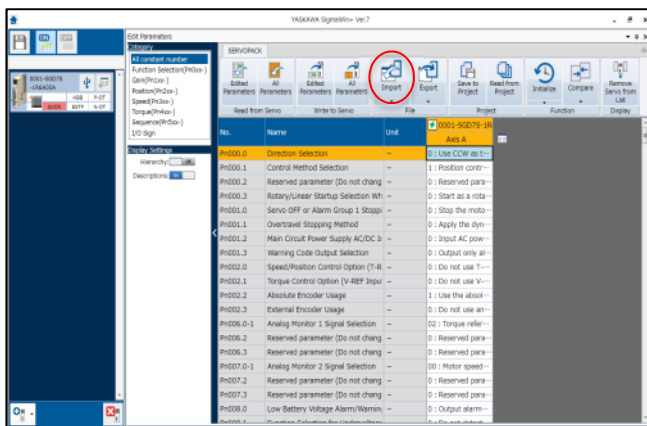


11. Please click "Usrs(servopac file) to select filename(extension).

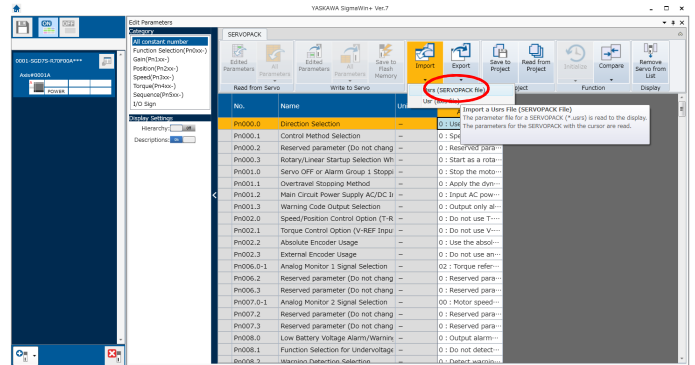


12. Select setting data file by model.

Please contact us for Setting data file by model.

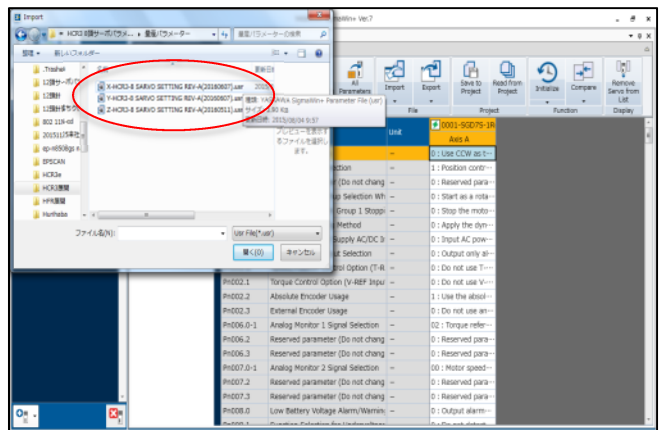


13. You will be asked if setting information of a file to have been read is acceptable to be stored. Then, please click "YES".

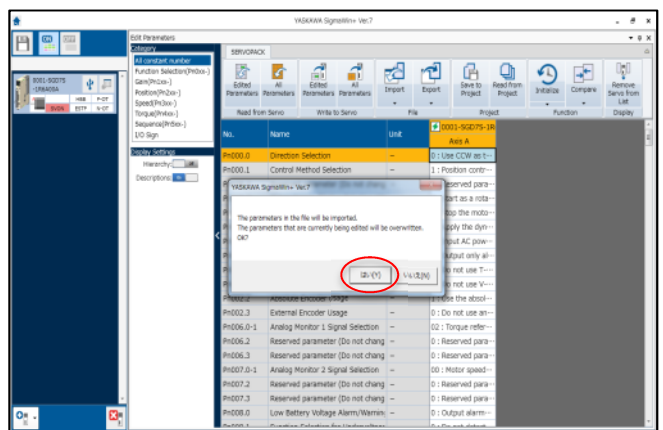


14. Setting information of a file to have been read will appear.

Then, please click "All Parameter" to store into servo pack.

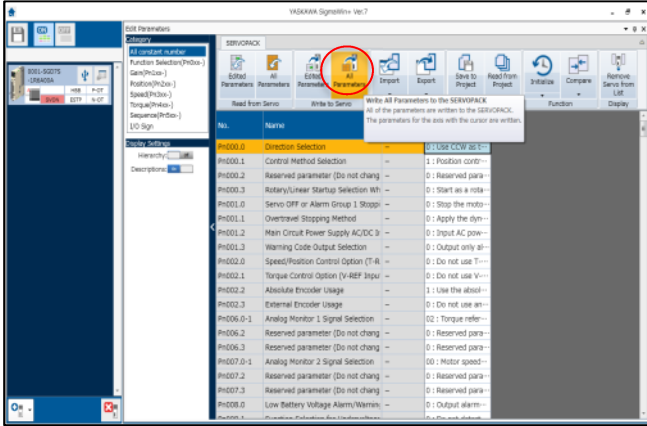


• When a message appearing below, please click "No".

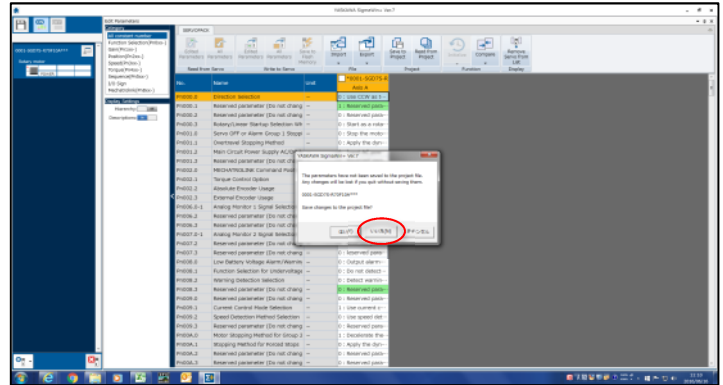


End of process.

15. After completion of storing into servo pack, a message appearing below will appear.

Then, please click "OK".

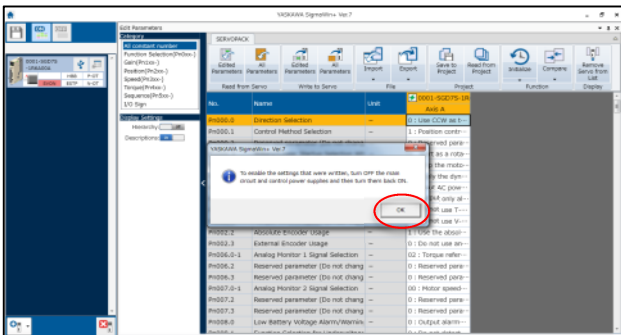

16. Stoeing is completed. Please click "x".

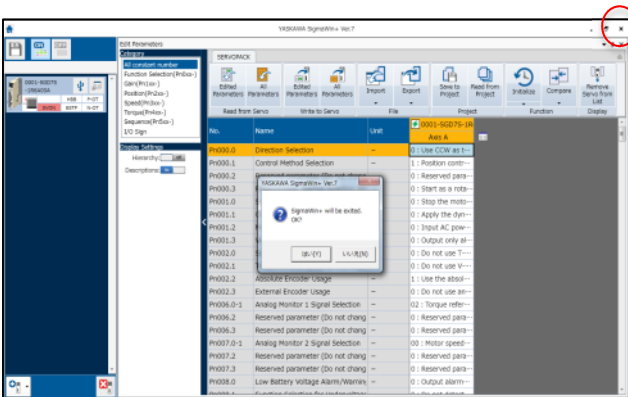


E2-10 Exchange of switching power supply and adjustment of output voltage

<note> Make sure power plug is disconnected during the process

1. Remove power supply box cover.

Remove the screws at the five places below,

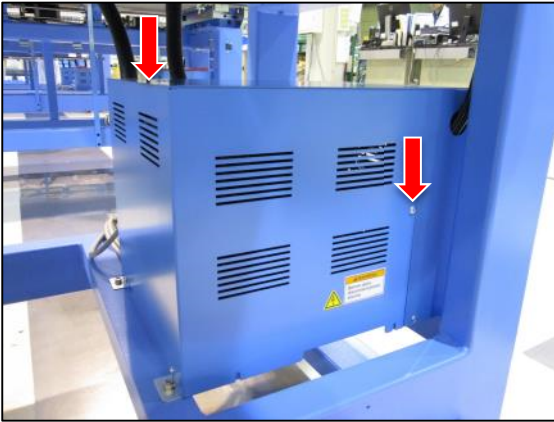

2. Disconnect a connector (Yellow arrow part) and remove 4 screws that are fixed Switching power supply.




3. Proceed in reverse order of process 2 and install the board.

4. Remove cover right.


Remove the screws at the six places below.



5. Set Digital Tester as 「DC」 range.

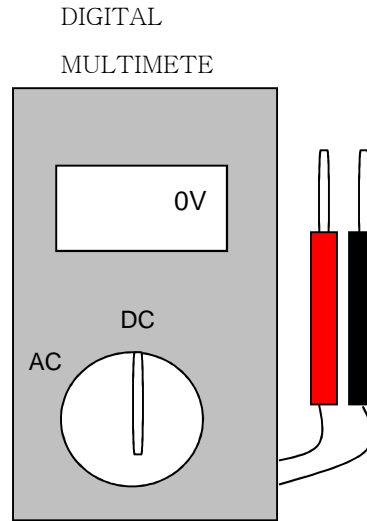


6. Insert Digital tester probes into the CN28 socket of CONT-R2 board.

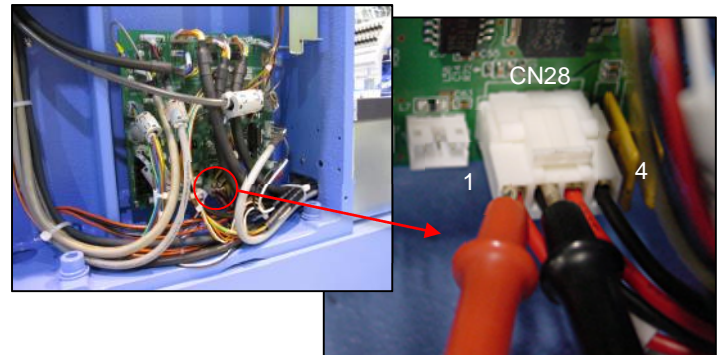

<note>

※ Insert Red probe into the 1st Pin of CN28 and Black probe into the 2nd Pin of CN28

7. Turn the machine power on and rotate the VR (volum) of Switching power supply and adjust to 「24V±0.1V」

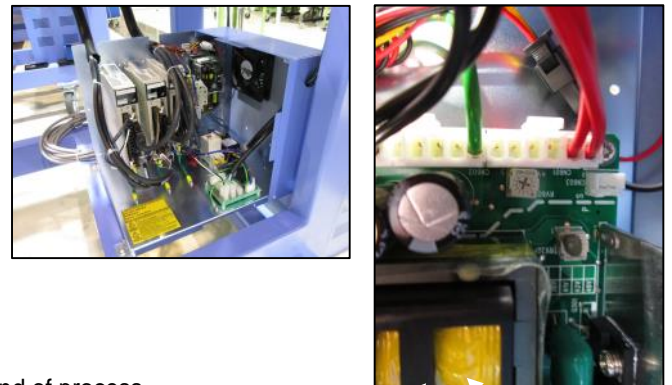

End of process.

E2-11 Exchange Cooling Fan


<note> Make sure power plug is disconnected during the process

1. Remove power supply box cover.


Remove the screws at the five places below.




2. Disconnect a connector (Yellow arrow part)

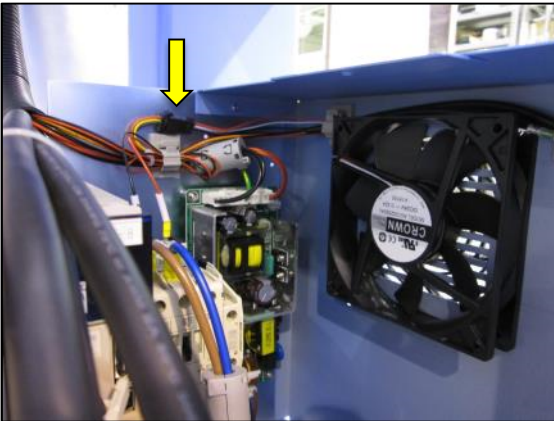

3. Remove the filter on the right side of the power supply box.

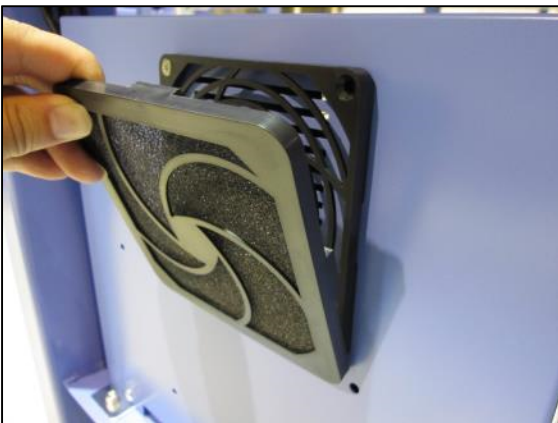


4. Unscrews fan cover (note : nut is reverse side).

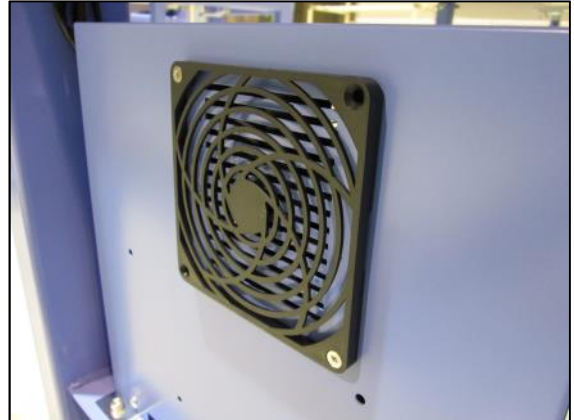

5. Proceed in reverse order and exchange to a new Fan.

<note1> Arrow mark side should come to a left side

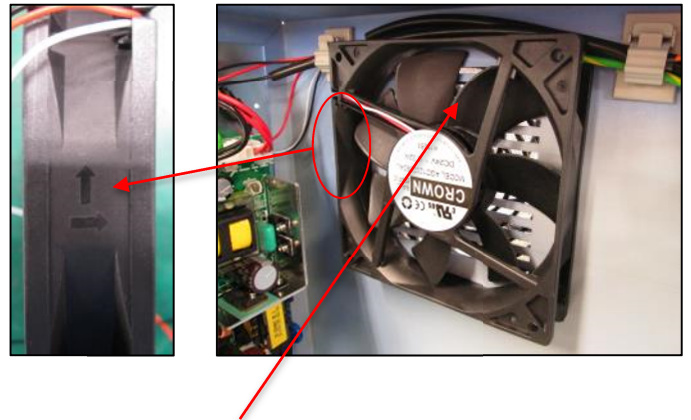

<note2> Make sure fan is not interfering harness

End of process.


E3 Open and remove control box

E3-1 Remove control box

<note> Make sure power plug is disconnected during the process


1. Remove cover right .

Remove the screws at the six places below.

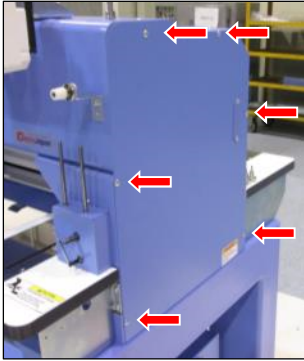


2. Disconnect a connector (Yellow arrow part).

Remove screws that fix harness

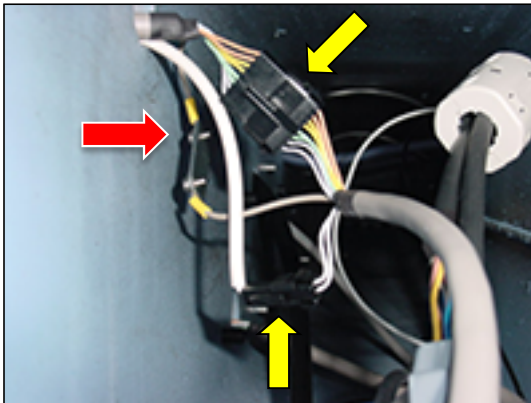

3. Remove Clamp filter.



Remove three sets screws on bracket A as shown in the figure below.

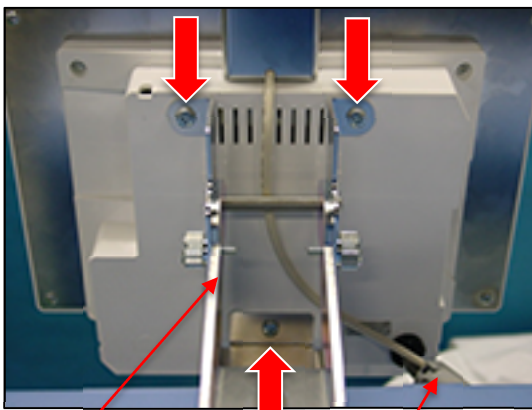

bracket A

Clamp filter


4. Remove control box.

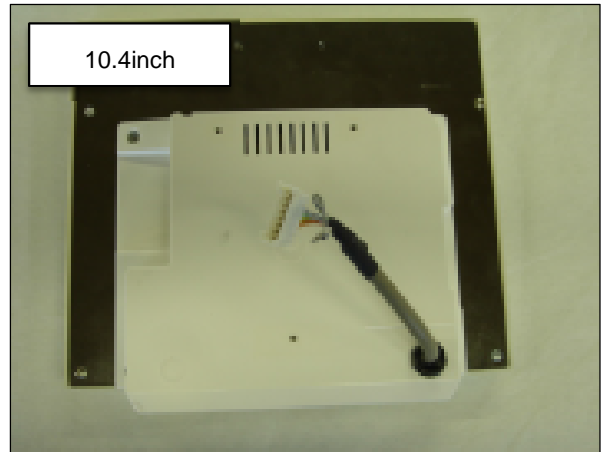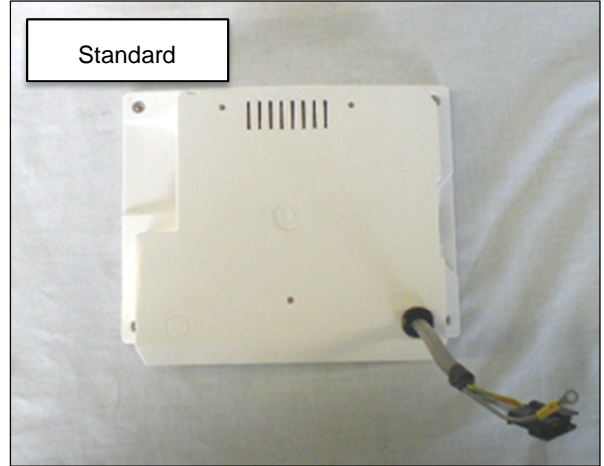


Please reverse procedure when installing control box.

E3-2-1 Remove LCD-CE-MX board (S.No. ~1095015)

1. Remove four setscrews as shown in the figure below and remove rear cover.

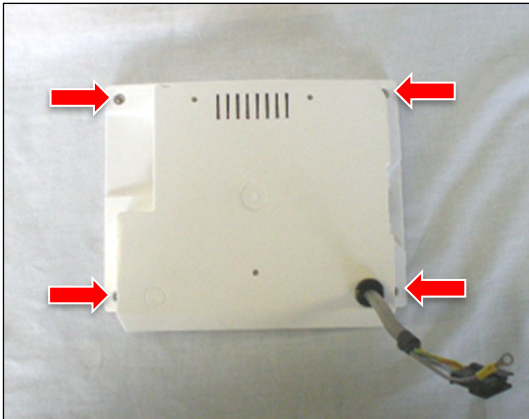


2. Remove connectors for SW cable, Box cable, cable for LCD inverter (red/white).

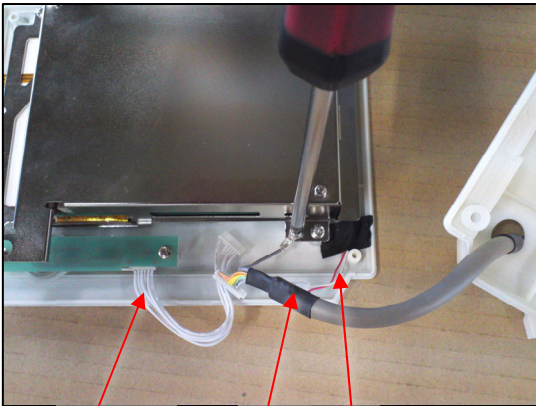


SW cable Box cable
Cable for LCD inverter (red/white)


3. Remove sealed case A.

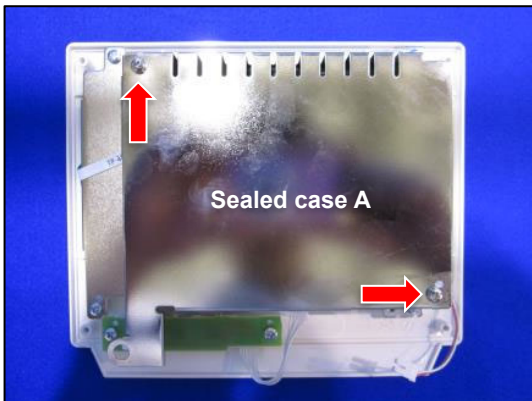


4. Remove core module.

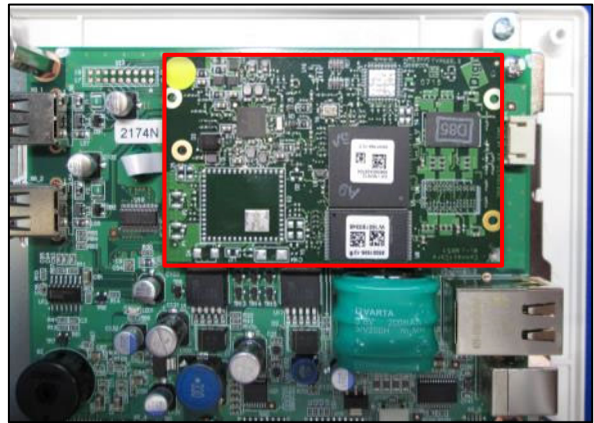

5. Remove narrow flat cable for LCD unit.
Make slight slide and remove the cable

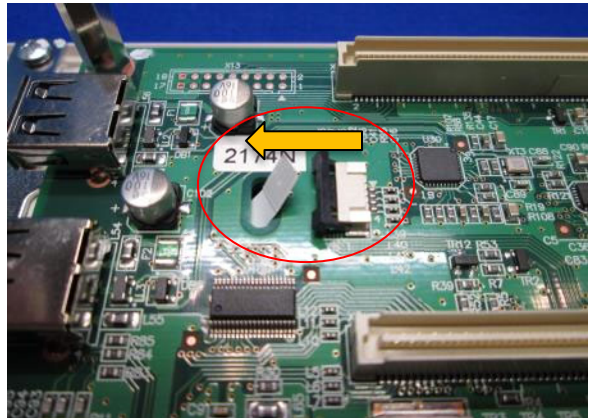

6. Remove two sets screws and two studs.

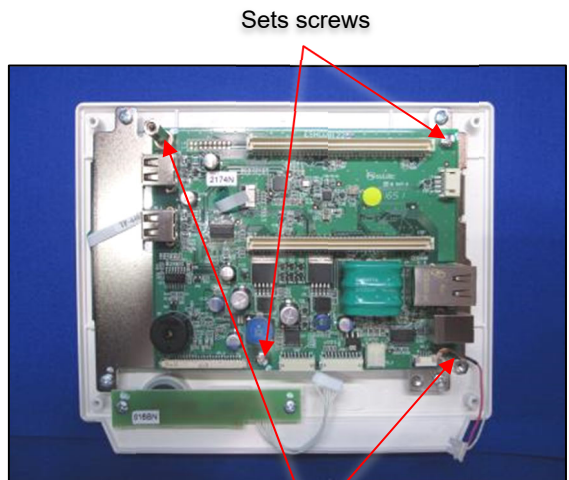


Sets screws

Studs

7. Lift LCD-CE-MX board as shown in the figure below.

Remove wide flat cable for LCD unit.


Slightly slide to the side and remove cable.

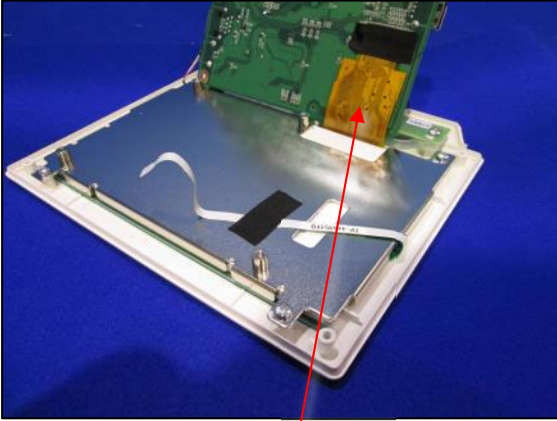

Wide flat cable

8. Remove display bracket and LCD unit.

Remove 4 screws. (Red arrow part)

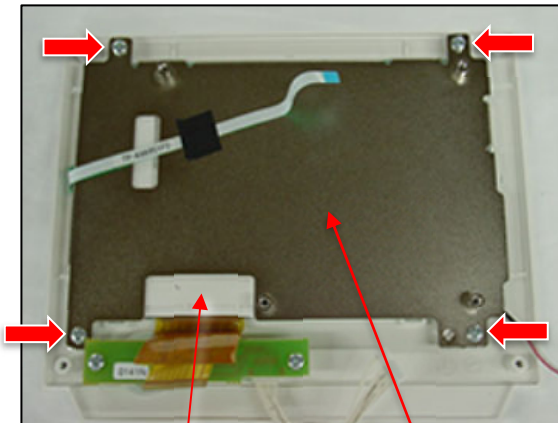

LCD unit

Display bracket

9. Remove touch panel.




Touch panel

Please reverse procedure when installing LCD-CE-MX board.


Adjust clock function by referring to instruction book After power back on.

E3-2-2 Remove LCD-T board (S.No. 1096001~)

1. Remove four setscrews as shown in the figure below and remove rear cover.

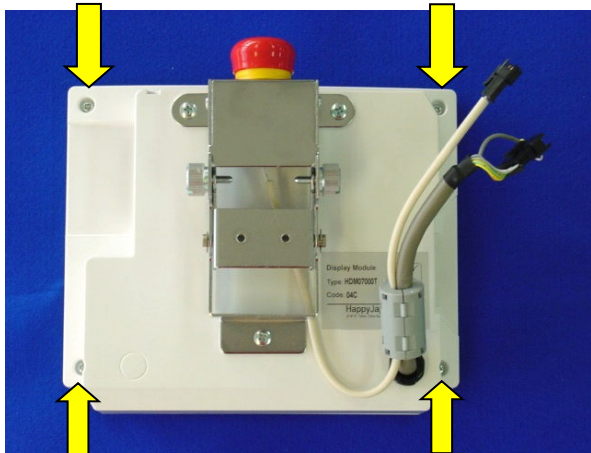


2. Remove connectors for SW cable, Box cable, cable for LCD inverter (red/white).

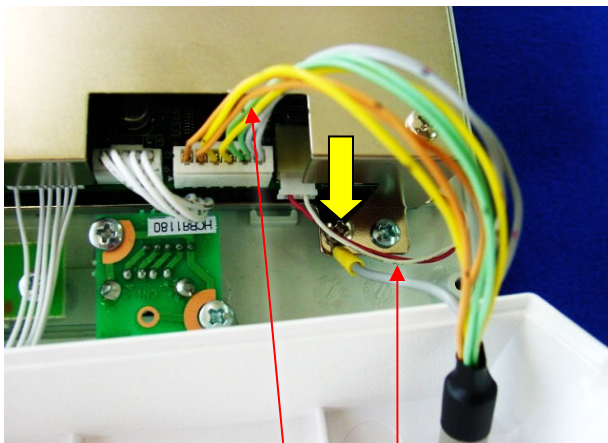

Box cable
Cable for LCD inverter (red/white)


3. Remove set screw and sealed case A.

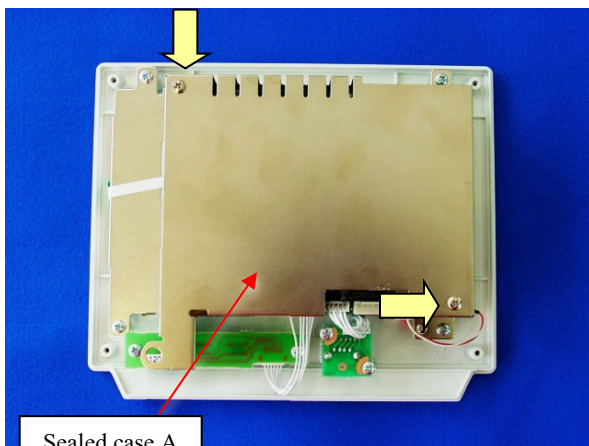


Sealed case A

4. Remove core module.

Spread the latches on the left and right of the arrow outward, and raise the module toward you to remove it.

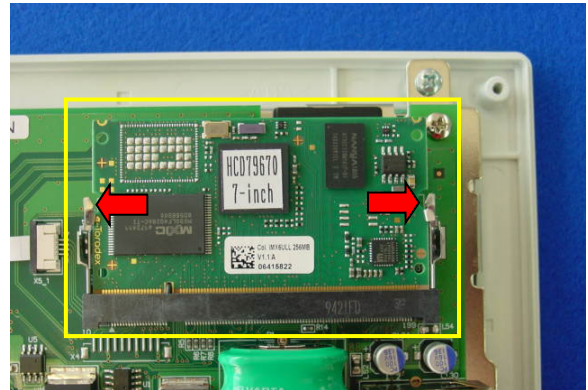


5. Remove narrow flat cable for LCD unit.

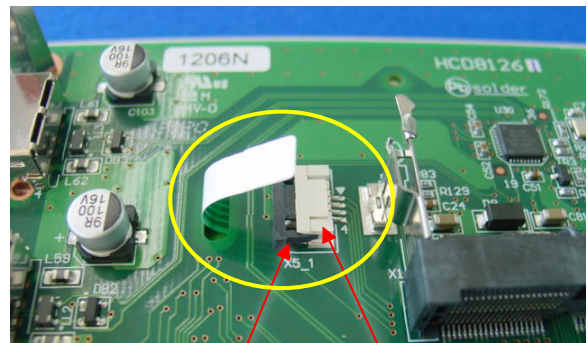

Latch Connector


When you pull the latch to cord side, the cord release.

When you push the latch to connector side, the cord fixed.

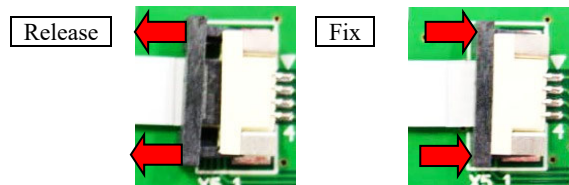

6. Remove two sets screws and two studs.

Release SW cable and USB relay cable.

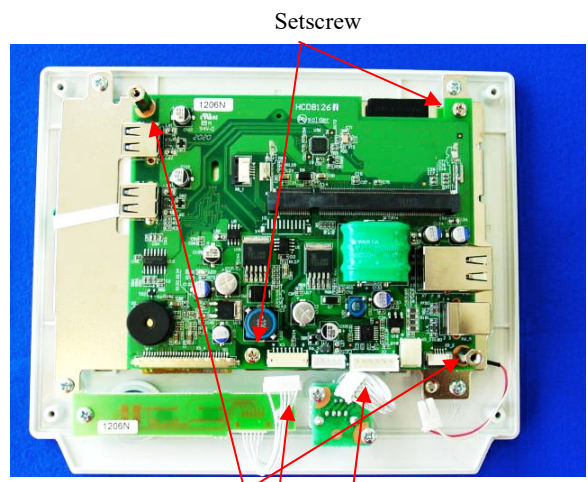


Stud USB relay cable
SW cable

7. Lift LCD-T board as shown in the figure below.

Remove wide flat cable for LCD unit.


(When the tape for fixing is stuck on connector, please peel off.)

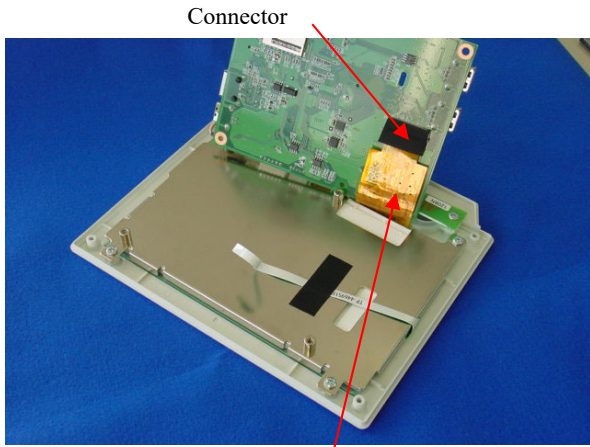


Wide flat cable

When you pull the latch to cord side, the cord release.

When you push the latch to connector side, the cord fixed.

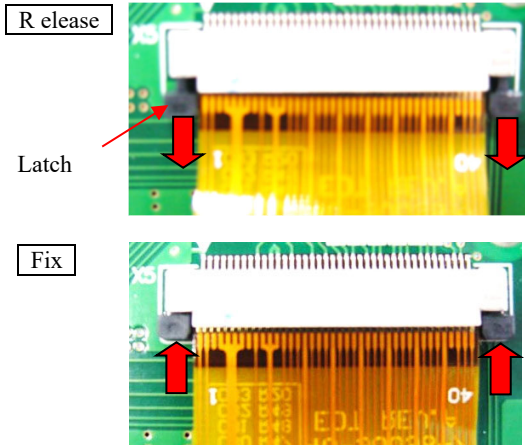


8. Remove four setscrews and LCD unit.

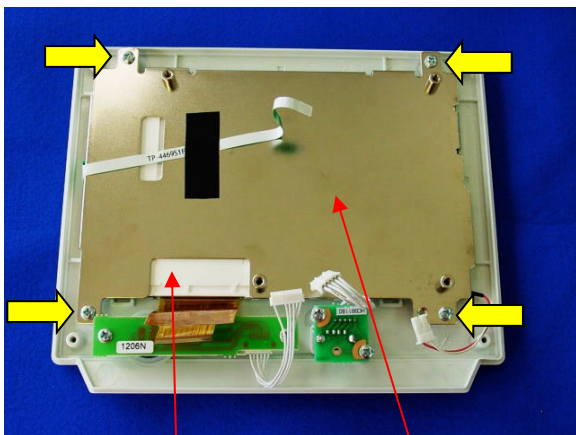

LCD unit

LCD bracket

9. Remove touch panel.

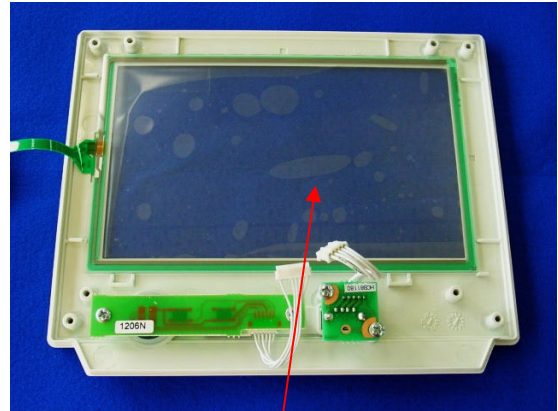


Touch panel

Please reverse procedure when installing LCD-T board.

E3-2-3 10.4" Remove LCD-CE-MX board (S.No. ~1095015)


1. Remove emergency stop blacket.

Remove four setscrews as shown in the figure below and remove rear cover.

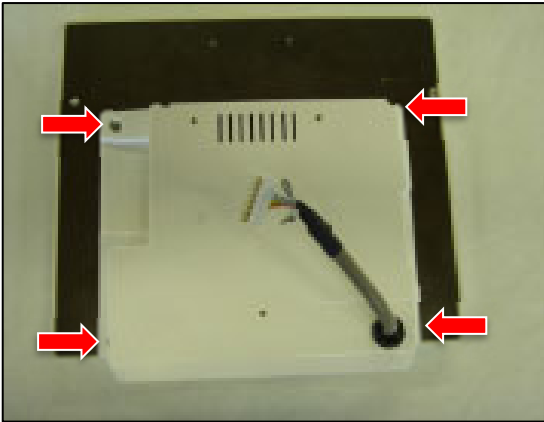

2. Remove the screw of the grounding terminal.


Remove connectors for Box cable.

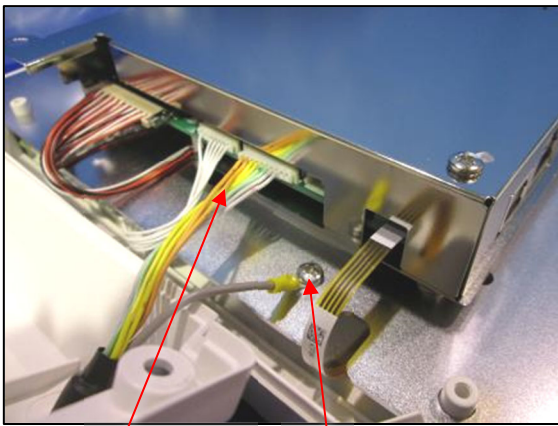


Box cable Ground terminal screw

3. Remove sealed case A.

Remove the screws at the tow places below.

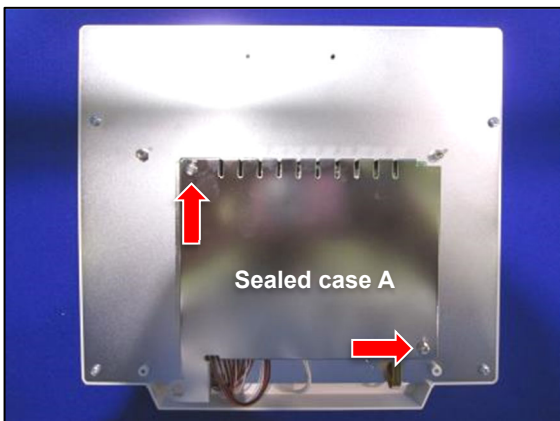


4. Remove connectors.

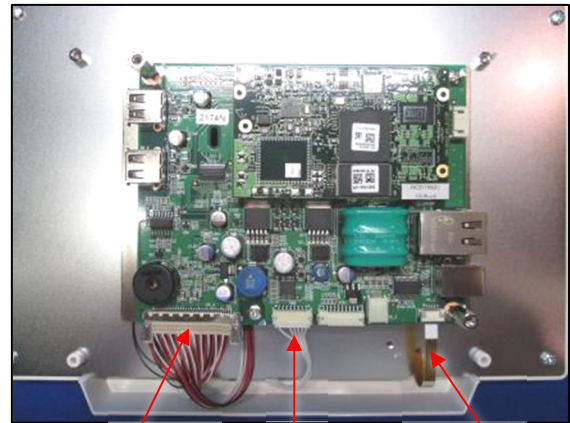


LVDS cable SW cable Narrow width flat cable

5. Remove two setscrews and two studs.

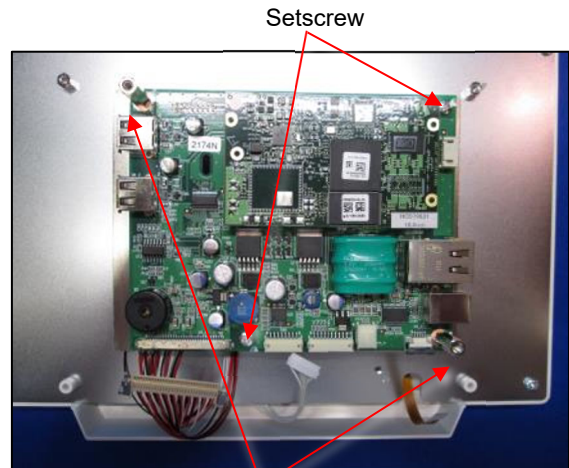


Stud

6. Remove sealed case B.

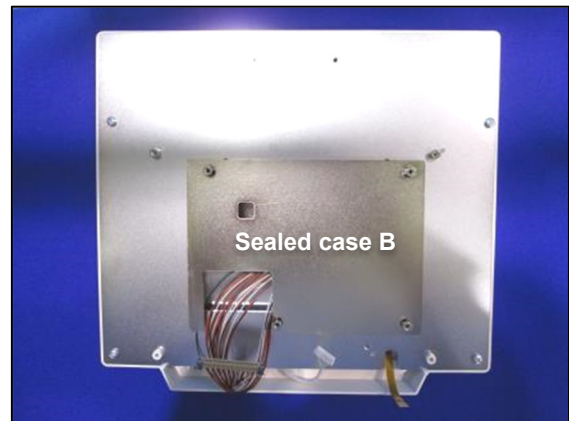


7. Remove rear cover.

Remove the screws at the four places below.

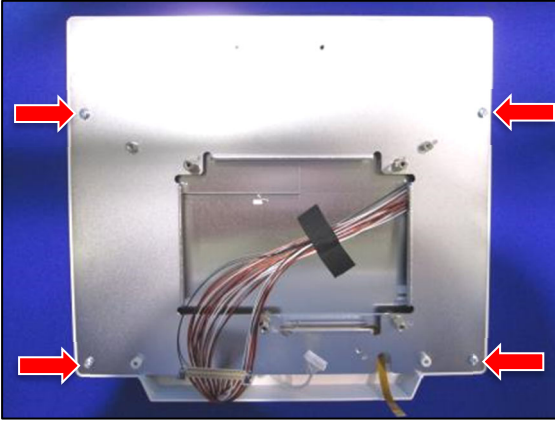

8. Remove LCD unit.

Remove the screws at the four places below.

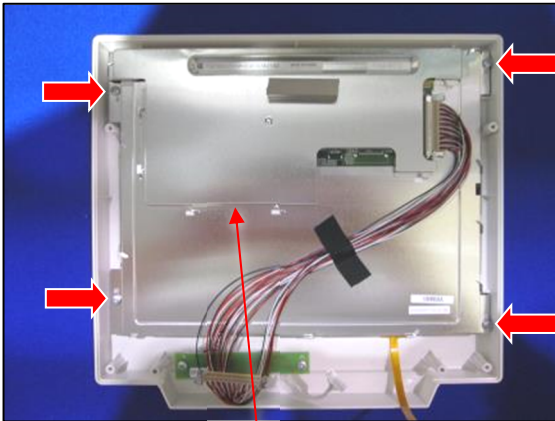

LCD unit


Please reverse procedure when installing LCD-CE-MX board.

Adjust clock function by referring to instruction book After power back on.

E3-2-4 "10.4" Remove LCD-T board (S.No. 1096001~)


1. Remove emergency stop bracket.

Remove four setscrews as shown in the figure below and remove rear cover.

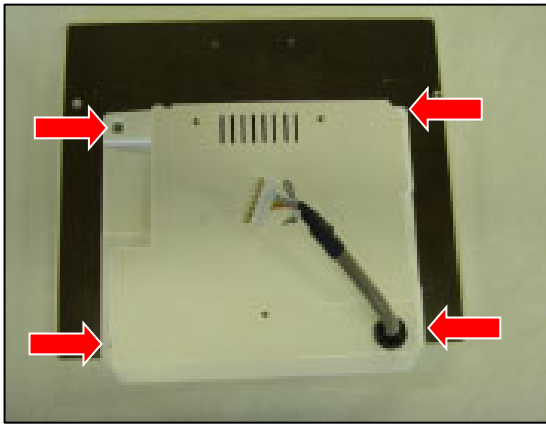

2. Remove the screw of the grounding terminal.


Remove connectors for box cable.

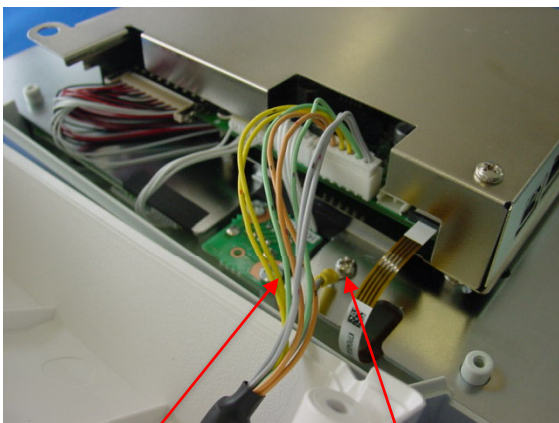

Box cable

Ground terminal screw

3. Remove sealed case A.

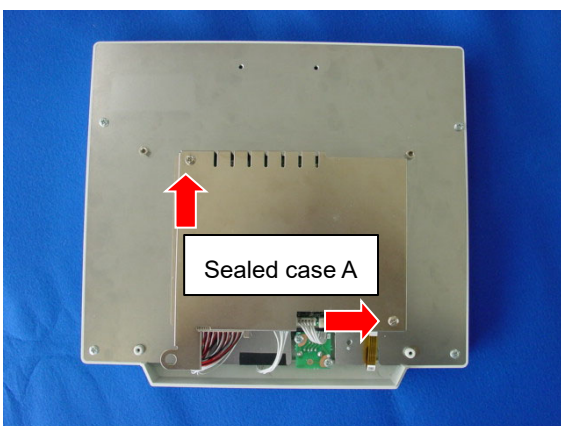

4. Remove connectors.




LVDS cable

SW cable

Narrow width flat cable


5. Remove two setscrews and two studs.

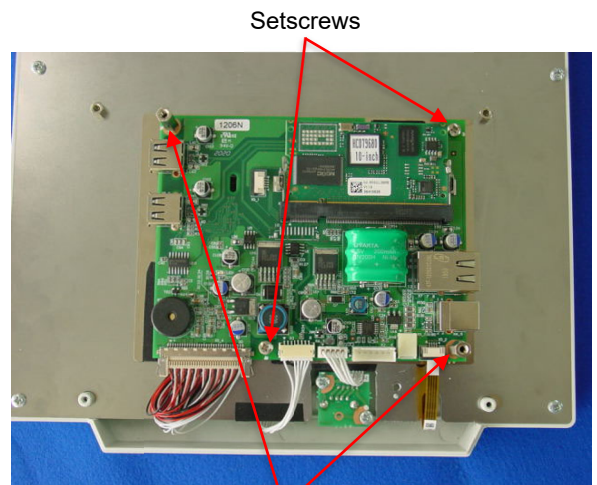

Setscrews


Stud

6. Remove sealed case B.

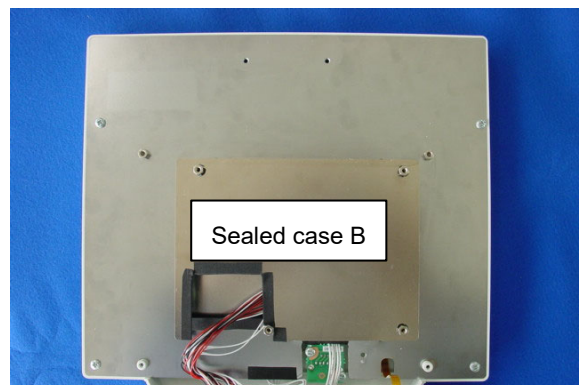


7. Remove rear cover.

Remove the screws at the four places below.

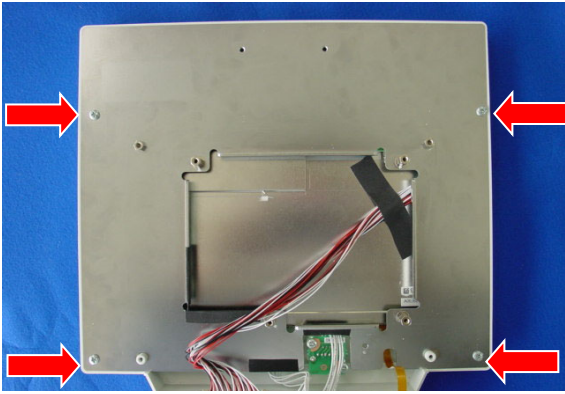

8. Remove LCD unit.

Remove the screws at the four places below.

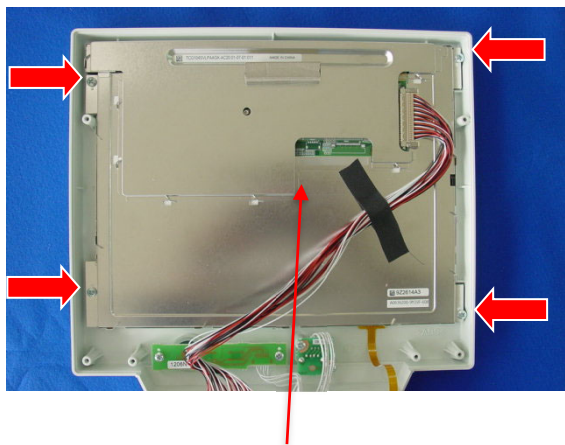

LCD unit

Please reverse procedure when installing LCD-CE-MX board.

Adjust clock function by referring to instruction book after power back on.

E3-3 Setting LCD-** board

Memory card


Insert our official memory card (EPZ0122*). Refer to the latest parts list for the parts number.

This memory card contains programs and data for an embroidery machine.


<Note> Please contact us if you need to use third party's memory card from local market.

Make sure to use 4~16GB SD card capacity and please ask us for needed data file.

LCD-CE-MX board (S.No. ~1095015)

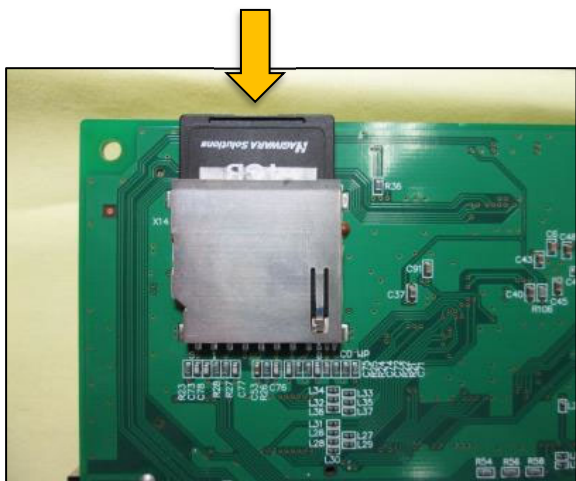


LCD-T board (S.No. 1096001~)

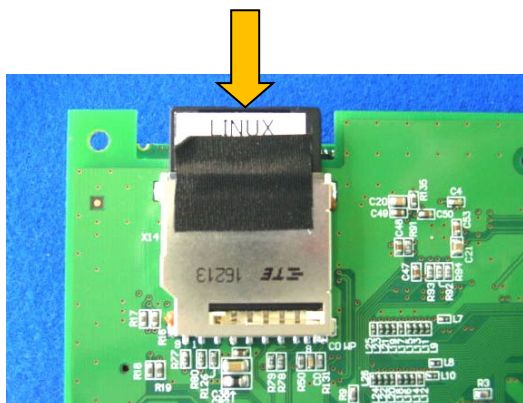

Back-up battery

The battery is used for back-up power source of real-time clock on an embroidery machine.

Replace new LCD-** board if clock dose not indicate the correct time after setting a clock and turning power switch OFF.

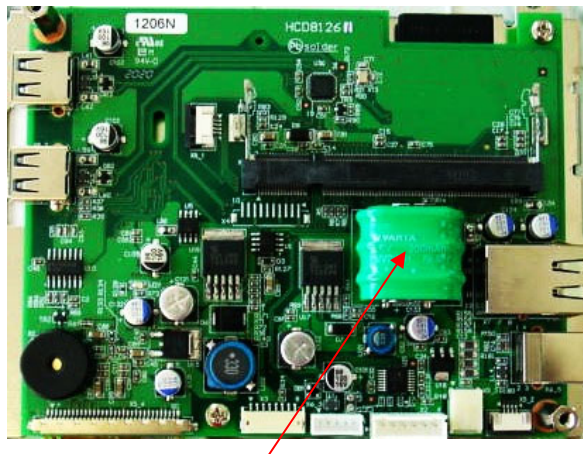

Back-up battery

(Photo shows the LCD-T board)

Disposal of back-up battery of LCD-** board



When disposing of the LCD-** board, remove the back-up battery.

Dispose of the back-up battery by following the method specified by each country or each region.

E4 Program update procedure

* The sequence of procedures of program update is described below.

If you need more details, please refer to each manual.

S. No. ~1095015

1. Prepare USB memory that has updating program. Proceed whole program update by selecting [MENU]>>[OTHER]>>[Version]	E4-2-1 Update the main program and the machine program.
2. Proceed Main program update by Menu of Maintenance mode	E4-2-2 Update the main program
3. Proceed Machine program update by Menu of Maintenance mode	E4-2-3 Update the machine program
4. [Replacement of CONT-R2 board] Register frame position in Maintenance Mode.	E2-1 Exchange and Setting of CONT-R2 Board
5. Press [MENU] button and select [System] in menu of [OTHER] for initialization of system.	E4-3 Initialization Initializing of machine speed
6. Press [MENU] button and select [speed] in menu of [OTHER] for automatic speed setting.	
7. [Replacement of LCD-CE-MX board] Calendar setting.	Instruction book 5-2 Calendar
8. End of process.	

S. No. 1096001~

1. Insert the updated program downloaded USB memory to the USB port of the machine.	E4-1 Preparation for program update
2. Press [MENU] button and select [Version] in menu of [OTHER] for update each program.	E4-2-4 Program update
3. Press [MENU] button and select [System] in menu of [OTHER] for initialization. of system	E4-3 Initialization Initializing of machine
4. [Replacement of CONT-R2 board] Register frame position in maintenance mode.	E2-1a Exchange and setting CONT-R2 board
5. [Replacement of LCD-T board] Calendar setting	Instruction book 5-2 Calendar setting
6. end of process	

* If there is a problem with the machine after updating the program, press [MENU] button and select [Speed] in menu of [OTHER] for automatic speed setting. (E4-3)

E4-1 Preparation for program update

S.No. ~1095015

1. Download latest program file from our Web-page and extract it.

- Program version : ***** for model HCH /HCS2 /HCD2 /HCR2 /HCR3 /HFR series with **7 inch touch panel**
- Program version : ***** for model HCH /HCS2 /HCD2 /HCR2 /HCR3 /HFR series with **10.4 inch touch panel**

2. Copy the extracted file into the USB Memory,

You will find program file folder as below image in the PC after extraction.



<Note> Program folder should be copied to the root directory of USB memory

S.No. 1096001~

* Download updated program file.

Program

" UPDATE_*.**.IMG "

<Note>



- Copy the program to the root folder of USB memory.

E4-2 Update the program


E4-2-1 Update the main program and the machine program (S.No. ~1095015)

1. Insert USB memory to the machine panel which has Version up program.




2. Press  (menu) and Press  (Other)

3. Press **Version**


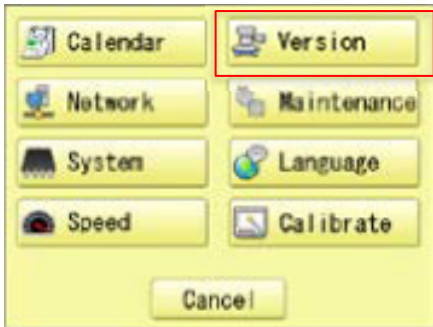


4. Press **UPDATE**

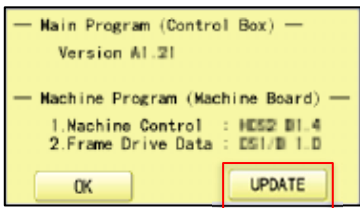

5. Press **OK**.

Installation will be started.

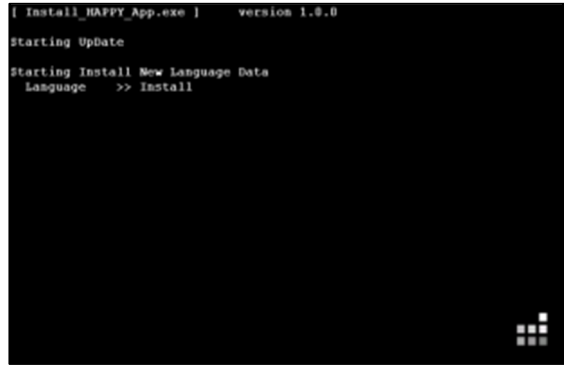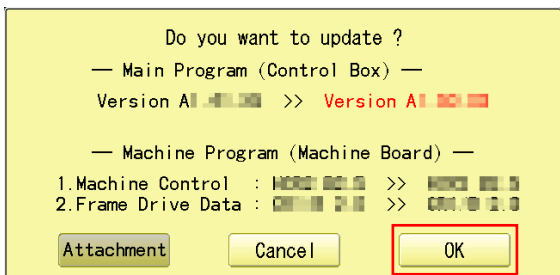

When the version of each program and the version in the update file are different, the version number is displayed in red.

<Note>

- ※Do not remove USB memory during installation
- ※Installation will take sometime and do not turn off the machine power during Installation

In case of writing error and displays「Error」please try to install again

Monitor will be reboot automatically when updates is finished

6. Press **NEXT**



7.Refer to manual 「E4-3 Initialization・Initializing of machine speed」and proceed「Initialization the system」and「Initializing of machine speed」.

That is end of program updates process.

E4-2-2 Update main program (S.No. ~1095015)

1. Insert USB memory to the machine panel which has Version up program.




2. Turn on machine power


3. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.




4. Press **Main Program Update**

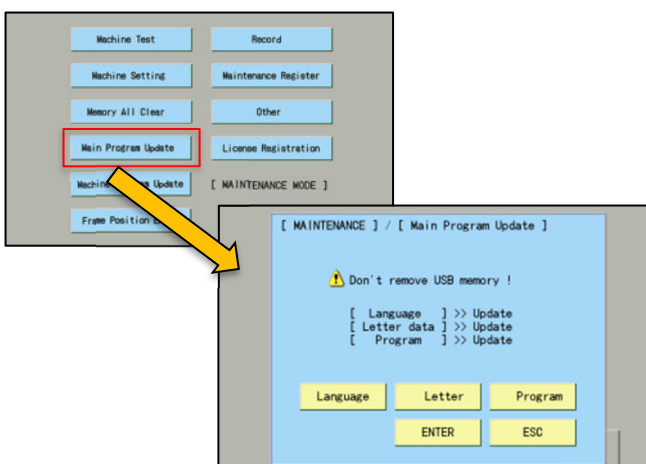

5. Select following 3 items **Language**, **Letter**, **Program** then confirm 3 items are displayed as "Update"


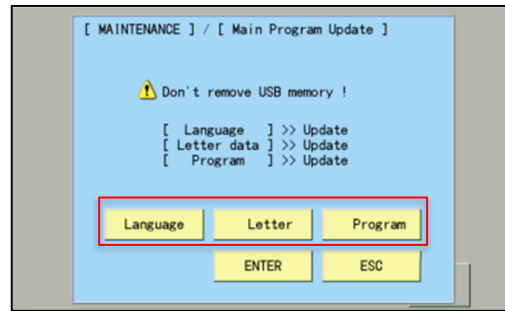


6. Press **ENTER**

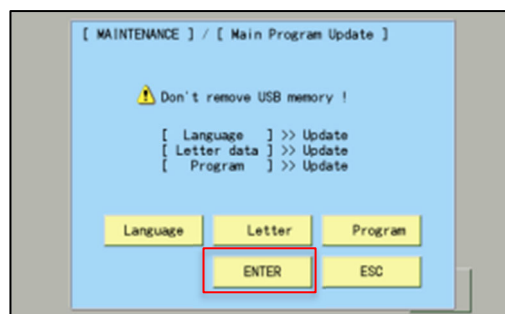

7. Press **OK**.

Installation will be started.

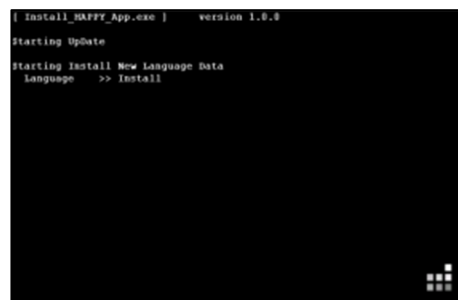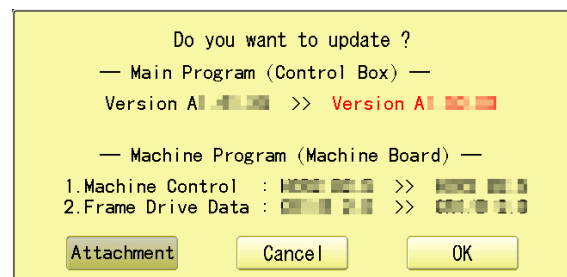

When the version of each program and the version in the update file are different, the version number is displayed in red.

<Note>

- ※Do not remove USB memory during installation
- ※Installation will take sometime and do not turn off the machine power during Installation

In case of writing error and displays 「Error」 please try to install again

Monitor will be reboot automatically when updates is finished

8. Press **NEXT**



9. Refer to manual 「E4-3 Initialization · Initializing of machine speed」 and proceed 「Initialization the system」 and 「Initializing of machine speed」.

That is end of program updates process.

E4-2-3 Update machine program (S.No. ~1095015)

1. Insert USB memory to the machine panel which has Version up program.




2. Turn on machine power

3. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.




4. Press **Machine Program Update**


Contents in the USB memory will be displayed

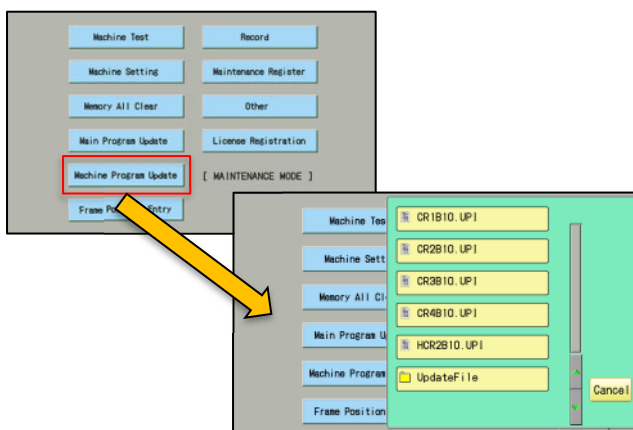

5. Select [UpdateFile]

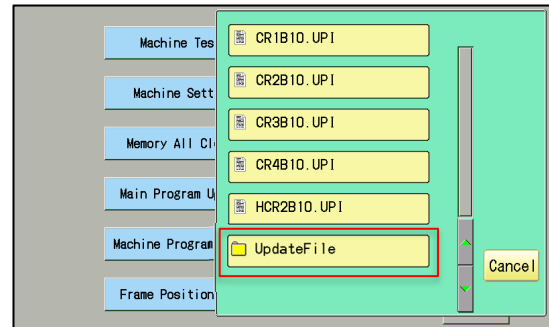


6. Select [MachineInstallData]

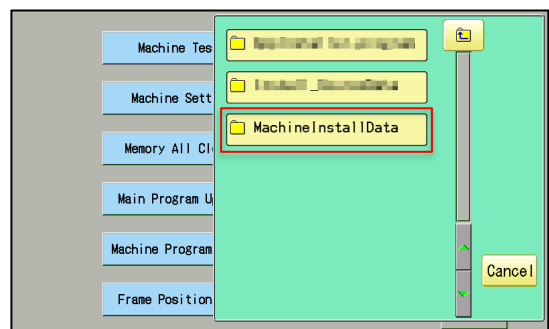

7. Select your machin model

Installation will be started and back to Maintenance mode menu screen once installation is completed properly.

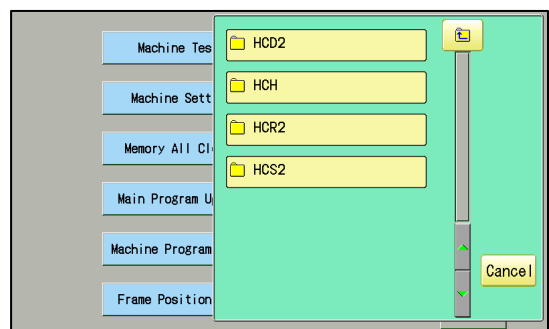

<Note>

- ※Do not remove USB memory during installation
- ※Instllation will take sometime and do not turn off the machine power during Installation

8. Shut down machine power and Turn on power again.

9. Press





10. Refer to manual 「E4-3 Initialization・Initializing of machine speed」and proceed「Initialization the system」and「Initializing of machine speed」.

That is end of Machine program updates process.


E4-2-4 Program update (S.No. 1096001~)

1. Insert USB memory that contains data for version up into insertion slot on the control box.


2. Press  (MENU) and press  (OTHER)




3. Press **Version**.

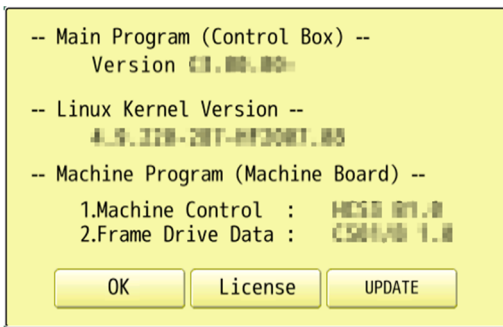

4. Press **UPDATE**.

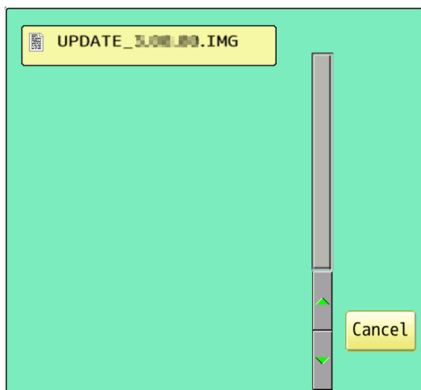

5. Select the file "UPDATE***.IMG".

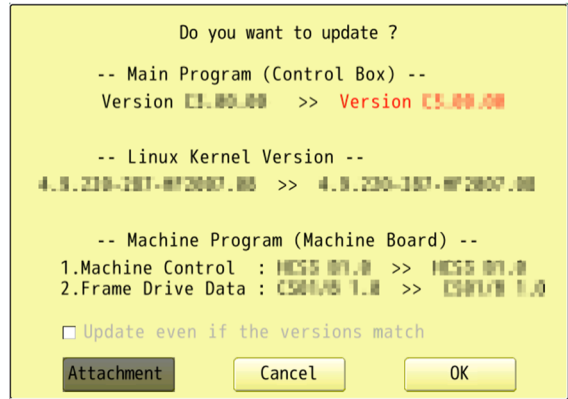

When the version of each program and the version in the update file are different, the version number is displayed in red.

Update even if the version match

- (OFF) : Only different versions of the program will be updated.
- (On) : All programs will be rewritten even if the version number is the same.(Up to 16 minutes)

<Note>

- * Please do not take out USB memory during installation.
- * Please do not turn off the power during installation (it will take for a while for completion of installation).

Retry updating when the screen shows "Error" due to writing error.

6. Press **OK**.

Installation of program begins.

Once update id complete, the machine will be rebooted automatically.



7. Press **NEXT** button.

8. Refer to manual 「E4-3 Initialization ・ Initializing of machine speed」 and proceed [Initialization the system].

* End of process.

E4-3 Initialization • Initializing of machine speed

Initialization the system

Perform this function only to fix problems with the machine.

When performed, all settings in the "OPTION" menu are lost.

Be sure to reset the "OPTION" menu after performing this function.



Initialize the PMS


Please activate this function when the embroidery machine has malfunction after the operation with Happy PMS (Production management system). Please refer to instruction book of "Happy PMS" for more precise information.

Initialize the Network (S. No. 1096001~)


When performed, all settings in the "Network" menu are lost.

1. Turn on the power. After the program start up,

press  (MENU) and press  (OTHER).

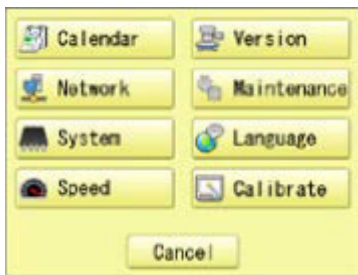

2. Press **System**.

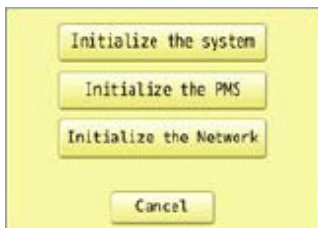


3. Press **Initialize the system**.

Go on to step 5.

Press **Initialize the PMS**.

Press **Initialize the Network**.

4. Press **OK**.

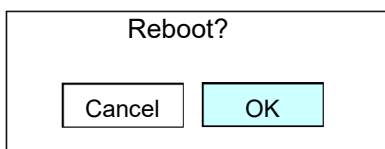

5. Press **OK**.

Formatting of the machines systems are carried out. Indicate HAPPY logo in screen.



End of process.


Initializing of machine speed

Setting of revolution of main shaft, which is suitable to the machine is required.

If setting is not done, the revolution may not speed up.

1. Turn on the power. After the program start up,

press  (MENU) and press  (OTHER).

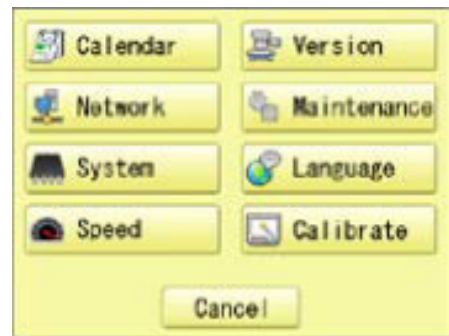

2. Press **Speed**.



3. Press **OK**.

Main shaft adjusts its revolution speed automatically.

Message complete will be displayed when setting is finished and it goes back to drive mode.

End of process.

E5 Maintenance mode



Maintenance mode consists of items as shown below.

- Machine Test—————Movement test, maintenance, and adjustment
- Machine Setting—————Machine control setting
- Memory All Clear—————Initialization of design memory.
- Main Program Update—————Update of operation program and language data
- Machine Program Update—————Update of control program and frame move data
- Frame Position Entry—————Registration of coordinates for positioning sensor
- Record—————Total number of stitches, Error occurrence record, Occurrence record by error type.
- Maintenance Register—————Registration of machine maintenance date(Normally not used at maintenance)
- Other—————Other (This item is neither configured nor used.)
- License Registration—————Limited usable period
- Replaced CONT Board—————Machine Setting Navigation after exchanging CONT board (Main program Ver.*1.34~)


E5-1 How to enter maintenance mode

1. Turn on machine power


2. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.

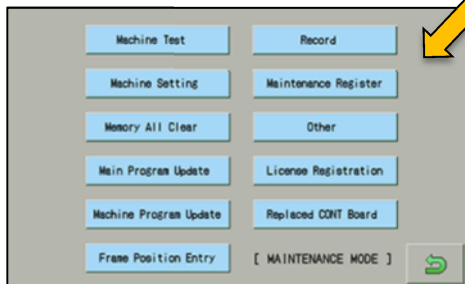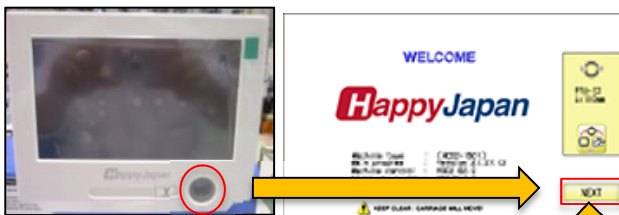

3. Press .

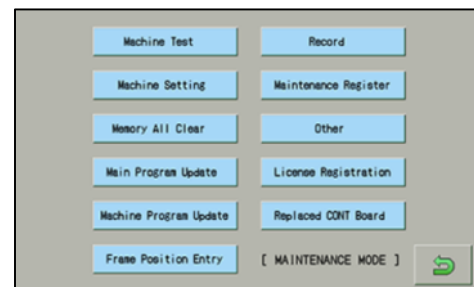

You can enter maintenance mode again by long key press

of  (Menu) at the Drive screen after maintenance mode is finished.

However, you cannot use the reentry method above once the machine is turned off and rebooted.

E5-2 Machine Test—Machine movement

Below operation will be moved solely. In some operations, actuator of motor will be moved, Keep hands and face away during movement for your own safety.

- #1 Needle Adjust : Input of Needle bar detect Potentiometer
At section of [Setting to detect needle position], this function can be used to set position of Potentiometer.
- #2 Cutter Adjust : Action test of moving knife Open-Close
Use this function to adjust stop position of Moving knife.
- #3 Catcher Adjust : Action test of Thread catch hook
This test is used to adjust stop position of Thread catch hook.
- #4 Keeper Test : Action test of Keeper solenoid ON-OFF
This test is used to check action of Keeper.
- #5 Jump Solenoid Test : Movement test of jump device ON-OFF.
This test is used to check movement of Jump device.
- #6 Catcher Test : Movement test of thread catch hook IN-OUT
Use this test to check movement of Thread catch hook.
- #7 Cutter Test : Action test of moving knife Open-Close
Use this function to check opening-closing action of Moving knife.
- #8 Clip Solenoid : Action test of clip type thread holder (Option)
This test is used to check movement of clip type thread holder.
- #9 Pointer Test : Action test of laser pointer (Option)
This test is used to check action of Laser pointer.
- #10 Fan Drive Test : Action test of cooling fan ON-OFF
Use this function to check movement of cooling fan.
- #11 Encoder Check : Input test of L point / C point timing
With turning main shaft, you can use this function to check if L point signal, C point signal, and timing signal are correct or not.
- #12 Position Data Entry : Position Data Entry Confirm frame moving sensor
This test is used to check action of Frame moving sensor.
From Main program Ver.*1.34~, the Pulse motor will be un-locked when you activate the test, then you can move the embroidery frame to your desire position.
- #13 Position Data Entry : Confirm registration of frame

position data

You can use this function to check if Frame position data are entered correctly.

#14 Shaft Drive Test : Main shaft control test

You can turn main shaft with pushing “Start” or “Jump” key of Needle bar section.

This function can be used for test run after maintenance work.



#15 Sequin test (Option)

This test is used to check or adjust of Sequin device.

#16 Rotary Hook Adjust

This function can be used for [Adjustment of needle height] or [Adjustment of rotary hook timing].

You can also use the function through operation panel as well.

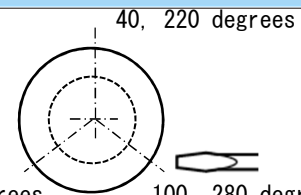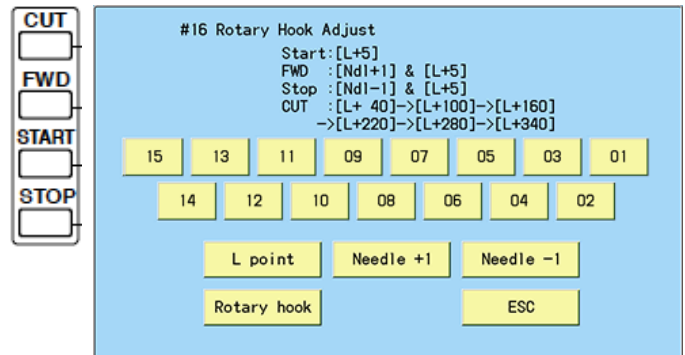


- [01] - [15] : Needle change (Main program Ver.*1.37~)
- [START] or [L point] : Main shaft will turn and set Needle bar position for [Adjustment of needle height] (L+10 degree).
- [CUT] or [Rotary hook] : Rotary hook will turn and stop every 120 degrees to access 3 fixing screws easier.
- [FWD] or [NdI +1],
- [STOP] or [NdI -1] : Needle bar moves to the left or right, then sets Needle bar position for [Adjustment of needle height] (L+10 degree).

#17 Needle Posi. Adjust (for factory production)



1. Turn on machine power
2. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.

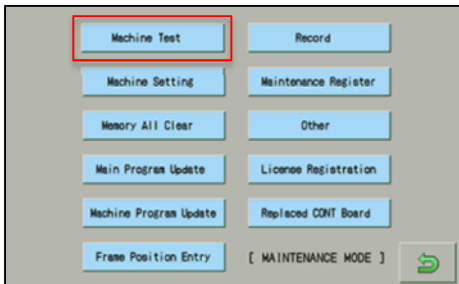


3. Press **Machine Test**.




4. Select desired number to be confirmed.


Page is switching by pressing  

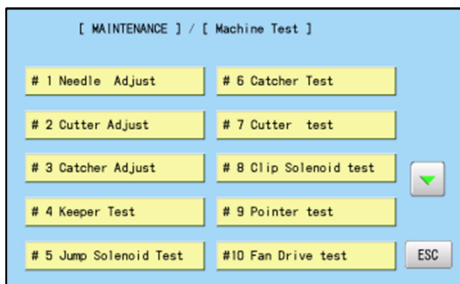

Selected item will be executed.

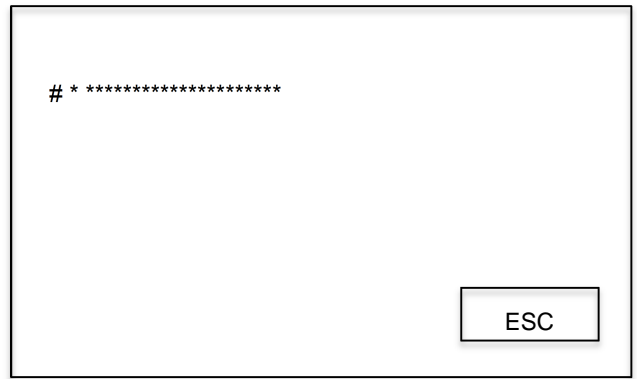

5. Go back to [MAINTENANCE] screen if press **ESC**
(Not necessary if it backs automatically)

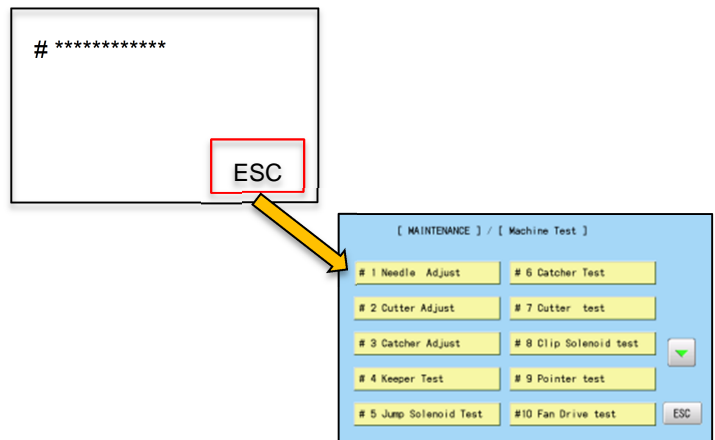

6. Press **ESC** and  then back to Drive mode screen

E5-3 Memory All Clear—Initialization of design memory

Delete all the design memory.

Execute this function when occurring design breakage or impossibility of design input.

If abnormality is found after deleting all the data, replace LCD-** board (or Core module) since the board might be broken.

<Note>


All the internal design memory will be deleted by initialization of design memory.


You have to be careful when initializing design memory.

1. Turn on machine power
2. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.




3. Press **Memory All Clear**.

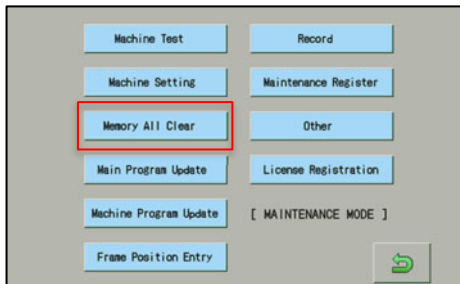


4. Return to drive mode by pressing **ESC** and .

4. Memory activation check and Memory all clear will be started after press **OK**

Back to [MAINTENANCE MODE] screen once completed

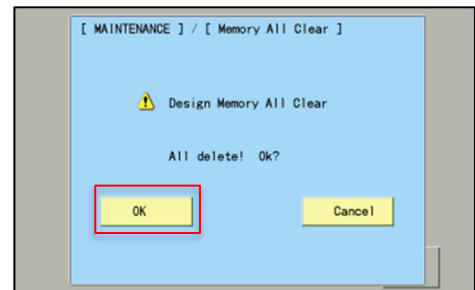

5. Return to drive mode by pressing **ESC** and .

E5-4 Record—Operation data display

You can confirm history of operation.


- Total number of stitch : Total number of stitch used for embroidery so far
 Error occurrence record : Type of errors and its occurrence date
 Occurrence record by error type : Accumulated number of each error occurrence
 Thread break history : The number of thread break by needle bar

E5-4-1 Total number of stitch

1. Turn on machine power
2. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.




3. Press **Record**.

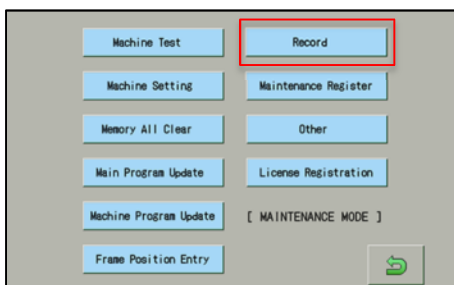


4. Press **STITCH**.

The screen shows total stitches used for embroidery so far.

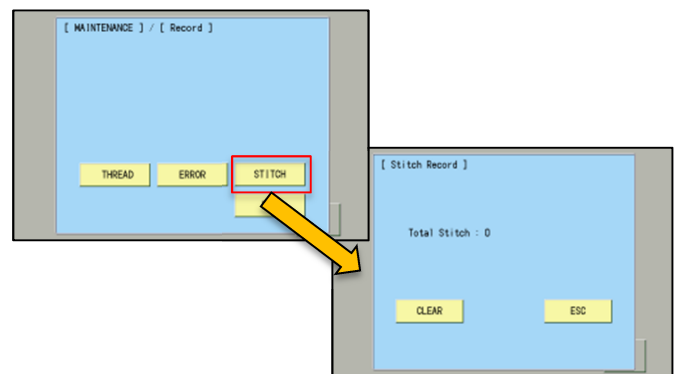

5. Total Stitch clear selection screen will be appear by press **CLEAR**

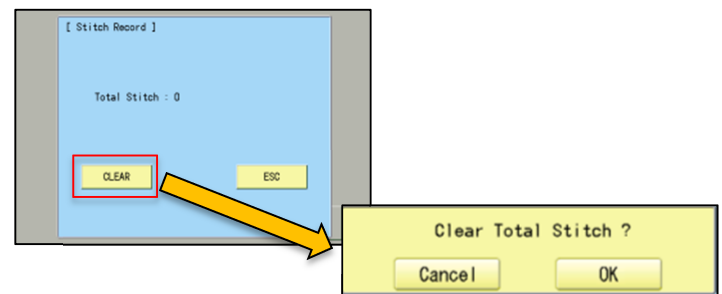


6. Total number of stitch is cleared after pressing **OK** and the screen shows one in the procedure 5. Total number of stitch is [0]
 if you do not prefer to clear it, press **ESC** and the screen shows of the [Stitch Record] is displayed.

E5-4-2 Record of Error occurrence

1. Turn on machine power
2. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.




3. Press **Record**.

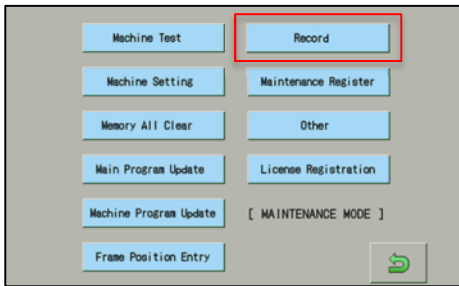


4. Press **ERROR**.


Enable to confirm Record of error occurrence.

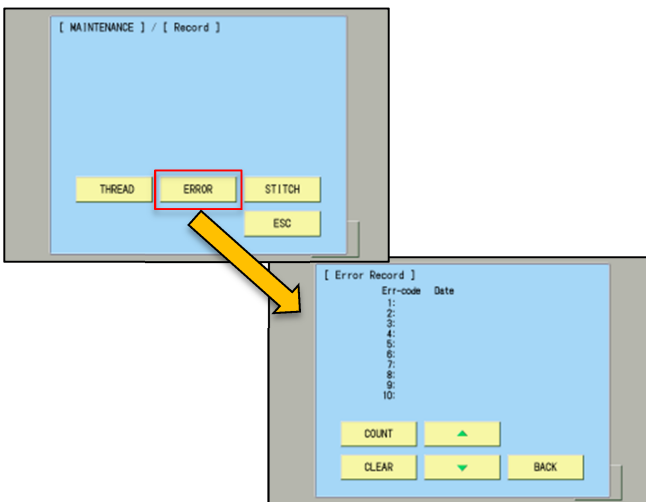

 * Enable to confirm Occurrence date and error number



* Selection menu of Clear Error Record will be opened when pressing **CLEAR**.

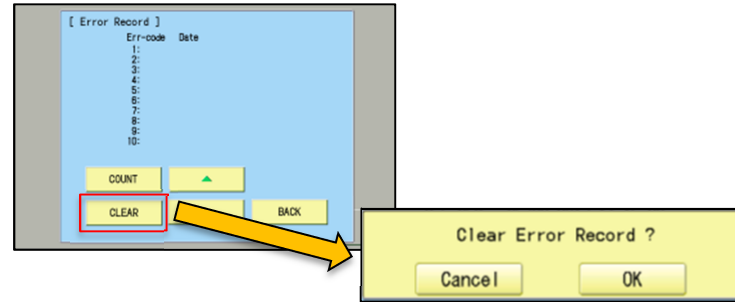


5. Error record is cleared by pressing **OK** and the screen of the [Error Record] is displayed.
If you do not prefer to clear it, press **CANCEL** and the screen of the [Error Record] is displayed..

E5-4-3 Number of occurrence in each error display

1. Turn on machine power
2. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.




3. Press **Record**.

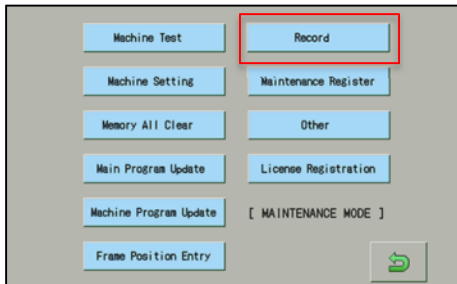


4. Press **ERROR**.

You can confirm record of error occurrence.

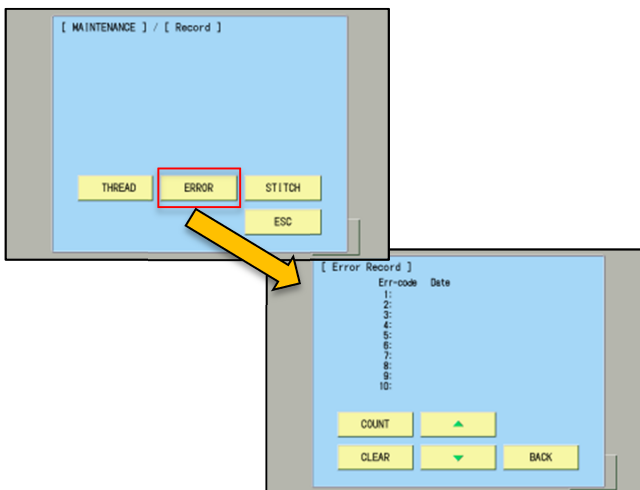


5. Press **COUNT**.

You can confirm total number of occurrence in each error.
(E-000 to E-255 will be displayed)

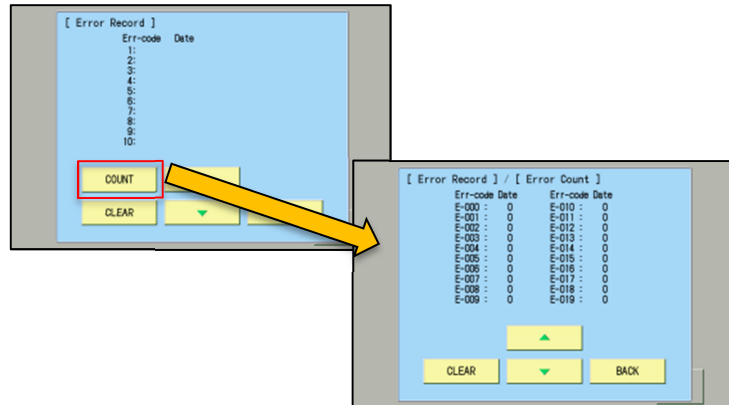


 * You can confirm accumulated number for E-000 to E-255



* The screen returns to the previous screen by pressing **BACK**.

6. Error Record Clear select screen will appear by press **CLEAR**

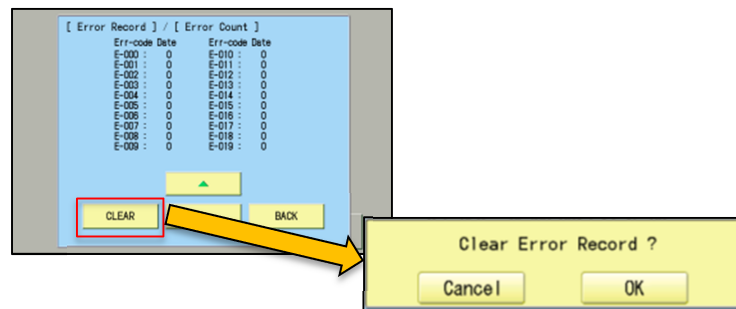

7. Error record is cleared by pressing OK and the screen of the [Error Record] is displayed.


If you do not prefer to clear it, press Cansel and the screen of the [Error Record] is displayed.

E5-4-4 Thread break history

1. Turn on machine power
2. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.




3. Press **Record**.

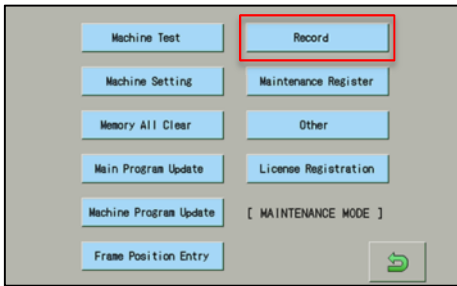


4. Press **THREAD**.

You can confirm thread break history by needle bar.

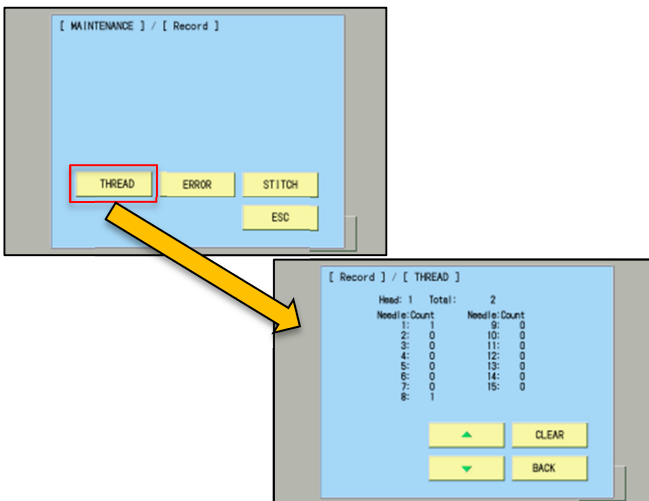


*The screen returns to the previous screen by pressing **BACK**.

 *Head is switched by pressing



5. Thread break count Clear select screen will appear by press **CLEAR**

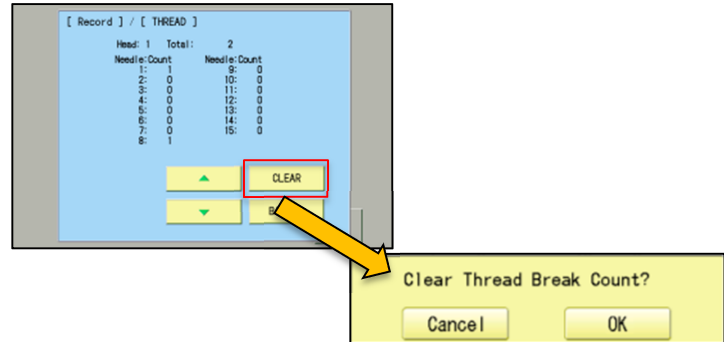

6. Thread break history is cleared by pressing **OK** and the screen of the [Record]/[THREAD] is displayed.

* If you do not prefer to clear it, press **Cancel** and the screen of the [Record]/[THREAD] is displayed.

E5-5 Setup—Machine setting

<Note> (*: Setting is for each individual machine, so prohibit to change setting. When you need to change it, please contact us in advance)

(\$: Setting is different for each model type. Please check before changing data)

(# : Setting is depending on options installed. Please check before changing data)


Contents

* 1	Machine Type	:	HCR3		
* 2	Max Needle Number	:	15	(1-15)	: Number of Needle
\$ 3	Max Head Number	:	□	(1-30)	: Number of Head
\$ 4	Machine Max Speed	:	□□□	(500-2000)	: Maximum rotation
\$ 5	Machine Max Area X	:	□□□	(0-15000)	: Maximum embroidery area at X axis
* 6	Machine Max Area Y	:	4500	(0-15000)	: Maximum embroidery area at Y axis
\$ 7	X Position Sensor	:	□	(0-12)	: Number of position sensor at X axis
* 8	Y Position Sensor	:	6	(0-12)	: Number of position sensor at Y axis
# 9	LED Needle Pointer	:	No.		: Use of LED Pointer Yes or No
#10	Safety Sensor	:	No.		: Use of safety sensor (rear)Yes or No (To be determined)
#11	N.Safety Sensor	:	No.		: Use of safety sensor (front) Yes or No
#12	Clip Holder Device	:	No.		: Use of Clip holder device YES or NO
* 13	Borer Device	:	No.		: Use of Borer device Yes or No
* 14	Cutter Unit Type	:	PulseMtr		: Thread cutting unit type
* 15	X Start Base Angle	:	60	(20-90)	: Starting angle of frame movement on X axis
* 16	Y Start Base Angle	:	60	(20-90)	: Starting angle of frame movement on Y axis
* 17	X Start Angle(CAP)	:	40	(20-90)	: Starting angle of frame movement on X axis for cap frame
* 18	Y Start Angle(CAP)	:	40	(20-90)	: Starting angle of frame movement on Y axis for cap frame
\$19	Color Change Speed	:	Slow1	(Normal / Slow1 ~ Slow4)	: Speed of needle bar change
* 20	Brush Data [*0.1mm]	:	200	(0-250)	: Distance of thread brush (mm) after thread cut (1:0.1mm , 200:20.0mm ... 250:25.0mm)
# 21	Clip Close Timing	:	250	(0-1000)	: Close timing of Clip when Thread trim (ms) : Set to 250 when the Clip holder device is Yes.
* 22	Border Overlap	:	8	(0-8)	: Overlap of between heads for border frame
* 23	Trace Needle No.	:	1	(1-15)	: Needle Number for Trace
* 24	Device Com. Speed	:	19200bps	(2400-115200)	: Communication speed for Sequin device and Cording device
# 25	Sequin Dev. Left	:	No		: Use of left side Sequin device Yes or No
# 26	Sequin Dev. Right	:	No		: Use of right side Sequin device Yes or No
# 27	Sequin Dev. Type	:	Other	(Happy)	: Type of Sequin device
# 28	Number of 3-Needle	:	0	(0-15)	: Needle number of 3-Needle device
\$ 29	Reverse Direction X	:	No		: Reverse movement direction of X motor
\$ 30	Reverse Direction Y	:	No		: Rverse movement direction of Ymotor
\$ 31	Reverse Frame Alarm	:	No		: Reverse of alarm judgment level
# 32	ZIGZAG Device	:	No		: Use of ZIGZAG device YES or NO
# 33	ZIGZAG Offset Angle	:	0	(0~85)	: Rotation angle of ZIGZAG device
\$ 34	HCS2 10 needle	:	No		: Supports vertical laser pointer
# 35	Digital tension	:	No		: Use of Digital tension YES or NO

1. Turn on machine power
2. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.



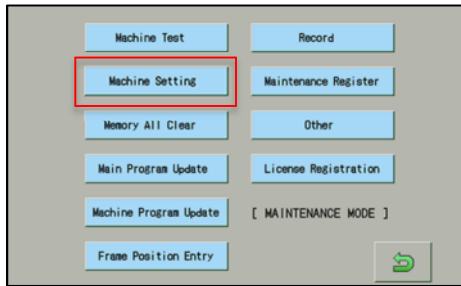

3. Press **Machine Setting**.



4. Select desired number and modify setting.




- Setting values become default by pressing  .

- Page is switched by pressing  .

5. Press **ESC** button after modifying of setting number.



6. The screen returns to drive mode by pressing  .

7. Turn off power and on again before use a machine.

E5-6 Position- Registration of coordinates for positioning sensor

This procedure is to memorize embroidery area into the machine.

*This procedure has to be done after exchange of CONT-R2 board position sensor board.

(Machine will display error [E-67 Position data] without the registration of coordinates of position sensor.


<note> Registraion should be done with cover installed. Correct position may not be registered, if the registration is done with cover off.

As frame moves at maximum embroidery area, be sure not to have anything around the machine.

1. Turn on machine power
2. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.



3. Press **Machine Setting**.

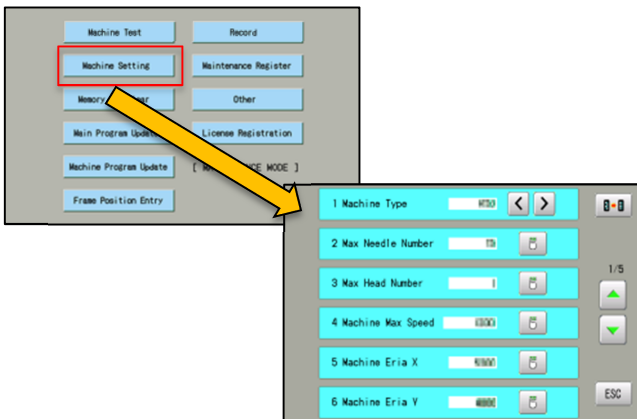

4. Please check below items are correctly set by model

5. Machine Eria X

HCR3-1502 :	5000
HCR3-1504 :	3600
HCR3-X1504 :	5000
HCR3-1506 :	3600

HCR3-X1506 : 5000

HCR3-1508 : 3600

HCR3-X1508 : 5000

HCR3-1512 : 3600

6 . Machine Eria Y

HCR3-1502 : 4500

HCR3-1504 : 4500

HCR3-X1504 : 4500

HCR3-1506 : 4500

HCR3-X1506 : 4500

HCR3-1508 : 4500

HCR3-X1508 : 4500

HCR3-1512 : 4500

7. X Position Sensor

HCR3-1502 : 6

HCR3-1504 : 4

HCR3-X1504 : 6

HCR3-1506 : 4

HCR3-X1506 : 6

HCR3-1508 : 4

HCR3-X1508 : 6

HCR3-1512 : 4

8. Y Position Sensor

HCR3-1502 : 6

HCR3-1504 : 6

HCR3-X1504 : 6

HCR3-1506 : 6

HCR3-X1506 : 6

HCR3-1508 : 6

HCR3-X1508 : 6


HCR3-1512 : 6

5. Press **ESC**.



6. Press **Frame Position Entry**.

Operate according to displayed below message.


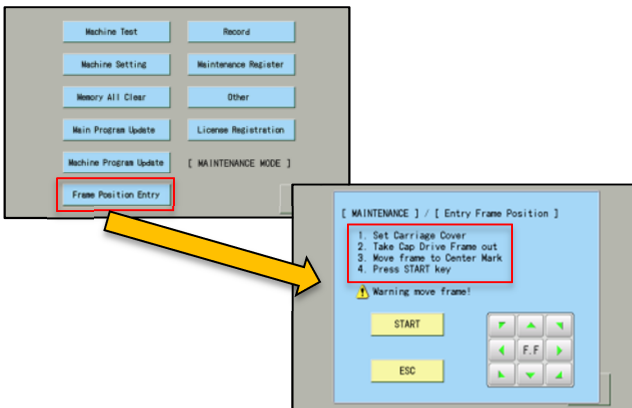


- (1). Fix carriage cover.
- (2). Remove cap frame.
- (3). Move carriage to center mark position by




(Refer to below display)

- (4). Press **START** button.
(Press **ESC** button in case of cancellation)

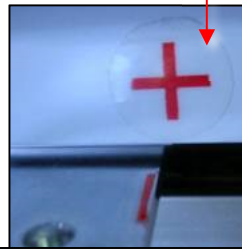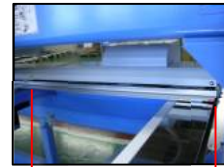


Center mark position of X axis

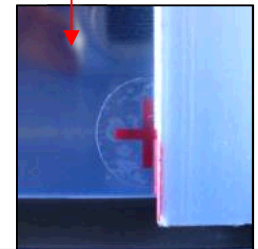


Center mark position of Y axis


7. When you press **START** button, registration of X axis 'direction will start. Frame moves as below.

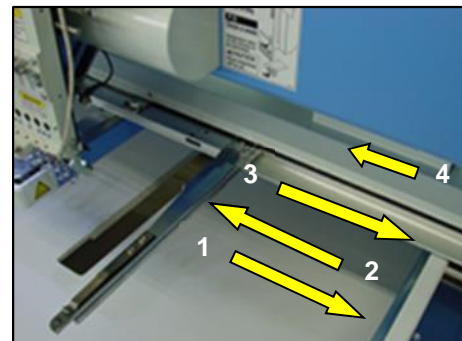

8. Then registration of Y axis direction will start. Frame moves as below.

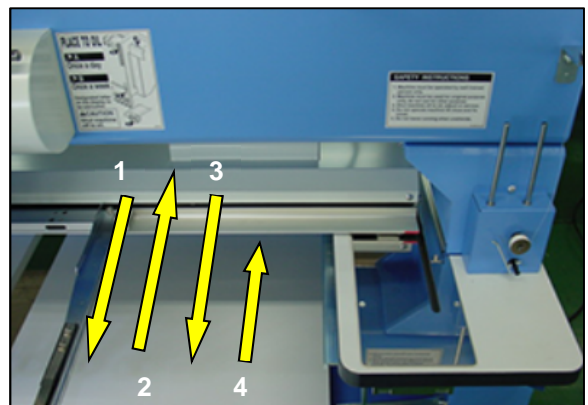


9. Below message will be displayed with successful completion.

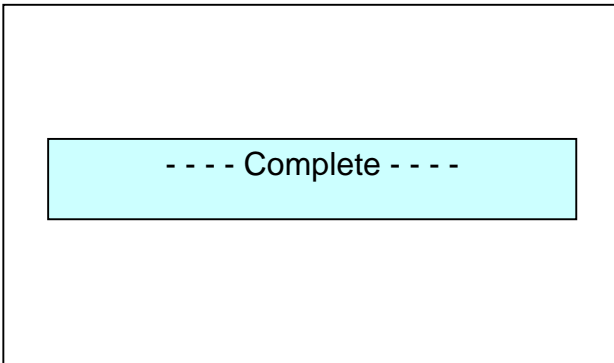

Retry from step 6, if [Error] occurs.

Frame position registration is finished.

10. Return to drive mode by pressing **ESC** and 

E5-7 Maintenance Register—Registration of machine maintenance date


Registration of machine maintenance date

When last maintenance date is registered, next regular maintenance date will be set automatically.

1. Turn on machine power
2. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.




3. Press **Maintenance Register**.


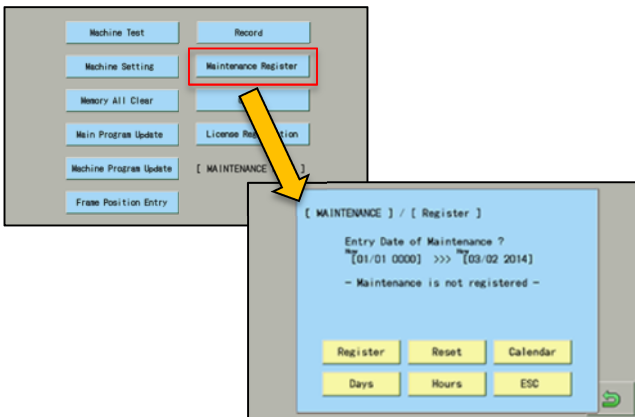


4. Press **Register**.

The current date will be registered as last maintenance date.

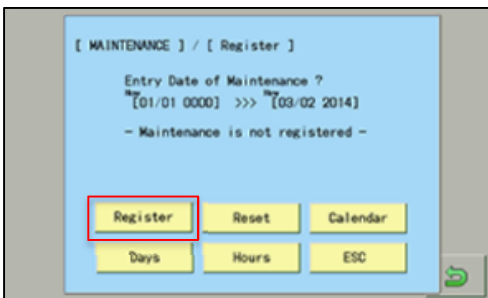

When the machine runs more than 2000 hours (default setting) or 365 days are passed after last maintenance, the machine will display the message to have regular maintenance.

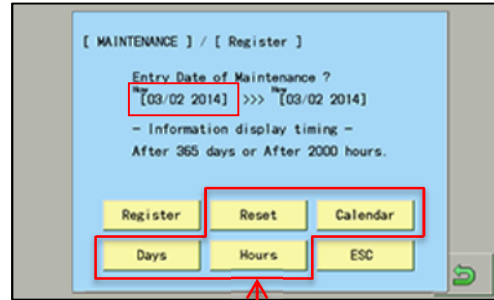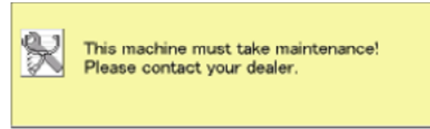


Main program Ver.*

- Pressing the **RESET** button delete the registered date.
- When the **Calendar** button is pressed, you can set calendar of the machine.
- By pressing **Days** button, you can change the number of days for regular maintenance. (1 ~ 3,650 dsys)
- By pressing **Hours** button, you can change the number of running time for regular maintenance. (1 ~ 50,000 hours)

5. Press **ESC**.

Return to maintenance mode.

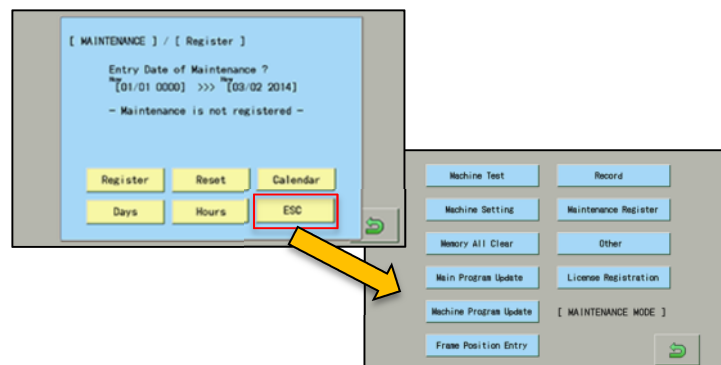


End of process.


E6-1 Installation of laser position marker

<note> laser position marker is factory option and installed at factory. In case you need to install later at your side, trained engineer has to install

ESHCRU28010 Laser position marker set

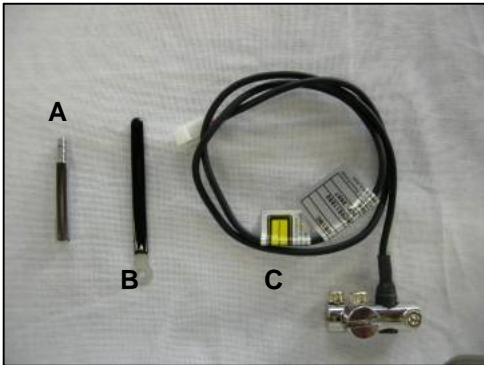

1. Set bandage(B) with stud(A) on right side of moving head

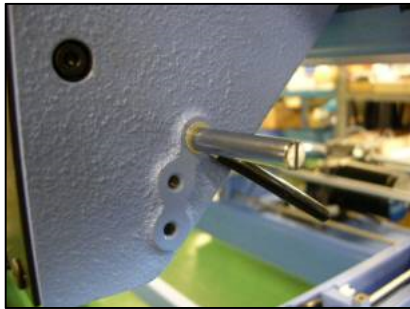



2. Bind harness of pointer unit (C) with bandage(B)




3. Set pointer unit (C) on stud (A)



4. Pass harness through hole at left side of moving head

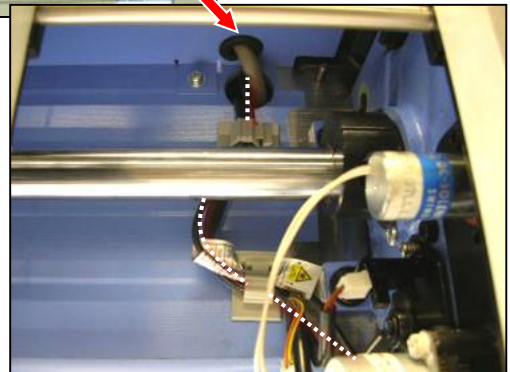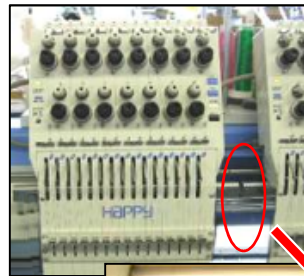

5. Put harness to CN11 on detection circuit board

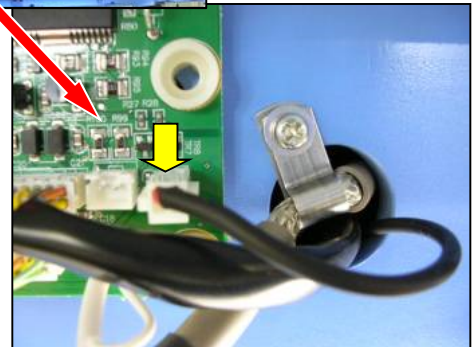


6. Turn on machine power

7. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.




8. Press **Machine Setting**.

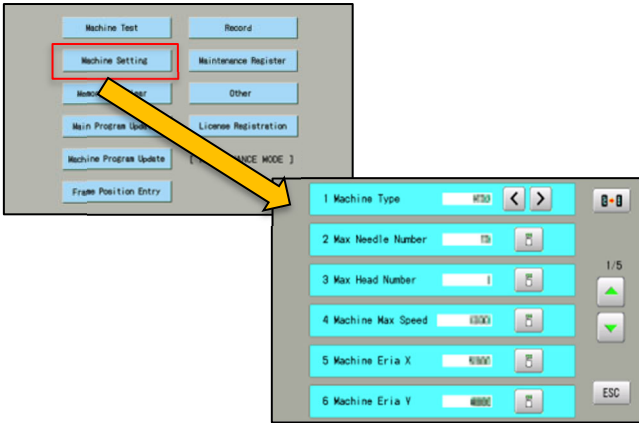




9. Change [9 LED Needle Pointer **No**] to [9 LED Needle Pointer **Yes**]

10. Press **ESC** button.

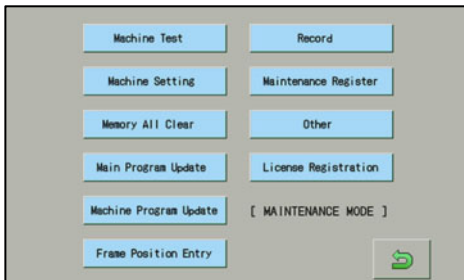


11. Press , return to running menu.



12. Press  and .

13. Adjust angle of pointer unit to point needle position

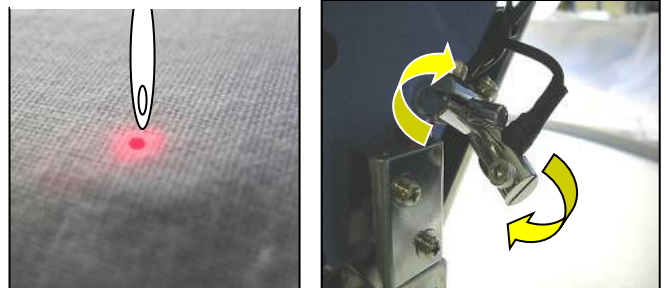


<Note> Position may be changed depend on thickness of fabric

End of process.

E6-2 Installation of Safety sensor (front)

<note> Safety sensor (front) is factory option but sensor is not set on machine. Please install sensor according to this instruction.

- HCR2-FS2-4 Safety sensor (front)(for 2 and 4 haeds)
- HCR2-FSX4-6 Safety sensor (front)(for X4 and 6 haeds)
- HCR2-FSX6-8 Safety sensor (front)(for X6 and 8 haeds)
- HCR3-FSX8-12 Safety sensor (front)(for X8 and 12 haeds)
- HCRU28C1x Safety sensor (front) (without Harness A)

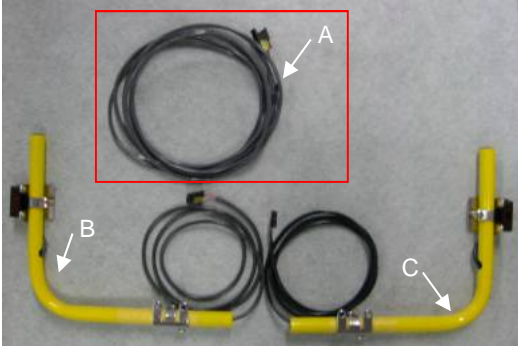

<note> Harness A is installed on machine, if sensor is ordered with machine


<Check> If you would like to order safety sensor separately, please check the machine if harness A is already installed or not. For some high-demand countries, harness A is installed beforehand at factory. In this case, you need to order only Safety sensor (front) (without Harness A).

- B=Sensor(emission part)
- C=Senecer(receiving part)

1. Take cover out at behind of machine




2. Take mission covers (right and left) out

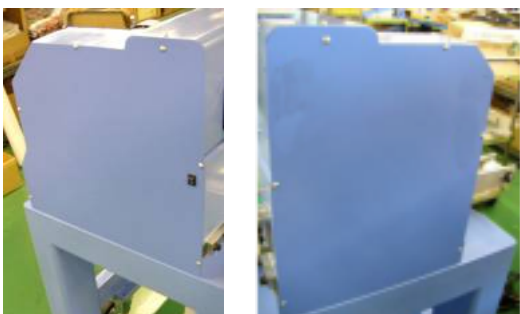


3. Connect harness

<note> Harness A is installed on machine, if sensor is ordered with machine or If harness A is already installed on the machine, you can skip this step.

Connect harness A into CN15 on CONT-R2 board in mission (right)

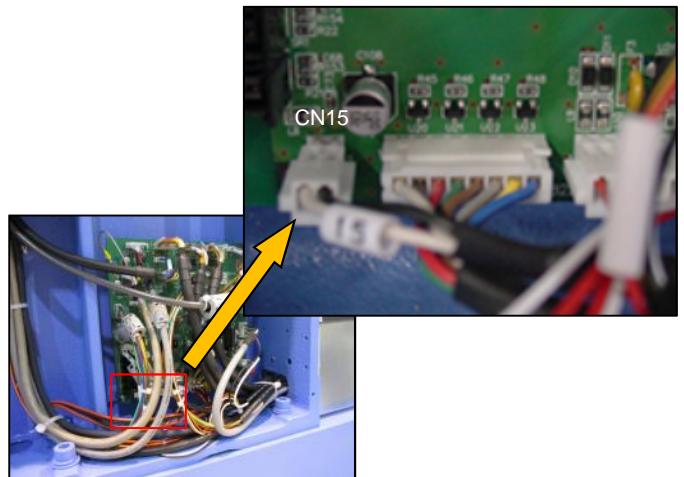

Extend harness to mission (left)

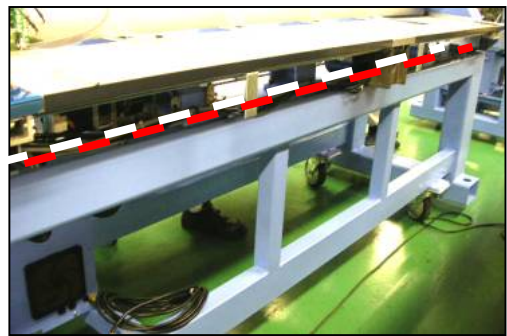

<note> harness should not touch to rotation parts and belts


4. Install sensor(C) at right side




5. Cut center part of grommet and pass harness through grommet as photo below.



6. Connect harness into CN13 on Drive circuit board

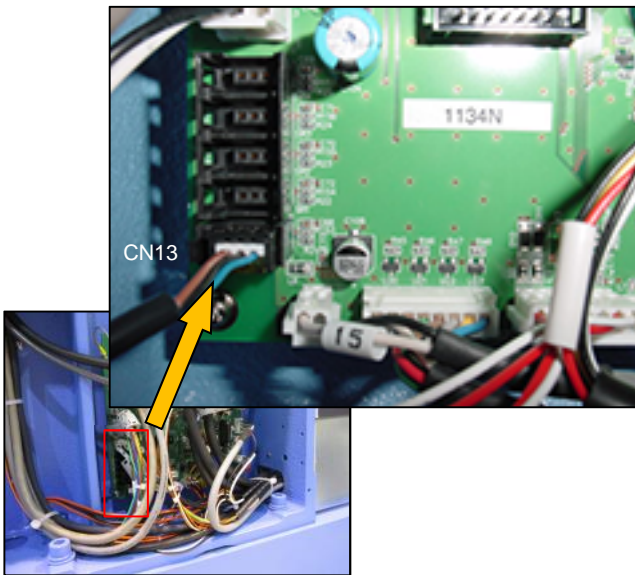

7. Install sensor(B) at left side

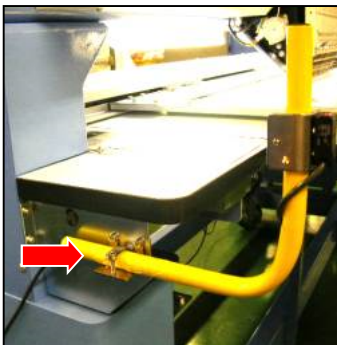


8. Cut center part of grommet and pass harness through grommet as photo below.



9. Pass harness through missin (left) and bring to front

<note> harness should not touch to belt

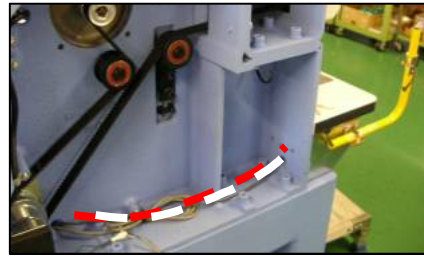

10. Connect harness to extension harness(LS5) at lower part of Y carriage

<note> put cable in order for avoiding to touch to shaft



11. Set cover

<note> harness should not get caught in the cover


12. Turn on machine power

13. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.




<note> This setting is done already, if sensor is ordered with machine. You can skip this step.


14. Press **Machine Setting**.

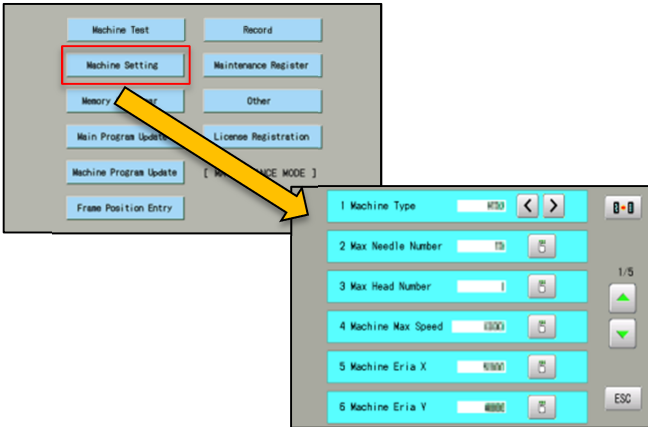


15. Change [11 N. Safety Sensor No]
[11 N. Safety Sensor Yes]

16. Press **ESC** button.

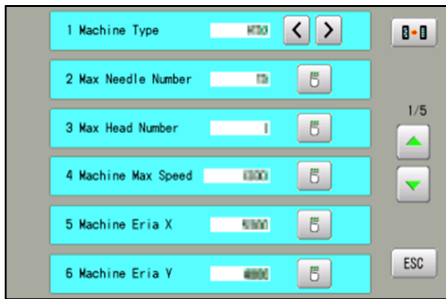


17. Press , return to running menu.

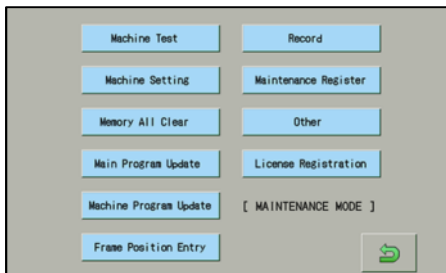


After these setting, Sencor becomes effective

18. Adjust position of sensors. Confirm both LED (green and Orange) is lighting

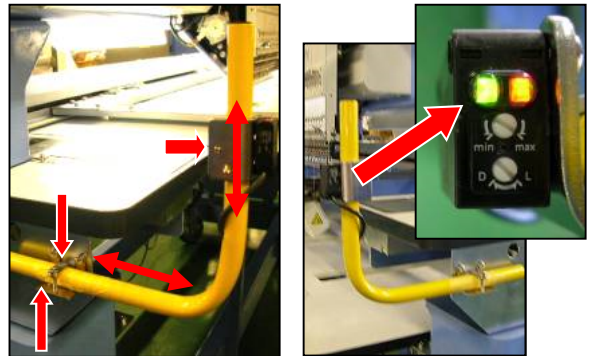


<note> Sencor should be finxed vertical

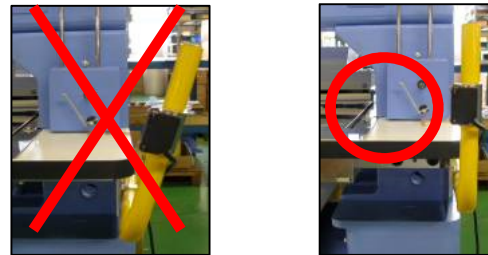

E6-3 Installation of Safety sensor (rear)

<note> Safety sensor (rear) is factory option but sensor is not set on machine. Please install sensor according to this instruction

- HCR2-RS2-4 Safety sensor (rear)(for 2 and 4 haeds)
- HCR2-RSX4-6 Safety sensor (rear)(for X4 and 6 haeds)
- HCR2-RSX6-8 Safety sensor (rear)(for X6 and 8 haeds)
- HCR3-RSX8-12 Safety sensor (rear)(for X8 and 12 haeds)
- HCRU28D10 Safety sensor (rear)(without Harness A)

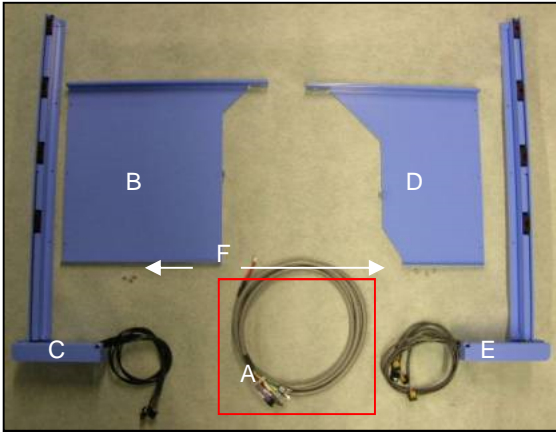

<note> Harness A is installed on machine, if sensor is ordered with machine


<Check>If you would like to order safety sensor separately, please check the machine if harness A is already installed or not. For some high-demand countries, harness A is installed beforehand at factory. In this case, you need to order only Safety sensor (rear) (without Harness A).

- B=Safety Guard (right)
- C=Sensor (receiving part)
- D=Safety Guard (left)
- E=Sencer (emission part)
- F=M3X6 screws (6 pcs)

1. Take cover out at behind of machine




2. Take mission covers (right and left) out

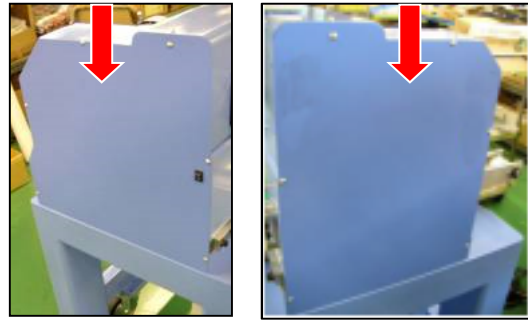


3. Connect harness

<note> Harness A is installed on machine, if sensor is ordered with machine or If harness A is already installed on the machine, you can skip this step.

Connect harness A into CN12 on CONT-R2 board in mission(right)

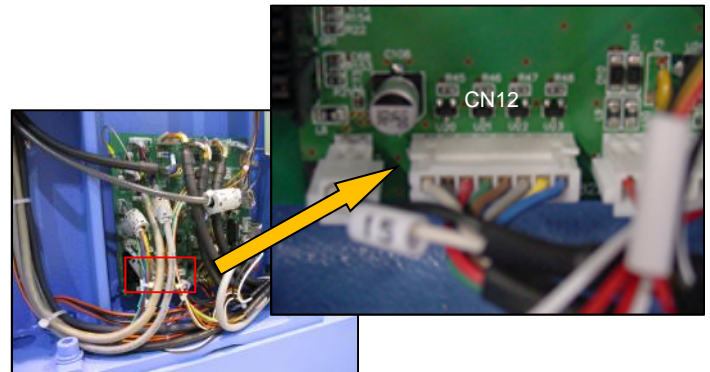


Extend harness to mission (left)

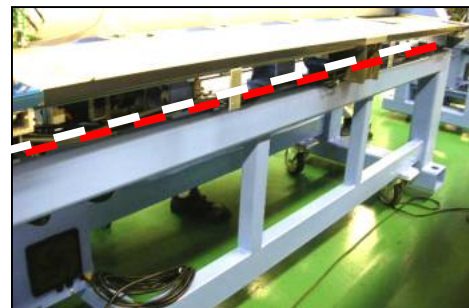


<note> harness should not touch to rotation parts and belts


4. Remove screw of mission (right), Install Safety Guard on mission (right)

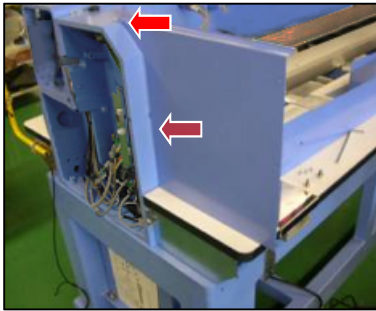

5. Remove screw of body, Fix Sencor (C) on body and fix to Safety Guard(B) by screws(F)

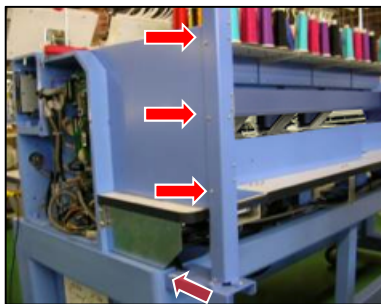


6. Pass harness into mission box

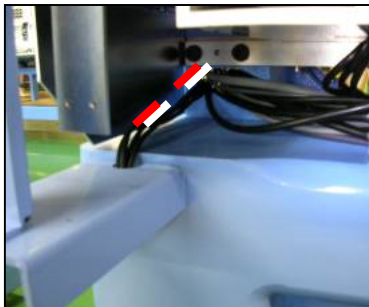


7. Connect harness into CN14 on Drive circuit board


- RS4 -> CN14-RS4
- RS3 -> CN14-RS3
- RS2 -> CN14-RS2
- RS1 -> CN14-RS1
- RS5 -> CN13-RS5

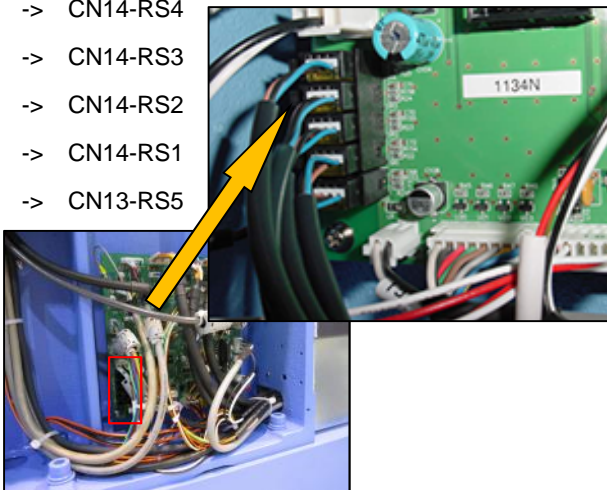

8. Remove screw of mission (left), Set Safety Guard (D) on mission (left)

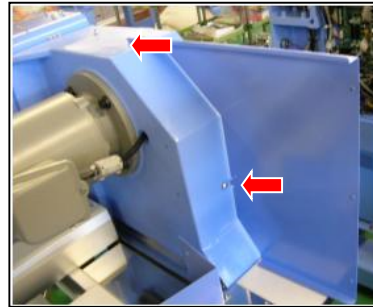



9. Remove screw of body, Fix Sencor (E) on body and fix to Safety Guard(D) by screws(F)

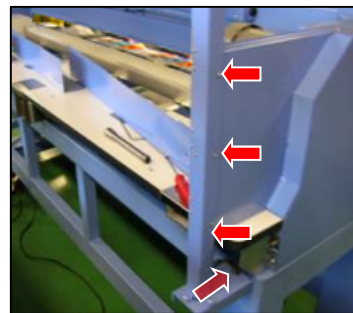

10. Connect harness to extension harness(LS*) at side of Y carriage

<note> put cable in order for avoiding to touch to shaft

- LS1 <- LS1
- LS2 <- LS2
- LS3 <- LS3
- LS4 <- LS4

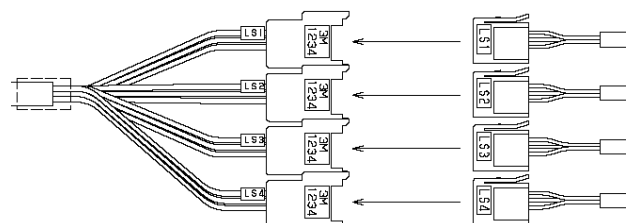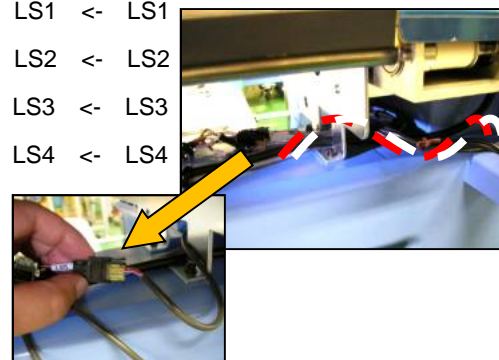

11. Set cover

<note> harness should not get caught in the cover


12. Turn on machine power

13. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.



<note> This setting is done already, if sensor is ordered with machine. You can skip this step

14. Press **Machine Setting**.

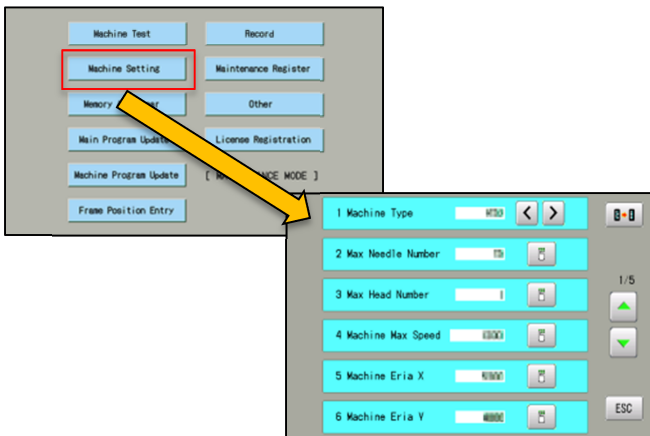


15. Change [10 Safety Sensor No] to [10 Safety Sensor Yes].

16. Press **ESC** button.




17. Press , return to running menu.

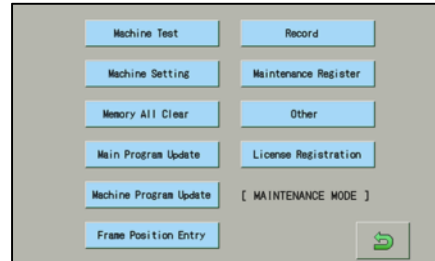

After these setting, Sencor becomes effective

18. In case error occurs during operation:

Please adjust position of sensor where both LED (green and Orange) light stable by screws below.

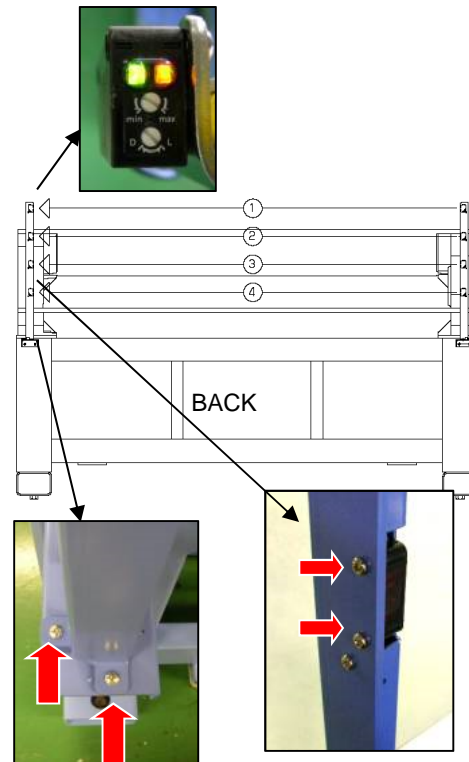


<note> Please do not press sensor, when you need to move machine. The position of sensor may be changed.


E6-4 Installation of bobbin thread winder

<note> Bobbin thread winder is factory option and installed at factory. In case you need to install later at your side, trained engineer has to install

ESHCRU36010 Bobbin thread winder set.

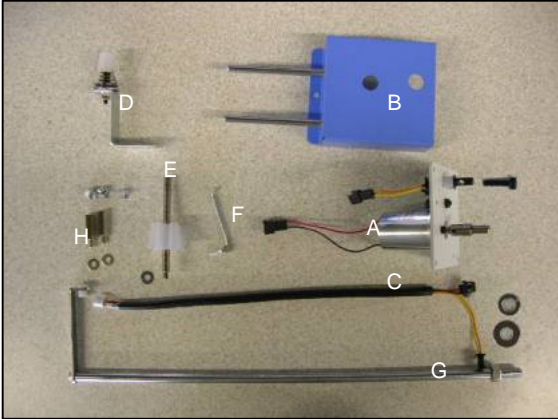

1. Take mission cover (right) out.

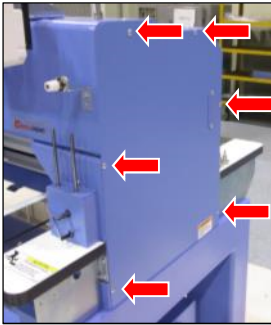


2. Set stud (H) with M4 washer.


<Spanner> 7mm




3. Connect harness (C) to harness of motor (A) with limit switch, and put harness into mission.

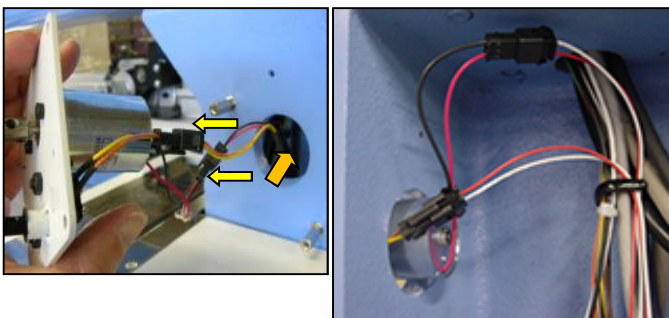

4. Fix winder(A). (Screw M4x8)

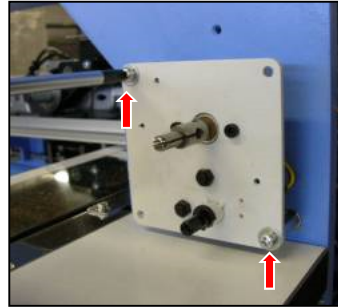


5. Connect harness (C) into CN10 on CONT-R2 board.

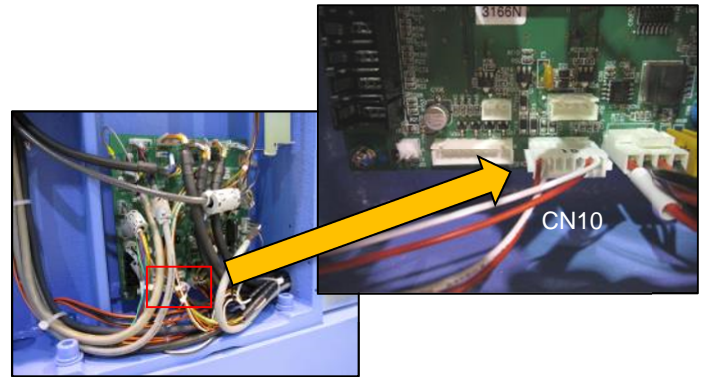

6. Set Thread tension device (D) on Body. (Screw M4x8)




7. Set thread stand (E) with M4 washer.

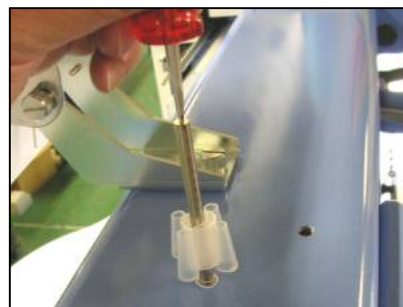

8. Set thread guide (G) with M8 washer and spring washer.

Adjust a position of eyelet on bobbin thread guide to a position above of thread standpin (E), and fix nut.

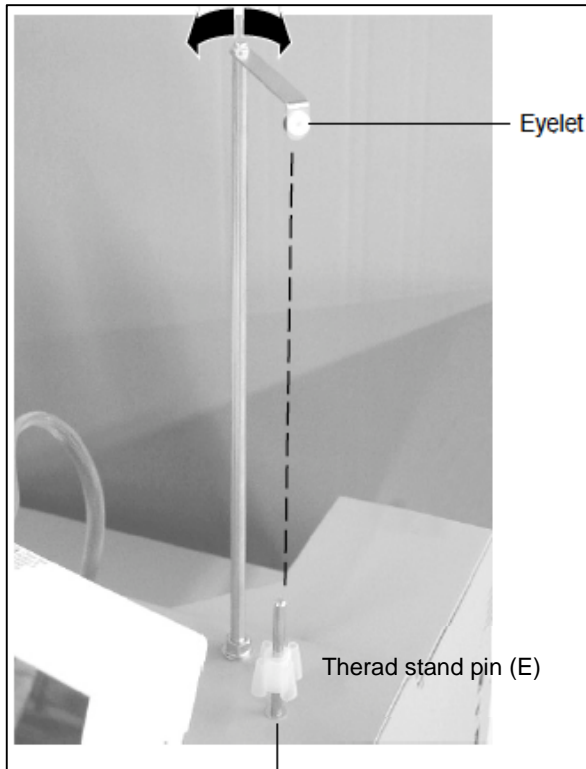




9. Set stop switch (F).



10. Set cover and power on.

11. Put thread and start to wind bobbin thread.


Adjust position bobbin stand and thread tension (E) for winding thread equally.

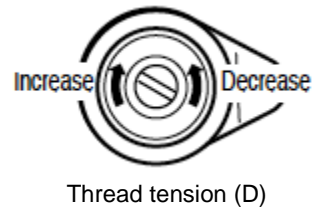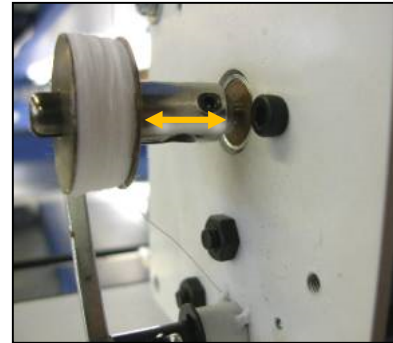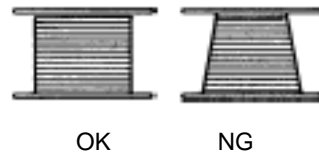

12. Take stop switch (F) out and put cover (B).




13. Set stop switch (F) and adjust position where stop switch (F) will open , when bobbin wilnd thread full.

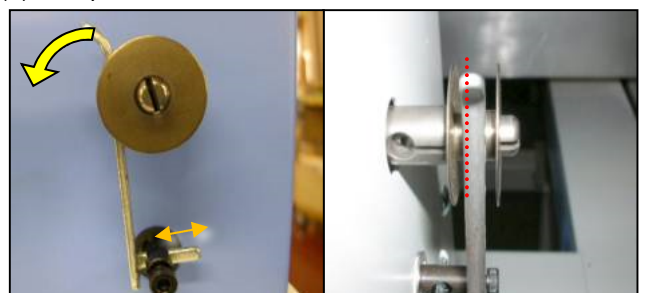


E6-5 Installation of Upper Thread Holder

<note> Upper Thread Holder is factory option and installed at factory. In case you need to install later at your side, trained engineer has to install

ESHCRU15010 Upper Thread Holder set

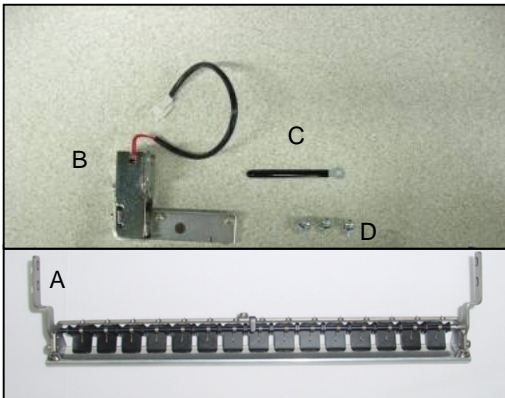


1. Set thread holder(A) under moving head

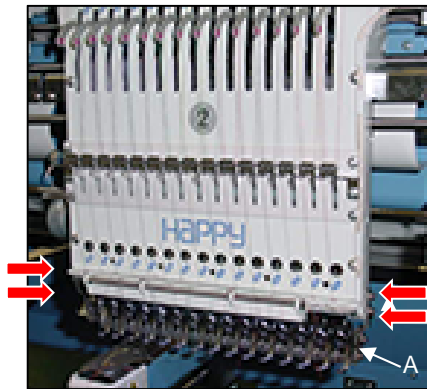

2. Check smooth movement of thread catcher at 1st and 15th needle




3. Set Clip drive unit (B) with bandage (C) by screw (D) at right side of moving head.

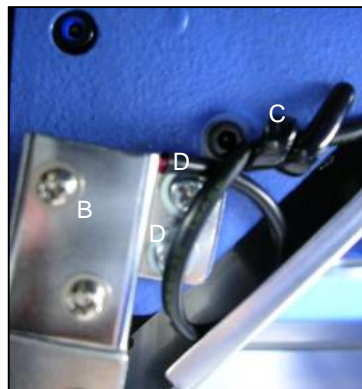


(bandage is common used for laser pointer and thread holder)

4. Connect harness to connector (2P) at left side of moving head, and bind cable with bandage.

<note> Cable should not touch to any moving part

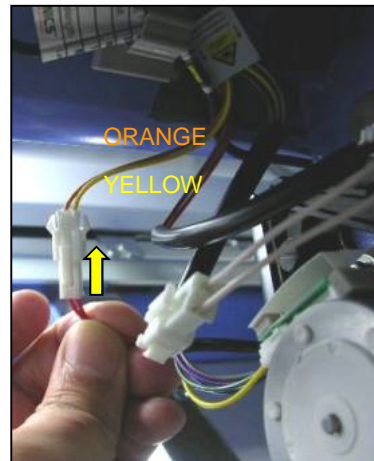

5. Adjust space around 1~2mm between clip drive unit (B) and thread holder

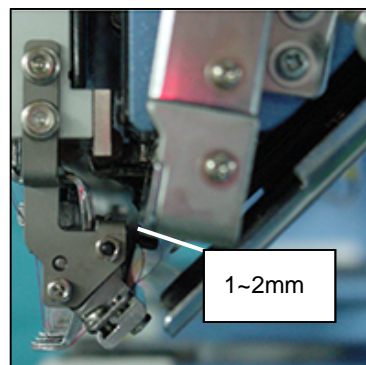


6. Turn on machine power

7. After showing below screen, Keep START/STOP button pressing then press **NEXT** to enter maintenance mode.



<note> This setting is done already, if Upper Thread Holder is ordered with machine. You can skip this step

8. Press **Machine Setting**.

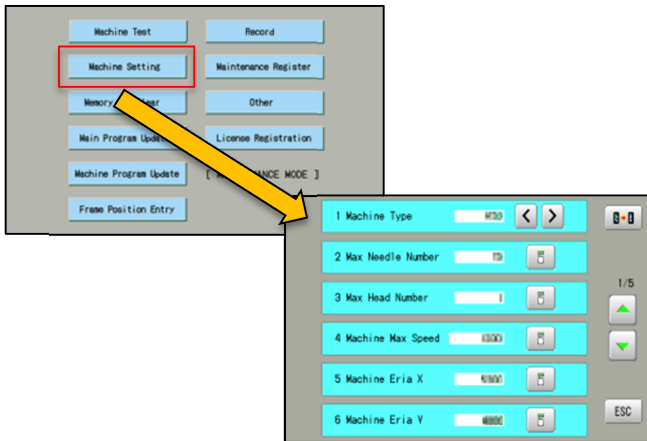


9. Change [12 Clip Holder Device No] to
[12 Clip Holder Device Yes].

10. Press **ESC** button.



11. Press , return to running menu.

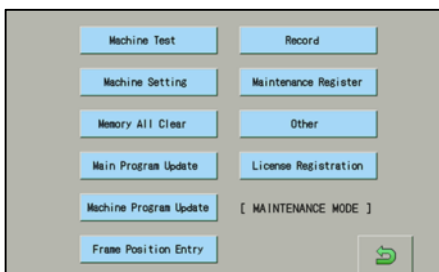

After these setting, Upper Thread Holder becomes effective.



E6-6 Adjustment of Cap drive frame

1. install cap drive frame.

Please refer to [7-2 Installing and removing the cap drive frame].


2. Confirm that gap between rotary cylinder and needle plate comes to gap shown in fig. (The Drive frame is set exactly at the factory. Normally you do not need to adjust.)

If it is not as shown in the figure, adjust it in next step.

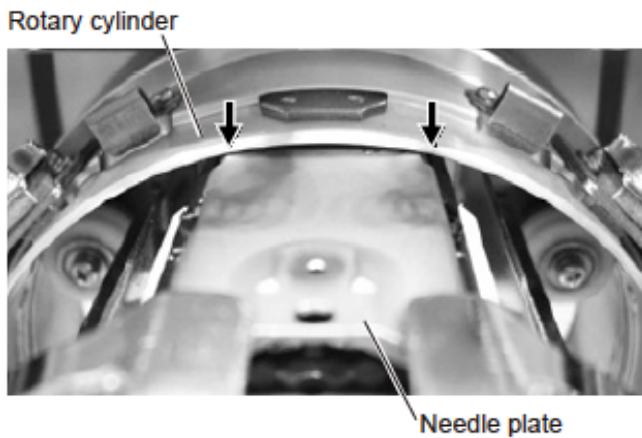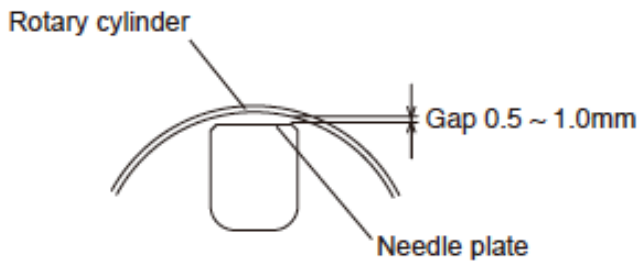





3. Loosen four screws slightly shown by the arrow mark, move the Rotary cylinder and adjust it so that it becomes the same gap as in step 2.

Fix the four screws securely after adjustment.


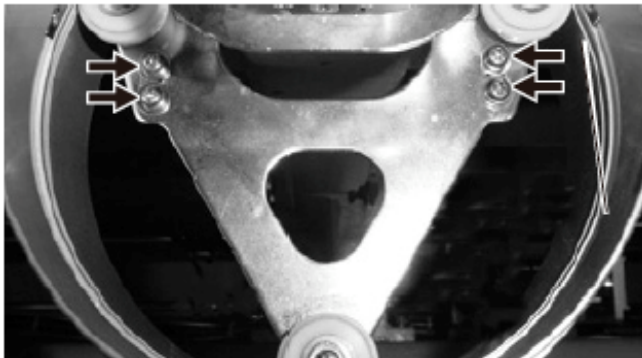


E7 Electric system diagram




E7-1 Electrical connection diagram (S. No. ~1095015) 1/5

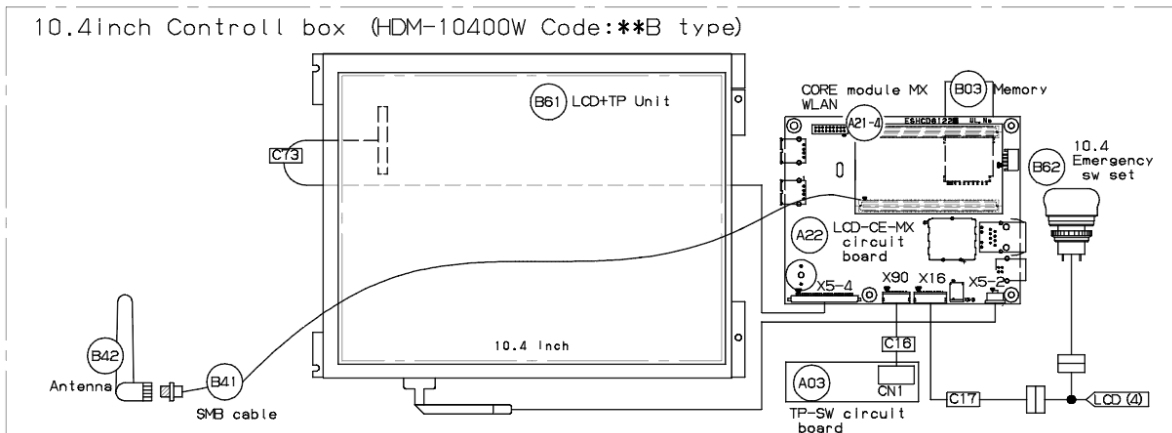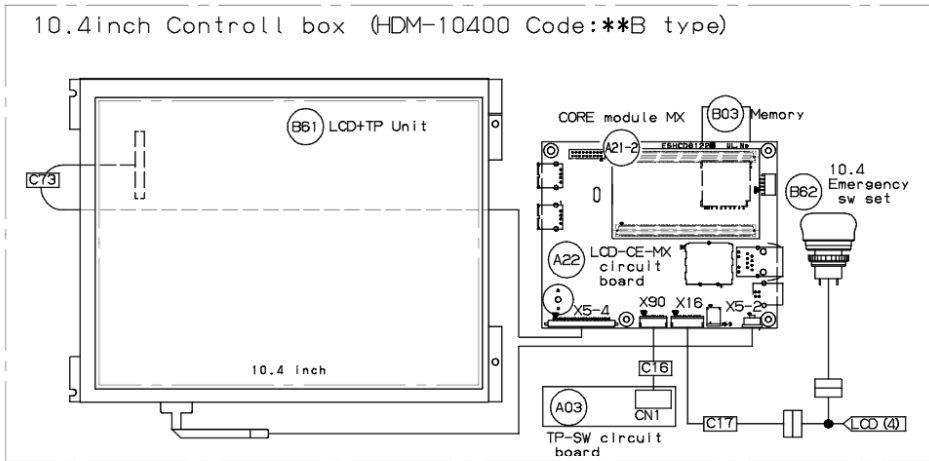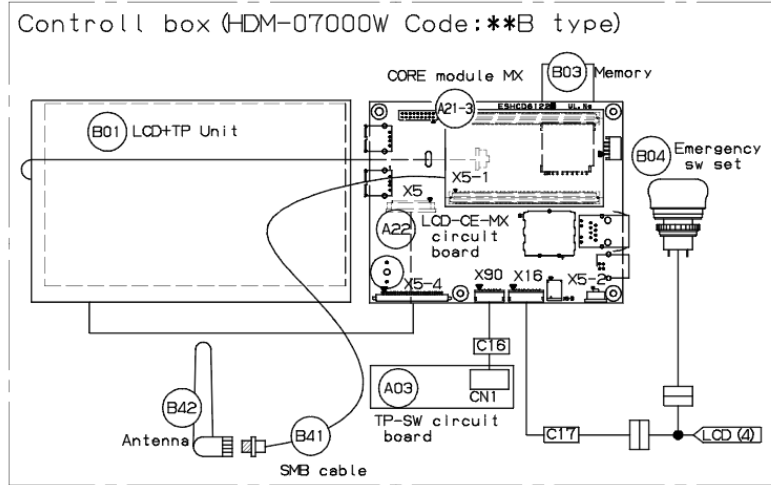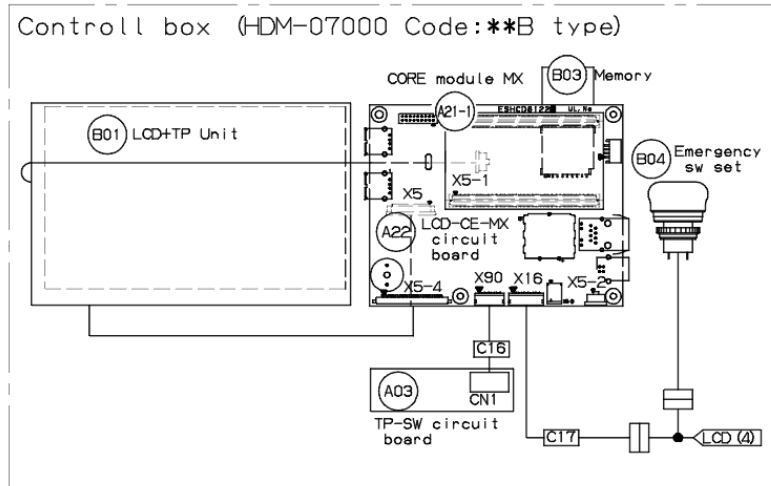

E7-1 Electrical connection diagram (S. No. ~1095015) 2/5

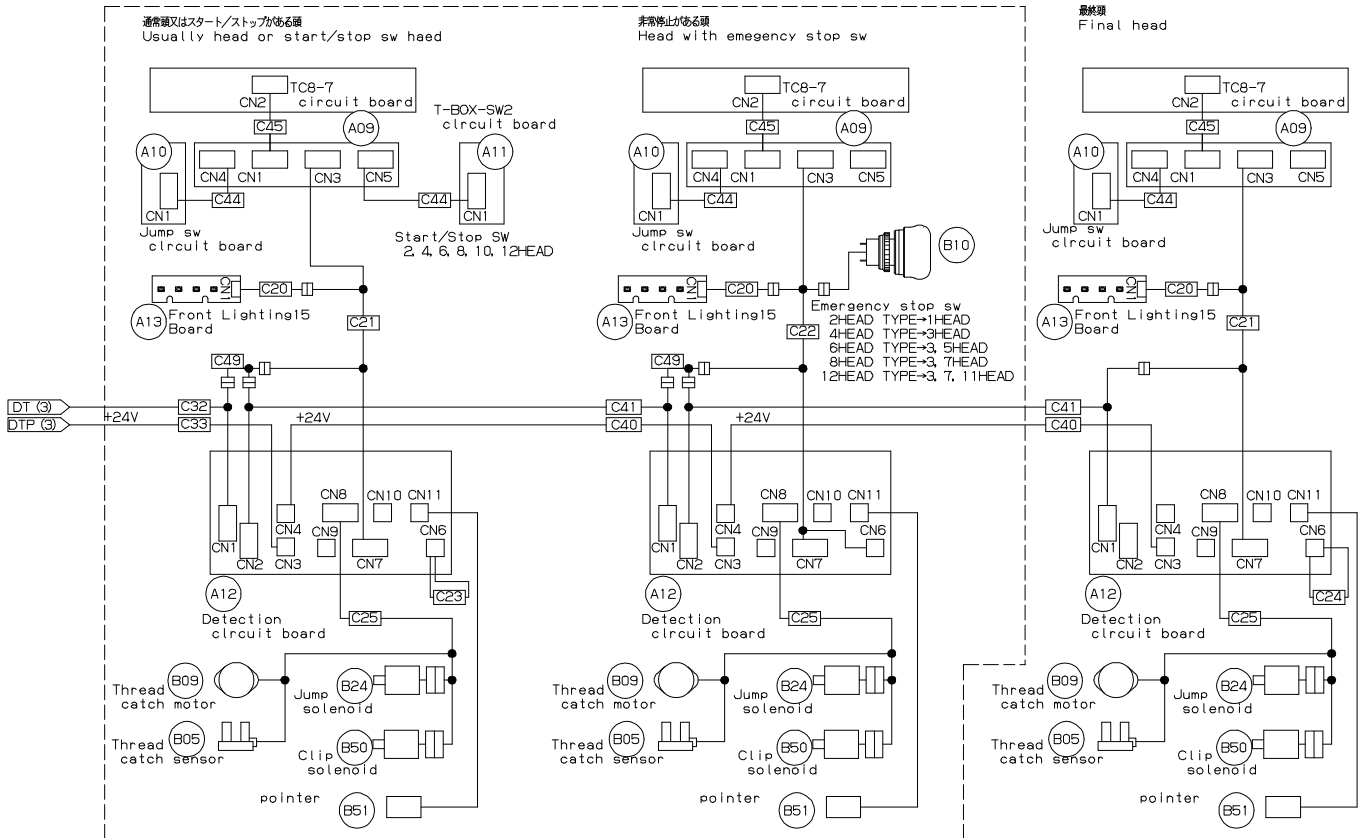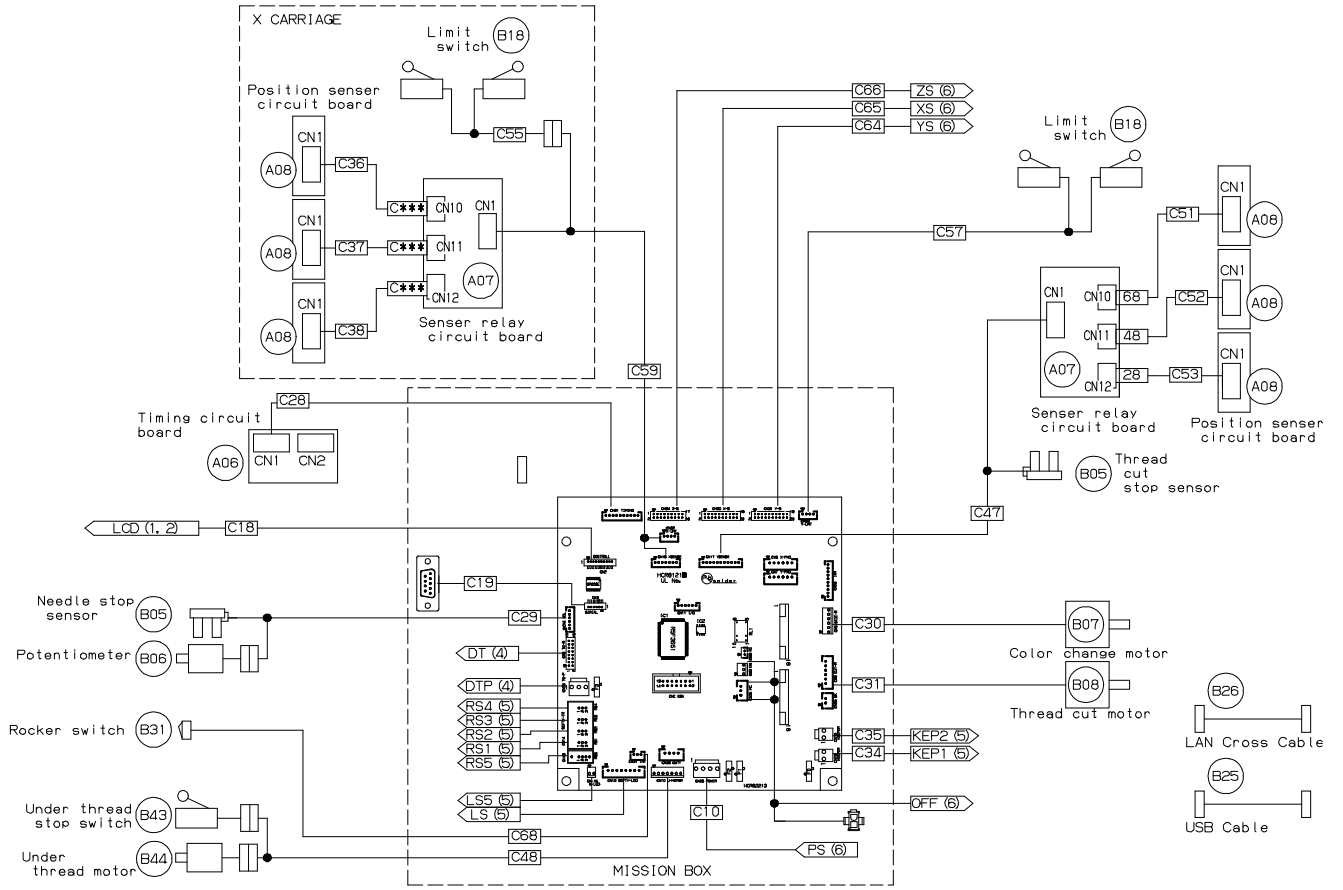

E7-1 Electrical connection diagram (S. No. ~1095015) 3/5

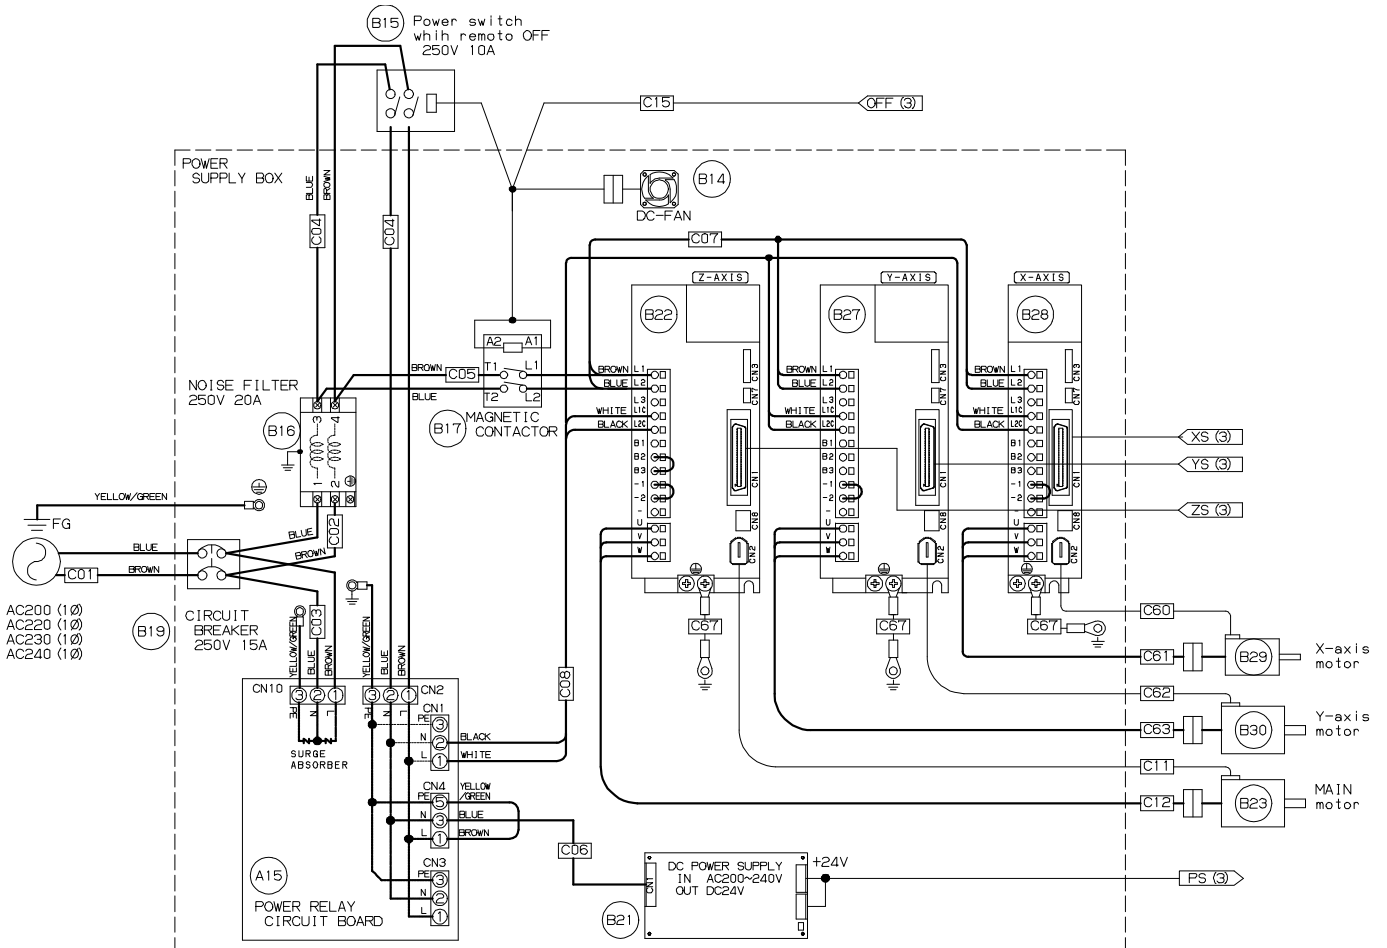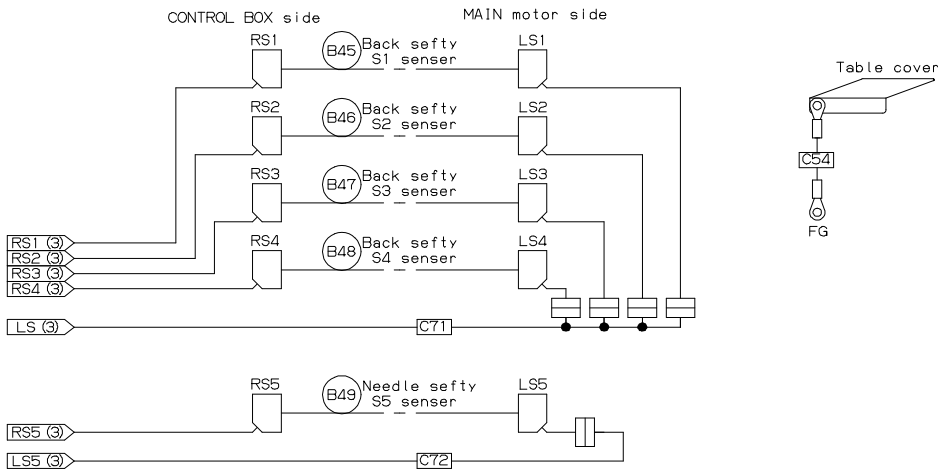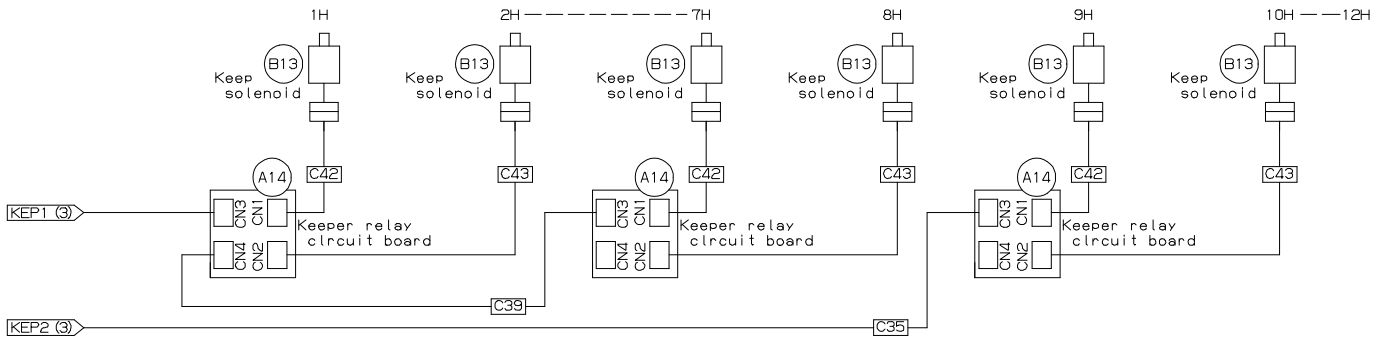

E7-1 Electrical connection diagram (S. No. ~1095015) 4/5

Parts Names	Parts No.	Remark	(B06) Potentiometer	HCB7960*		Z-axis motor	EPM0071*	12H type machine
(A21-1) Core module MX	EPZ0140*		(B07) Color change motor	HCB7921*		(B24) Jump solenoid	HCB7901*	
(A22) LCD-CE-MX circuit board	HCD8122*		(B08) Thread cut motor	HCD7913*		(B25) USB cable	EPZ0075*	
(A03) TP-SW circuit board	HCD8116*		(B09) Thread catch motor	EPM0059*		(B26) LAN cross cable	EPZ0126*	
(A05) CONT-R2 circuit board	HCR8121*	*=3	(B10) Emergency stop sw (HEAD)	HCR7962*		(B27) 2H Y-Driver	HCR7965*	2H type machine
(A06) Timing (Main) circuit board	HCD8109*H		(B13) Keep solenoid	HCD7905*		4H Y-Driver	HCR7968*	4, X4H type machine
(A07) Senser Relay circuit board	HCD8111*		(B14) DC fan unit	HCR7951*		6H Y-Driver	HCR7971*	6, X6H type machine
(A08) Position sensor circuit board	HCD8110*		(B15) Power switch whis remotoOff	EPS0089*		8H Y-Driver	HCR7974*	8, X8H type machine
(A09) TC8-7 circuit board	HCD8124*		(B16) Noise filter	EPK0123*		12H Y-Driver	HCR7960*	12H type machine
(A10) Jump sw circuit board	HCR8126*		(B17) MC	EPK0124*		(B28) 2H X-Driver	HCR7964*	2H type machine
(A11) T-BOX SW circuit board	HCR8127*		(B18) Limit SW	EPS0118*		4H X-Driver	HCR7967*	4, X4H type machine
(A12) Detection circuit board	HCR8107*		(B19) Circuit Protector	EPK01470		6H X-Driver	HCR7970*	6, X6H type machine
(A13) Front light15 circuit board	HCB8129*		(B21) DC24V power supply	EPK01460	2~8H type machine	8H X-Driver	HCR7973*	8, X8H type machine
(A14) Keeper relay circuit board	HCR8112*		DC24V power supply	EPK0125*	12H type machine	12H X-Driver	HCR7959*	12H type machine
(A15) Power relay circuit board	HCR8104*		(B22) 2H Z-Driver	HCR7966*	2H type machine	(B29) X-axis motor	EPM0080*	2, 4H type machine
			4H Z-Driver	HCR7969*	4, X4H type machine	X-axis motor	EPM0070*	X4, 6, 8, X8, 12H type machine
			6H Z-Driver	HCR7972*	6, X6H type machine	(B30) Y-axis motor	EPM0070*	2, 4H type machine
(B01) LCD&TP	ESEPZ0149* ESEPZ0148*		8H Z-Driver	HCR7975*	8, X8H type machine	Y-axis motor	EPM0071*	X4, 6, 8, X8, 12H type machine
(B03) Memory card	EPZ0122*		12Z-Driver	HCR7961*	12H type machine	(B31) Rocker switch	EPS0104*	
(B04) Emergency stop sw (DISP)	HCD7945*		(B23) Z-axis motor	EPM0080*	2, 4H type machine			
(B05) Photo sensor	EPP0052*		Z-axis motor	EPM0070*	X4, 6, 8, X8H type machine			

* : 改訂番号 Mark is a revision number

			(C16) SW cable2	HCD7252*		(C36) Limit cross (1500) harnees	HCR7115*	4, 6, 8, 12H type machine
(C01) HCR3 POWER-P CORD	HCR7367*	2-8H type machine	(C17) BOX cable2	HCD7273*		Limit cross (1200) harnees	HCR7116*	2, X4, X6, X8H type machine
HCR POWER-P CORD	HCR7333*	12H type machine	(C18) CONT cable2	HCD7272*		(C37) Limit cross (1700) harnees	HCR7119*	4, 6, 8, 12H type machine
(C02) NFB harnees	HCR7361*		(C19) RS232C cable2	HCD7271*		Limit cross (1400) harnees	HCR7117*	2, X4, X6, X8H type machine
(C03) SA harnees	HCR7365*		(C20) Front led cable2	HCD7225*		(C38) Limit cross (1600) harnees	HCR7118*	2, X4, X6, X8H type machine
(C04) PSW harnees	HCR7363*		(C21) TC-S harnees2	HCR7311*		(C39) Keep (360 type) harnees2	HCR7265*	
(C05) MC harnees	HCR7362*		(C22) TC-E harnees2	HCR7312*		(C40) DetecP (360 type) harnees	HCR7071*	4, 6, 8, 12H type machine
(C06) PS harnees	HCR7364*		(C23) EMG short harnees2	HCR7227*		DetecP (500 type) harnees	HCR7072*	2, X4, X6H type machine
(C07) MC relay harnees	HCR7345*		(C24) EMG end harnees2	HCR7228*		(C41) Detec SG (360) harnees2	HCR7309*	4, 6, 8, 12H type machine
(C08) Driver relay harnees	HCR7338*		(C25) Jump & Thread catch harnees	HCR7029*		Detec SG (500) harnees2	HCR7310*	2, X4, X6H type machine
			(C28) L-C harnees	HCR7332*		(C42) Keep 55 harnees2	HCR7277*	
(C10) DC power harnees	HCR7214*		(C29) Potentiometer relay harnees2	HCR7241*		(C43) Keep 90 harnees2	HCR7278*	
(C11) Main motor Encoder harness	EPM0092*	2, 4, X4H type machine	(C30) Color change motor harnees	HCR7042*		(C44) TC-SW harnees	HCR7329*	
Main motor Encoder harness	EPM0093*	X4, 6, 8H type machine	Color change motor (X8) harnees	HCR7260*	X8H type machine	(C45) TC connecting harnees	HCB7215*	
Main motor Encoder harness	EPM0079*	X8, 12H type machine	(C31) Thread cut motor harnees2	HCR7243*		(C47) L Senser harnees2	HCR7233*	
			Thread cut motor (X8) harnees	HCR7259*	X8H type machine	L Senser (X-8) harnees	HCR7258*	X8H type machine
(C12) Main motor harness	EPM0092*	2, 4, X4H type machine	(C32) Detection SG relay harnees2	HCR7307*		(C48) UDC motor harnees2	HCD7269*	
Main motor harness	EPM0095*	6, X6, 8H type machine	(C33) Detection P relay harnees2	HCR7306*		(C49) LED relay harnees2	HCR7308*	
Main motor harness	EPM0091*	X8H type machine	(C34) Keep relay harnees2	HCR7248*		(C51) Limit relay (680) harnees2	HCD7243*	
Main motor harness	EPM0076*	12H type machine	Keep relay (X8) harnees	HCR7246*	X8H type machine	(C52) Limit relay (480) harnees2	HCD7242*	
(C15) EBOX-S harnees	HCR7366*		(C35) Keep relay12 harnees	HCR7249*		(C53) Limit relay (280) harnees2	HCD7241*	



* : 改訂番号 Mark is a revision number

E7-1 Electrical connection diagram (S. No. ~1095015) 5/5



Parts Names	Parts No.	Remark	(OPTION)						
							[C71] Sensor relay (2-4) harness	HCR7295*	2, 4H type machine
[C54] Ground harness	HCR7211*		(A21-2) Core module MX 10inch	HCD7963*			Sensor relay (X4-6) harness	HCR7296*	X4, 6H type machine
[C55] X-LIMIT12 harness	HCR7347*		(A21-3) Core module MX WLAN 7inch	HCD7962*			Sensor relay (X6-8) harness	HCR7297*	X6, 8H type machine
[C57] Y-LIMIT harness	HCR7348*		(A21-4) Core module MX WLAN 10inch	ECD7964*			Sensor relay (12) harness	HCR7294*	X8, 12H type machine
[C59] X-SENER harness	HCR7331*		(B41) SMA cable	EPZ0121*			[C72] Needle relay (2-4) harness2	HCR7301*	2, 4H type machine
[C60] X-motorEncoder harness	EPM0077*		(B42) Antenna	EPZ0120*			Needle relay (X4-6) harness2	HCR7302*	X4, 6H type machine
[C61] X-motor harness	EPM0074*		(B43) Under thread stop switch	HCD7922*			Needle relay (X6-8) harness2	HCR7303*	X6, 8H type machine
[C62] Y-motorEncoder harness	EPM0086*	2, 4, X4 type machine	(B44) Under Thread DC-motor unit	HCD7921*			Needle relay (12) harness	HCR7300*	X8, 12H type machine
Y-motorEncoder harness	EPM0087*	6, X6, 8H type machine	(B45) HCR2 Back sefty S1 sensor	HCR7945*			[C73] LVDS harness	HCR7280*	
Y-motorEncoder harness	EPM0078*	X8, 12H type machine	(B46) HCR2 Back sefty S2 sensor	HCR7946*					
[C63] Y-motor harness	EPM0082*	2, 4, X4 type machine	(B47) HCR2 Back sefty S3 sensor	HCR7947*					
Y-motor harness	EPM0083*	6, X6, 8H type machine	(B48) HCR2 Back sefty S4 sensor	HCR7948*					
Y-motor harness	EPM0075*	X8, 12H type machine	(B49) HCR2 Needle sefty S5 sensor	HCR7949*					
[C64] X-S harness	HCR7341*		(B50) Clip solenoid	HCR7903*					
[C65] Y-S harness	HCR7342*		(B51) pointer	HCR7941*					
[C66] Z-S harness	HCR7343*		(B61) 10.4LCD+TPunit	EPZ0141*					
[C67] S-Ground harness	HCR7211*		(B62) 10.4Emergency stop sw (DISP)	HCD7955*					
[C68] BRAKE-SW (2-4) harness	HCR7360*	2, 4H type machine							
BRAKE-SW (X4-6) harness	HCR7359*	X4, 6H type machine							
BRAKE-SW (X6-8) harness	HCR7358*	X6, 8H type machine							
BRAKE-SW (12) harness	HCR7357*	X8, 12H type machine							

* : 改訂番号 Mark is a revision number




E7-2 Electrical connection diagram (S. No. 1096001~) 1/5

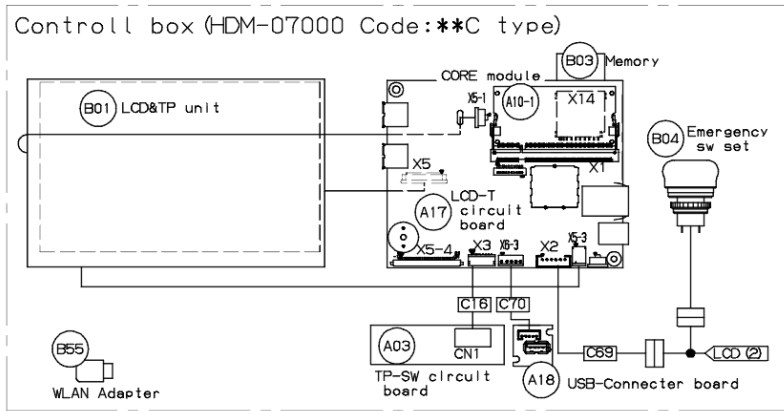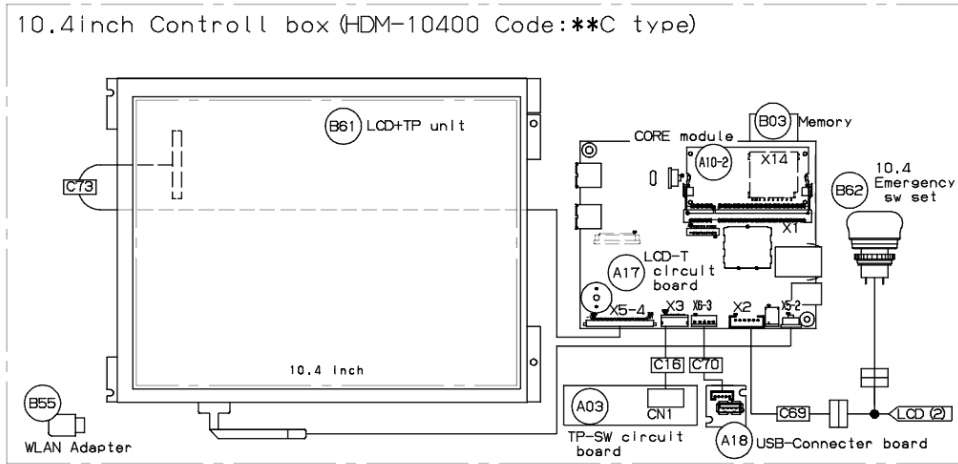

E7-2 Electrical connection diagram (S. No. 1096001~) 2/5

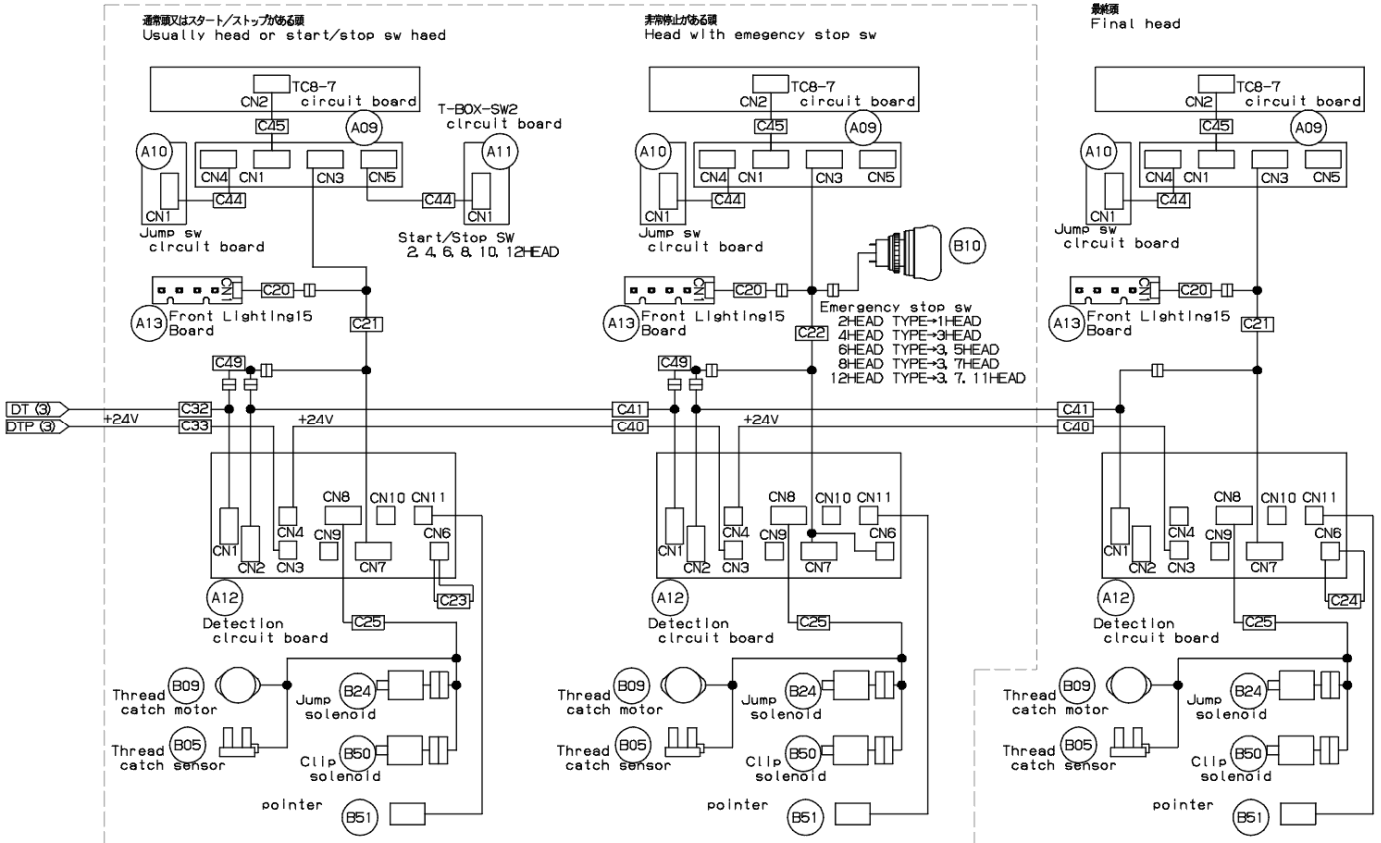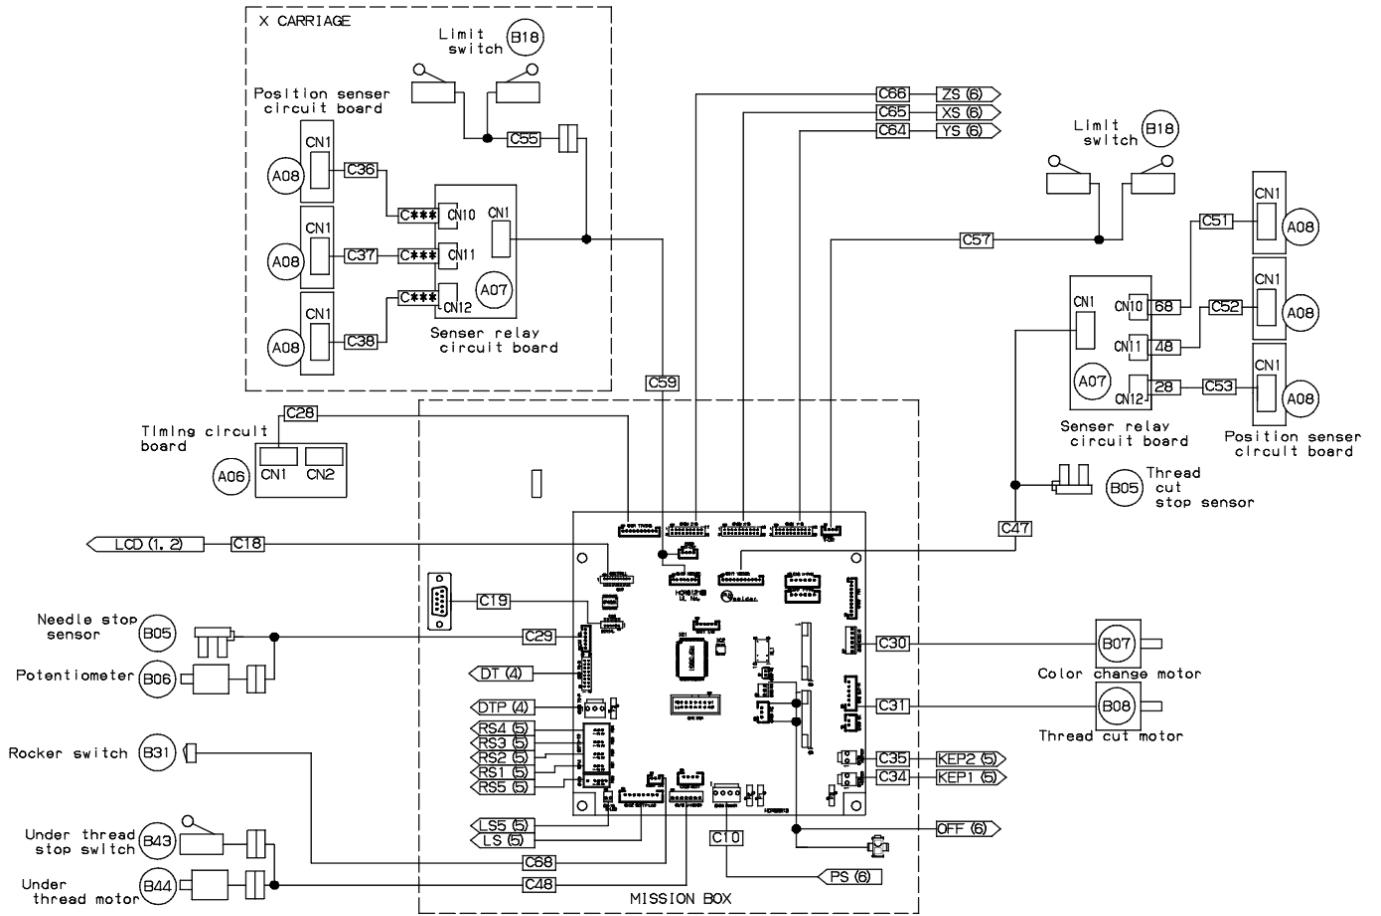

E7-2 Electrical connection diagram (S. No. 1096001~) 3/5

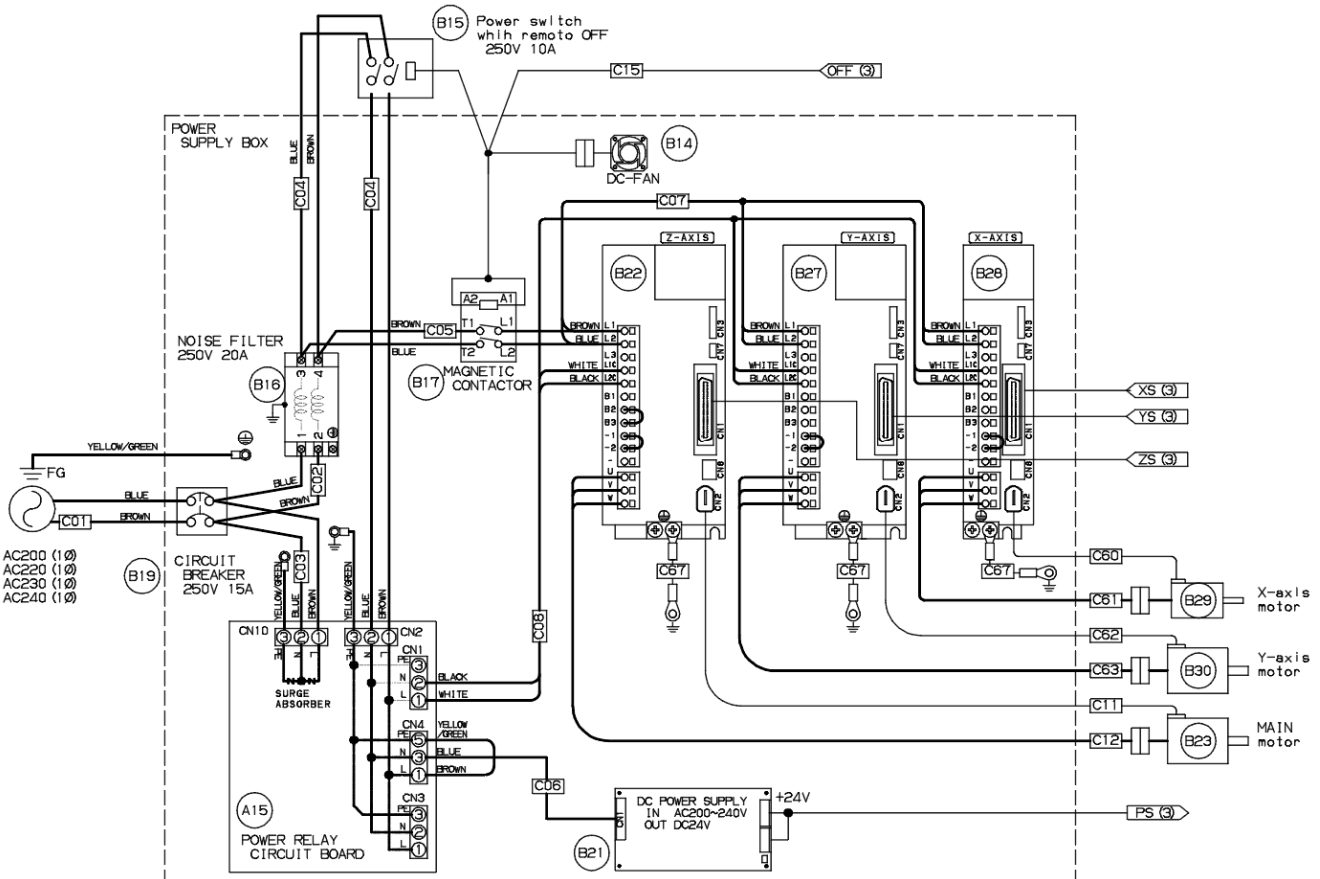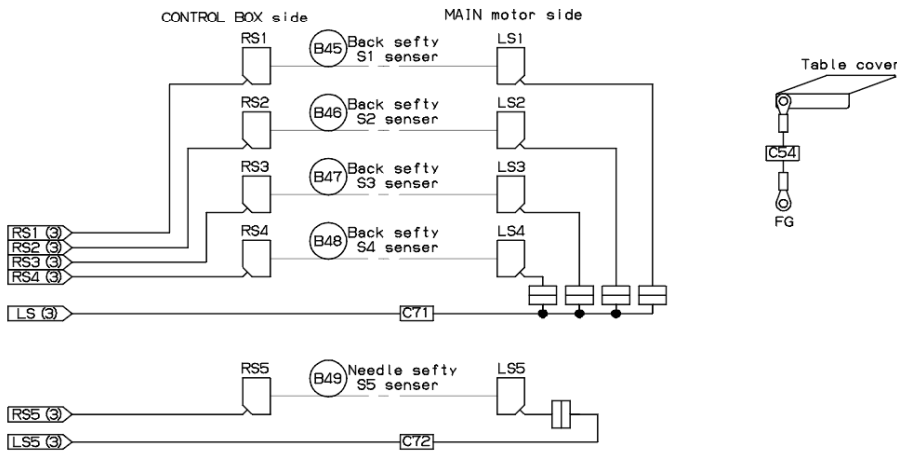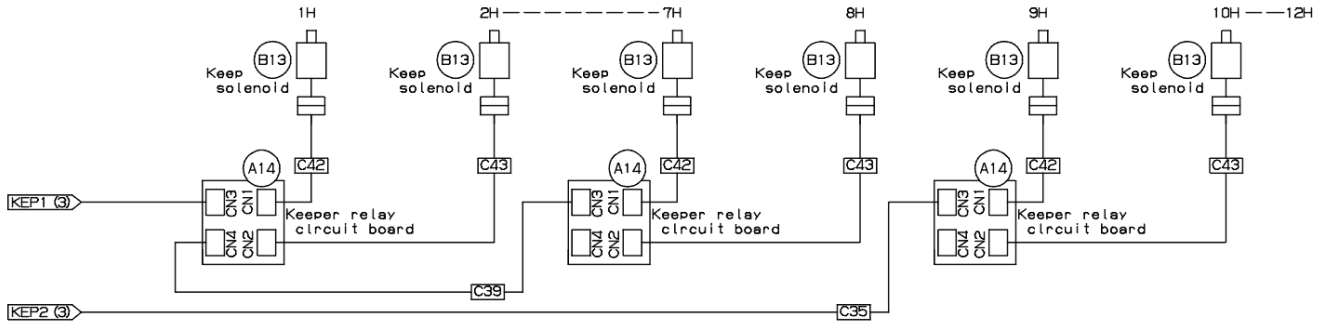

E7-2 Electrical connection diagram (S. No. 1096001~) 4/5

Parts Names	Parts No.	Remark	(OPTION)
(A21-1) 7inch Core module MX	HCD7961* (C-BOX **B TYPE)		(A21-3) 7inch Core module MX W HCD7962* (C-BOX **B TYPE)
(A22) LCD-CE-MX circuit board	HCD8122* (C-BOX **B TYPE)		(A21-2) 10inch Core module MX HCD7963* (C-BOX **B TYPE)
(A03) TP-SW circuit board	HCD8116*		(A21-4) 10inch Core module MX W HCD7964* (C-BOX **B TYPE)
(A10-1) 7inch module	HCD7967* (C-BOX **C TYPE)		(A10-2) 10inch module HCD7968* (C-BOX **C TYPE)
(A17) LCD-T circuit board	HCD8126* (C-BOX **C TYPE)		
(A18) USB connector circuit board	HCB8118*		(B41) SMA Cable EPZ0121* (C-BOX **B TYPE)
			(B42) Antenna EPZ0120* (C-BOX **B TYPE)
(B01) LCD unit TP unit	EPZ0149* EPZ0148*		(B55) WLAN Adapter EPZ0188*
(B03) Memory card	EPZ0122*		(B61) 10.4LCD+TPunit EPZ0141*
(B04) Emergency sw set	HCD7945*		(B62) 10.4Emergency stop sw (DISP) HCD7955*
(C16) SW harness	HCD7252*		(C73) LVDS harness HCD7280*
(C17) BOX harness	HCD7273* (C-BOX **B TYPE)		
(C69) C-BOX harness	HCD7255* (C-BOX **C TYPE)		
(C70) USB delay harness	HCD7254*		

* : 版本号 Mark is a revision number

Parts Names	Parts No.	Remark				
(A05) CONT-R2 circuit board	HCR8121* *3		(B15) Power switch whis remotoOff EPS0089*		(B27) 2H Y-Driver HCR7965*	2H type machine
(A06) Timing (Main) circuit board	HCD8109*H		(B16) Noise filter EPK0123*		4H Y-Driver HCR7968*	4, X4H type machine
(A07) Senser Relay circuit board	HCD8111*		(B17) MC EPK0124*		6H Y-Driver HCR7971*	6, X6H type machine
(A08) Position sensor circuit board	HCD8110*		(B18) Limit SW EPS0118*		8H Y-Driver HCR7974*	8, X8H type machine
(A09) TC8-7 circuit board	HCD8124*		(B19) Circuit Protector EPK01470		12H Y-Driver HCR7960*	12H type machine
(A10) Jump sw circuit board	HCR8126*		(B21) DC24V power supply EPK01460	2~8H type machine	(B28) 2H X-Driver HCR7964*	2H type machine
(A11) T-BOX SW circuit board	HCR8127*		DC24V power supply EPK0125*	12H type machine	4H X-Driver HCR7967*	4, X4H type machine
(A12) Detection circuit board	HCR8107*		(B22) 2H Z-Driver HCR7966*	2H type machine	6H X-Driver HCR7970*	6, X6H type machine
(A13) Front light15 circuit board	HCB8129*		4H Z-Driver HCR7969*	4, X4H type machine	8H X-Driver HCR7973*	8, X8H type machine
(A14) Keeper relay circuit board	HCR8112*		6H Z-Driver HCR7972*	6, X6H type machine	12H X-Driver HCR7959*	12H type machine
(A15) Power relay circuit board	HCR8104*		8H Z-Driver HCR7975*	8, X8H type machine	(B29) X-axis motor EPM0080*	2, 4H type machine
			12Z-Driver HCR7961*	12H type machine	X-axis motor EPM0070*	X4, 6, 8, X8, 12H type machine
			(B23) Z-axis motor EPM0080*	2, 4H type machine	(B30) Y-axis motor EPM0070*	2, 4H type machine
(B05) Photo sensor	EPP0052*		Z-axis motor EPM0070*	X4, 6, 8, X8H type machine	Y-axis motor EPM0071*	X4, 6, 8, X8, 12H type machine
(B06) Potentiometer	HCB7960*		Z-axis motor EPM0071*	12H type machine	(B31) Rocker switch EPS0104*	
(B07) Color change motor	HCB7921*		(B24) Jump solenoid HCB7901*			
(B08) Thread cut motor	HCD7913*					
(B09) Thread catch motor	EPM0059*					
(B10) Emergency stop sw (HEAD)	HCR7962*					
(B13) Keep solenoid	HCD7905*					
(B14) DC fan unit	HCR7951*					

* : 版本号 Mark is a revision number

E7-2 Electrical connection diagram (S. No. 1096001~) 5/5

Parts Names	Parts No.	Remark					
			C19	RS232C cable2	HCD7271*		
			C37	Limit cross (1700) harnees	HCR7119*		4, 6, 8, 12H type machine
C01	HCR3 POWER-P COORD	HCR7367*	2-8H type machine	C20	Front led cable2	HCD7225*	
	HCR POWER-P COORD	HCR7333*	12H type machine	C21	TC-S harnees2	HCR7311*	
C02	NFB harnees	HCR7361*		C22	TC-E harnees2	HCR7312*	
C03	SA harnees	HCR7365*		C23	EMG short harnees2	HCR7227*	
C04	PSW harnees	HCR7363*		C24	EMG end harnees2	HCR7228*	
C05	MC harnees	HCR7362*		C25	Jump & Thread catch harnees	HCR7029*	
C06	PS harnees	HCR7364*		C28	L-C harnees	HCR7332*	
C07	MC relay harnees	HCR7345*		C29	Potentiometer relay harnees2	HCR7241*	
C08	Driver relay harnees	HCR7338*		C30	Color change motor harnees	HCR7042*	
C10	DC power harnees	HCR7214*			Color change motor (X8) harnees	HCR7260*	X8H type machine
C11	Main motor Encoder harness	EPM0092*	2, 4, X4H type machine	C31	Thread cut motor harnees2	HCR7243*	
	Main motor Encoder harness	EPM0093*	X4, 6, 8H type machine		Thread cut motor (X8) harnees	HCR7259*	X8H type machine
	Main motor Encoder harness	EPM0079*	X8, 12H type machine	C32	Detection SG relay harnees2	HCR7307*	
				C33	Detection P relay harnees2	HCR7306*	
C12	Main motor harness	EPM0092*	2, 4, X4H type machine	C34	Keep relay harnees2	HCR7248*	
	Main motor harness	EPM0095*	6, X6, 8H type machine		Keep relay (X8) harnees	HCR7246*	X8H type machine
	Main motor harness	EPM0091*	X8H type machine	C35	Keep relay12 harnees	HCR7249*	
	Main motor harness	EPM0076*	12H type machine	C36	Limit cross (1500) harnees	HCR7115*	4, 6, 8, 12H type machine
C15	EBOX-S harnees	HCR7366*			Limit cross (1200) harnees	HCR7116*	2, X4, X6, X8H type machine
C18	CONT cable2	HCD7272*					

* : 改訂番号 Mark is a revision number



Parts Names	Parts No.	Remark	(OPTION)				
C54	Ground harnees	HCR7211*		B43	Under thread stop switch	HCD7922*	
C55	X-LIMIT12 harnees	HCR7347*		B44	Under Thread DC-motor unit	HCD7921*	
C57	Y-LIMIT harnees	HCR7348*		B45	HCR2 Back sefty S1 sensor	HCR7945*	
C59	X-SENER harnees	HCR7331*		B46	HCR2 Back sefty S2 sensor	HCR7946*	
C60	X-motorEncoder harness	EPM0077*		B47	HCR2 Back sefty S3 sensor	HCR7947*	
C61	X-motor harness	EPM0074*		B48	HCR2 Back sefty S4 sensor	HCR7948*	
C62	Y-motorEncoder harness	EPM0086*	2, 4, X4 type machine	B49	HCR2 Needle sefty S5 sensor	HCR7949*	
	Y-motorEncoder harness	EPM0087*	6, X6, 8H type machine	B50	Clip solenoid	HCR7903*	
	Y-motorEncoder harness	EPM0078*	X8, 12H type machine	B51	pointer	HCR7941*	
C63	Y-motor harness	EPM0082*	2, 4, X4 type machine				
	Y-motor harness	EPM0083*	6, X6, 8H type machine	C71	Senser relay (2-4) harnees	HCR7295*	2, 4H type machine
	Y-motor harness	EPM0075*	X8, 12H type machine		Senser relay (X4-6) harnees	HCR7296*	X4, 6H type machine
C64	X-S harness	HCR7341*			Senser relay (X6-8) harnees	HCR7297*	X6, 8H type machine
C65	Y-S harness	HCR7342*			Senser relay (12) harnees	HCR7294*	X8, 12H type machine
C66	Z-S harness	HCR7343*		C72	Needle relay (2-4) harnees2	HCR7301*	2, 4H type machine
C67	S-Ground harnees	HCR7211*			Needle relay (X4-6) harnees2	HCR7302*	X4, 6H type machine
C68	BRAKE-SW (2-4) harnees	HCR7360*	2, 4H type machine		Needle relay (X6-8) harnees2	HCR7303*	X6, 8H type machine
	BRAKE-SW (X4-6) harnees	HCR7359*	X4, 6H type machine		Needle relay (12) harnees	HCR7300*	X8, 12H type machine
	BRAKE-SW (X6-8) harnees	HCR7358*	X6, 8H type machine				
	BRAKE-SW (12) harnees	HCR7357*	X8, 12H type machine				

* : 改訂番号 Mark is a revision number

E7-3 Explanation of function circuit board

HCD8122*

LCD-CE-MX Board Ass'y (S.No. ~ 1095015)

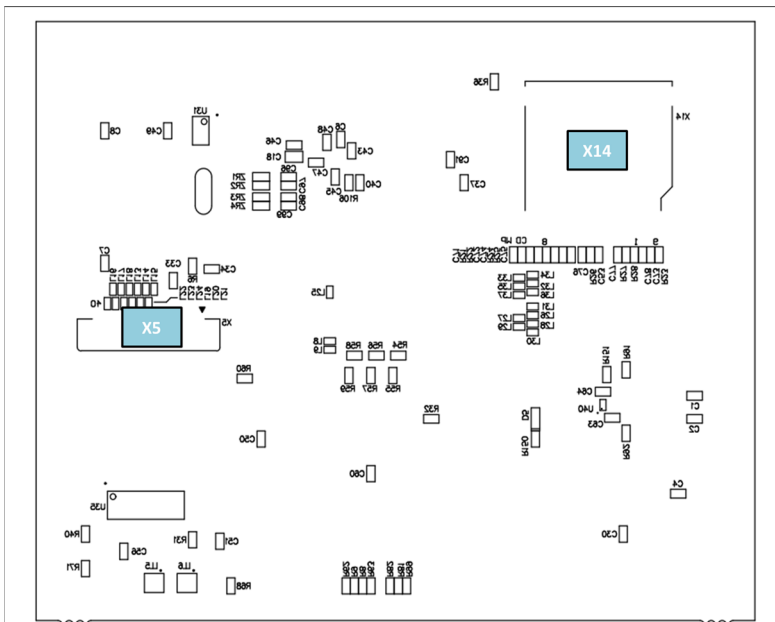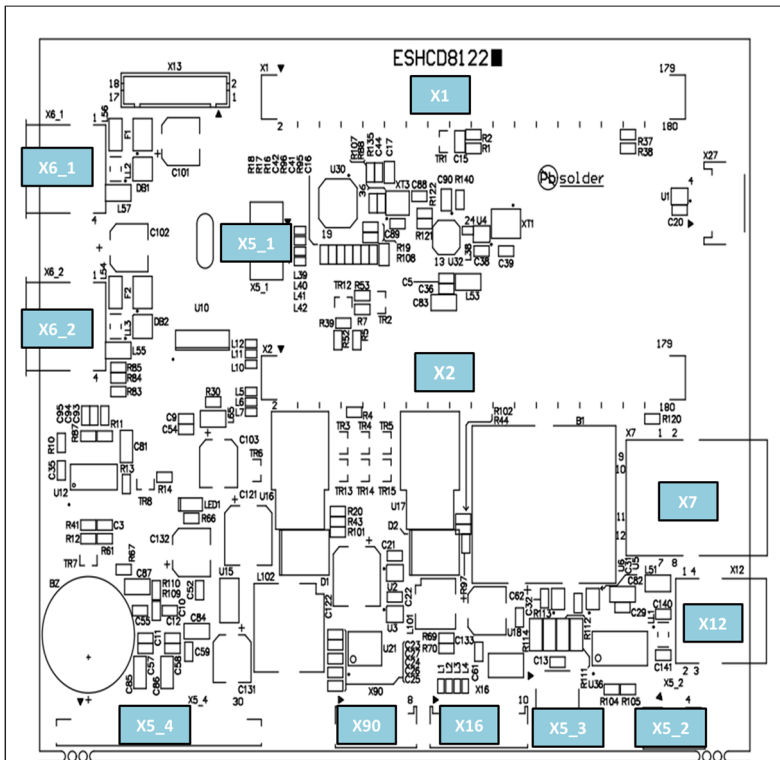


CN No.	Function
X1	Core module I/F
X2	Core module I/F
X5	7inch LCD I/F
X5_1	7inch touch panel input
X5_2	10.4inch touch panel input
X5_3	7inhc backlight output
X5_4	10.4inch LCD I/F
X6_1	USB-A connector 1
X6_2	USB-A connector 2
X7	LAN
X12	USB-B connector
X14	SD card
X16	TP-SW board I/F
X90	CONT-※※ board I/F


HCD8126*

LCD-T board Ass'y (S.No. 1096001~)

Parts side

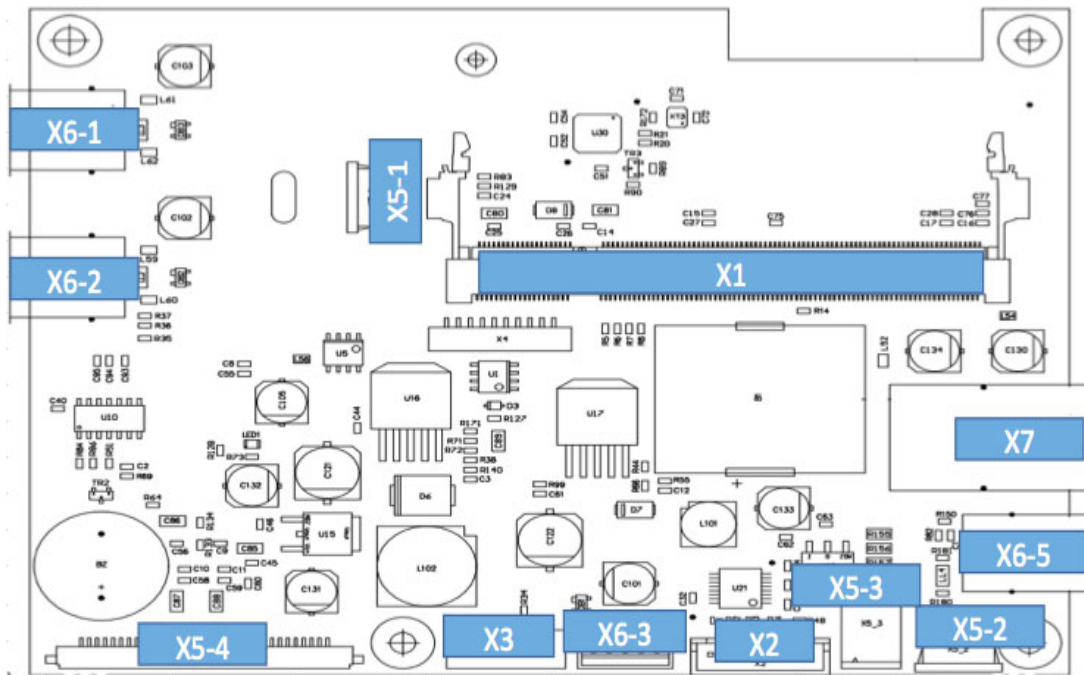


Back side

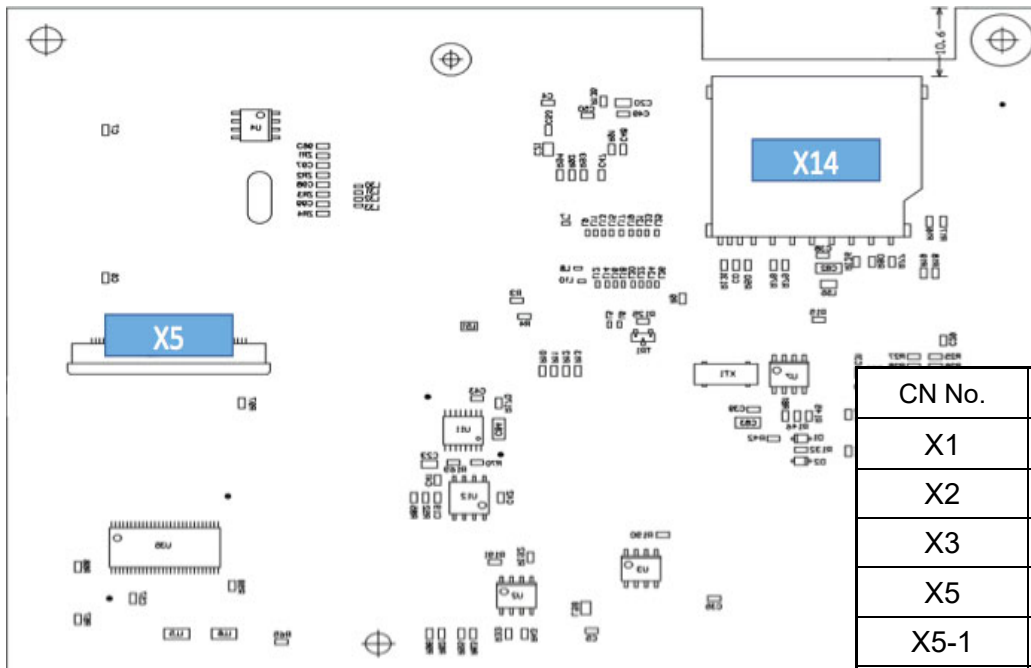

CN No.	Function
X1	Core module I/F
X2	Machine CPU I/F
X3	TP-SW board I/F
X5	7in LCD I/F
X5-1	7in touch panel input
X5-2	10.4in touch panel input
X5-3	USB-A connector 3
X5-4	10.4in LCD I/F
X6-1	USB-A connector 1
X6-2	USB-A connector 2
X6-3	7in LCD backlight output
X6-5	USB-B connector
X7	LAN
X14	SD card

HCD8116*


TP-SW Circuit Board Ass'y

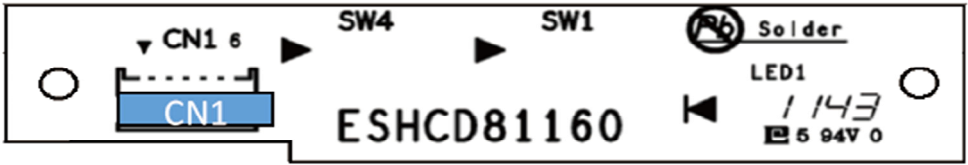

CN No.	Function
CN1	Switch output, LED input

HCB8118*


USB connector board ass'y (S.No. 1096001~)

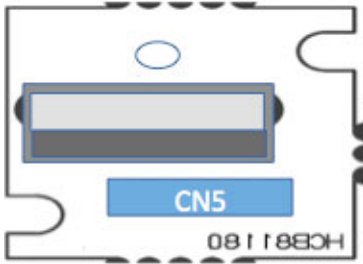

CN No.	Function
CN5	USB input

HCR8121*

CONT-R2 Board Ass'y

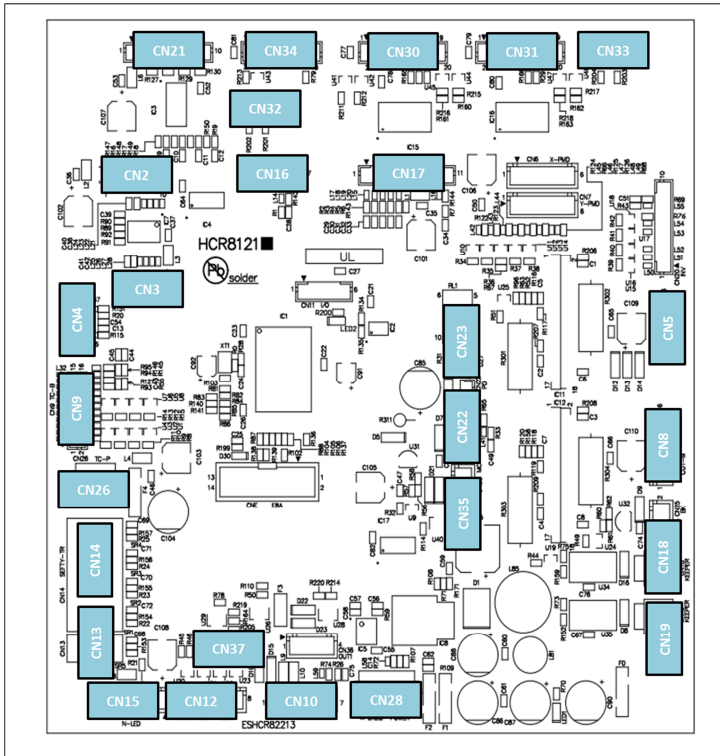

CN No.	Function
CN2	Control box I/F
CN3	Option I/F
CN4	Needle bar change potensionmeter , Needle bar change origin point sensor input
CN5	Needle bar change motor output
CN8	Thread cutting motor output
CN9	Thread detecting board output
CN10	Front LED I/F
CN10	Bobbin Winder motor output
CN12	Back safety sensor LED output
CN13	Needle safety sensor input
CN14	Back safety sensor input
CN15	Needle safety sensor LED output
CN16	X position sensor I/F
CN17	Y position sensor I/F
CN18	Keeper solenoid output 1
CN19	Keeper solenoid output 2
CN21	Timing detecting board I/F
CN22	Main seitch remote output
CN23	Power supply box fan output
CN26	24V power source for Thread detecting board
CN28	Input of 24V power source
CN30	X servo motor I/F
CN31	Y servo motor I/F
CN32	X limit switch I/F
CN33	Y limit switch I/F
CN34	Main servo motor I/F
CN35	Magnetic contactor output
CN37	Brake switch

HCR8108*

JUMP SW Circuit Board Ass'y

CN No.	Function
CN1	TC7-8 board I/F



HCR8109*


START/STOP Circuit Board Ass'y

CN No.	Function
CN1	TC7-8 board I/F



HCR8107*


DETEC Circuit Board Ass'y

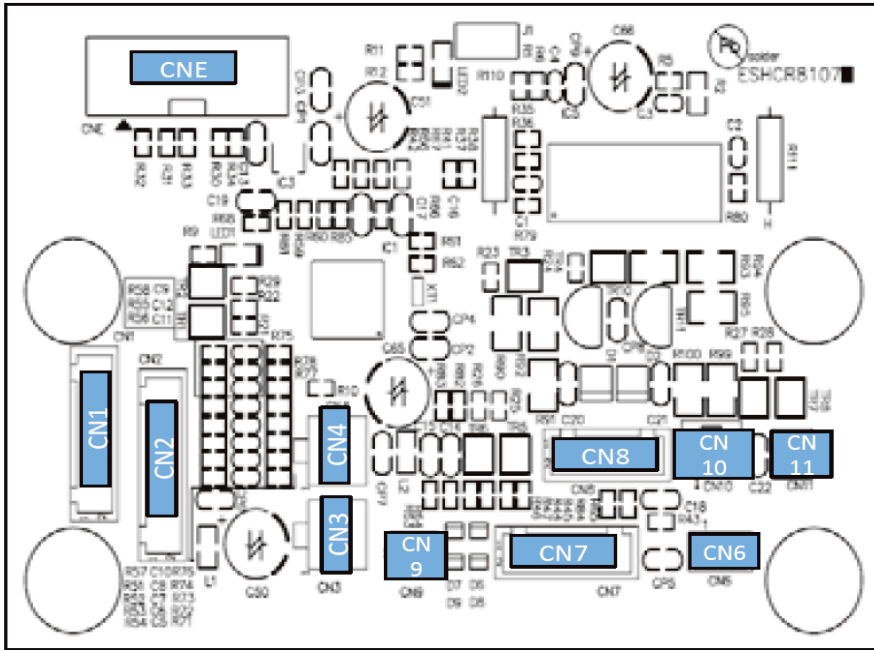

CN No.	Function
CN1	Input of relay control signal (to CONT-R2 board)
CN2	Output of relay control signal (to next detecting board)
CN3	24V power source for Thread detecting board
CN4	24V power source for Thread detecting board
CN6	Emergency stop I/F (Connect relay cable when the emergency button is not fixed with head)
CN7	TC7-8 board I/F
CN8	Output of Thread catch motor, Jump solenoid, Clip solenoid
CN9	Option I/F
CN10	Unused
CN11	Laser pointer output
CNE	Reserved for factory

HCB8116*


FRONT LED Circuit Board Ass'y

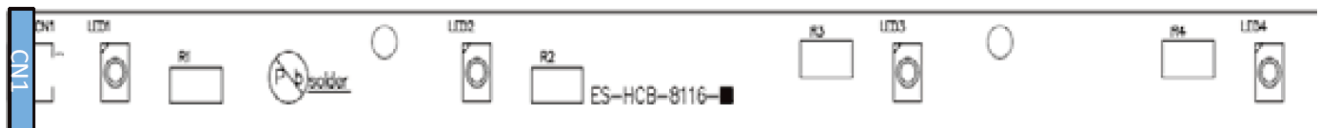

CN No.	Function
CN1	24V power source input

HCR8112*


KEEPER RELAY Circuit Board Ass'y

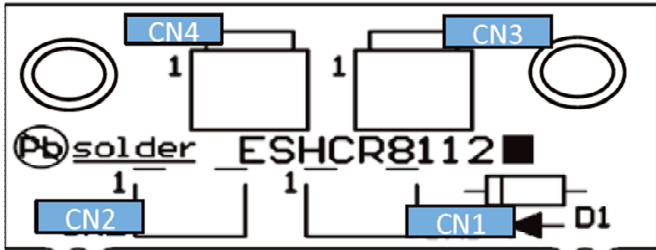

CN No.	Function
CN1	Keeper 1
CN2	Keeper 2 (next head)
CN3	Input of keeper relay
CN4	Output of keeper relay

HCR8104*


POWER RELAY Circuit Board Ass'y

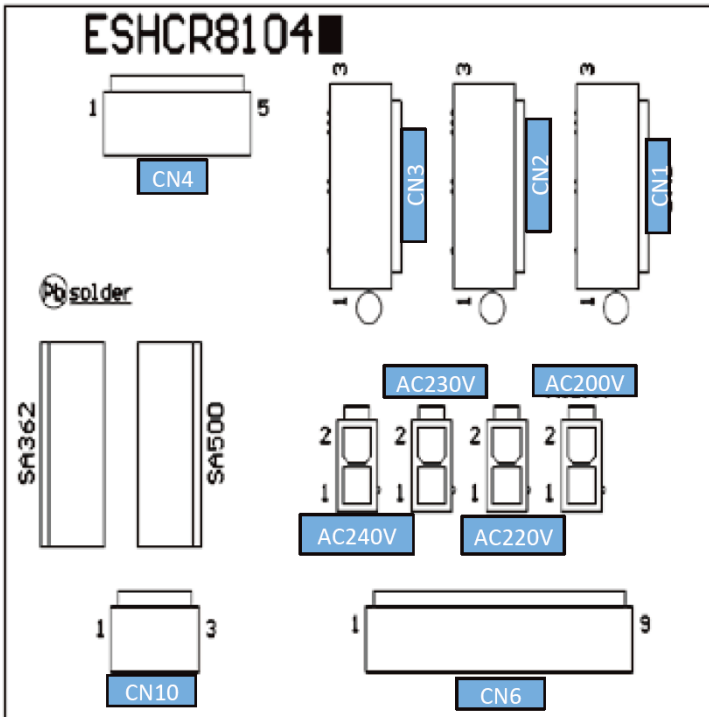

CN No.	Function
CN1	AC power source input
CN2	AC power source relay (Inverter) (Rev. A XY-PM driver)
CN3	AC power source relay (for Optionr)
CN4	AC power source relay (Switching power supply)
CN6	Transformer input (Rev. A : Unconnected)
AC200V	Changing of tap for transformer
AC220V	
AC230V	
AC240V	

E8 How to respond for some question (As example step)

*When you receive some question from customer, please use this step for sold problem as sample.

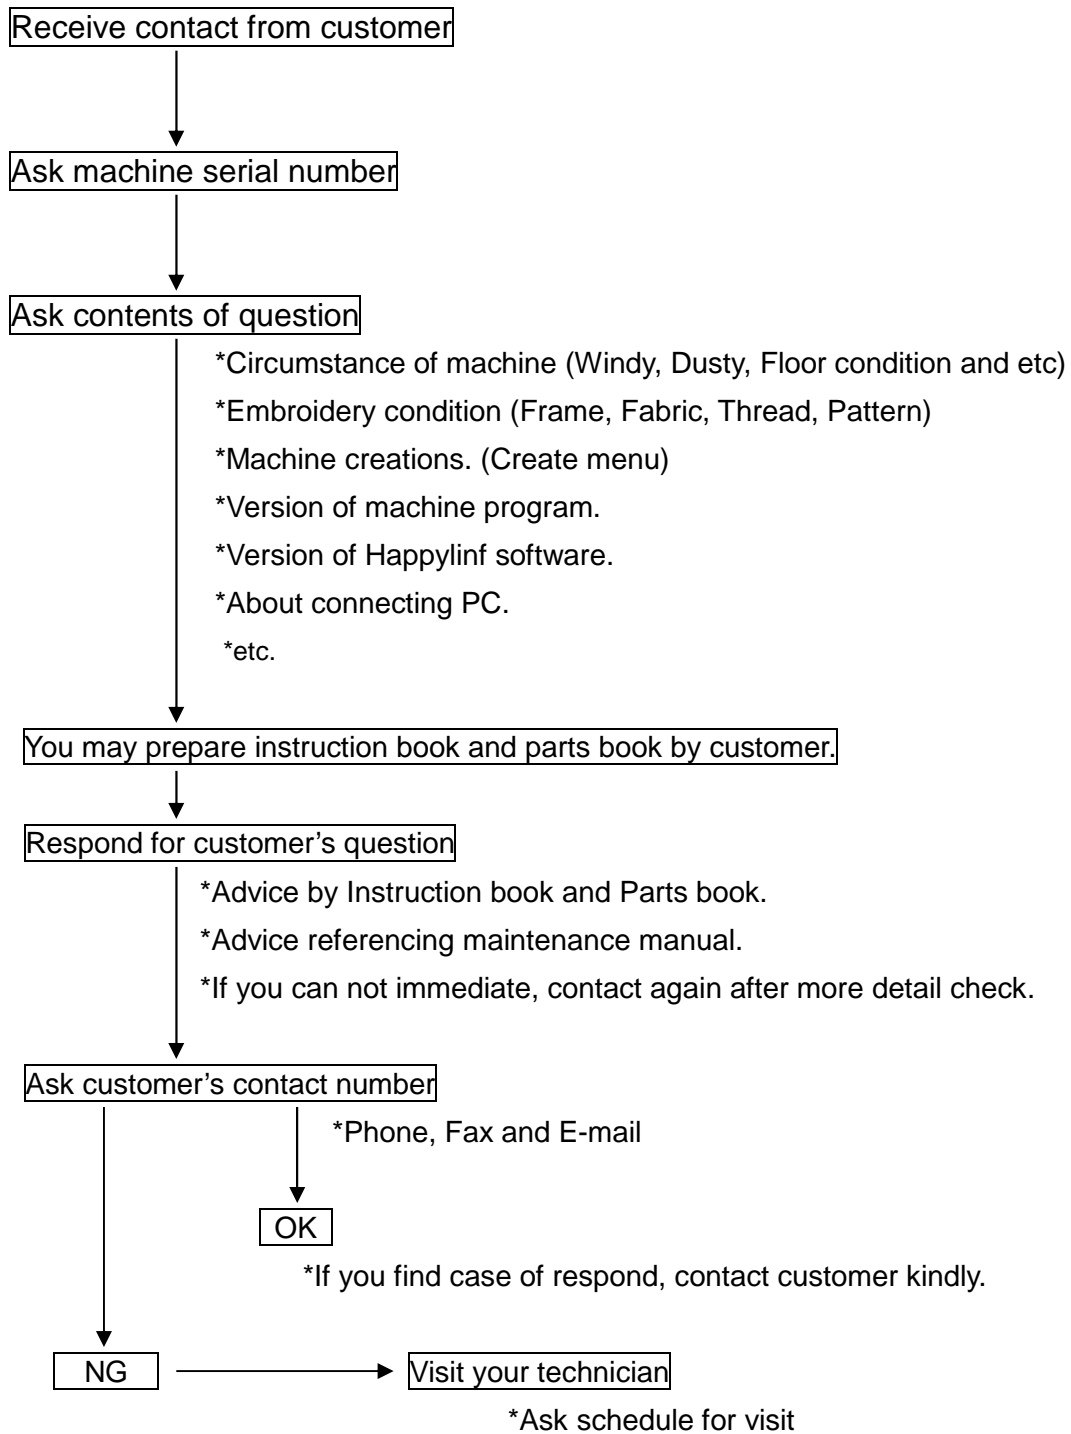

E9 Trouble shooting

E9-1 Electricity doesn't turn on

Trouble	Factor	Cause of trouble and measure	Page
Electricity doesn't turn on	Mechanical	1. Did fuse blow? 1-1 If it did, replace it.	
		2. Check of defect on board. 2-1 Replace of LCD-** board. 2-2 Replace of LCD unit. 2-3 Replace of CONT-R2 board	E3-2 E3-2 E2-1
		3. No problem in power supply? 3-1 Check and adjust the correct voltage. 3-2 Try to replace power supply.	E2-10
		4. Check of Cable catching causes short-circuit. 4-1 Please insulate the cable after removing outer cover. 4-2 Replace of cable.	
		5. Confirm not getting power supply from same outlet with other embroidery machine or other machines which contains motor. 5-1 Preferably only 1 embroidery machine should be connected with 1 outlet. (Maximum 2-3machines)	
	Operator	1. Didn't press emergency switch? 1-1 Release lock.	
		2. Is power cable connected normally? 2-1 Machine rated voltage between Live-Neutral	(2-1)
	Environment	1. Is electricity in receptacle? 1-1 Supply power.	

() ----- Reference instruction book

E9-2 Thread break

Trouble	Factor	Cause of trouble and measure	Page
Thread break	Mechanical	1. Is needle drop unstable by vibration? 1-1 Reconsider where to install the machine. 1-2 Move the machine to floor fully reinforced.	2-1
		2. No burr or scratch in thread guide hole? 2-1 Remove burr and scratch. 2-2 Replace of thread guide.	2-8
		3. No problem in thread adjusting spring? 3-1 Replace spring if it doesn't spring. 3-2 If weak or broken, replace it.	2-8
		4. Does detecting roller make smooth turn? 4-1 Clean inside hole of bearing. 4-2 Correct so as for slit disc not to touch sensor. 4-3 Correct so as for cable not to touch slit disc. 4-4 Check cable of TC 12 Board is unconnected	E2-4
		5. No problem in thread guide unit and thread tension ass'y? 5-1 Remove burr and scratch if appeared. 5-2 Remove lints and clean.	2-8
		6. Does disc on thread tension ass'y. turn smoothly? 6-1 Remove lints and clean. 6-2 Replace	2-8
		7. Is backlash between take-up lever and take-up crank roller not bigger? 7-1 Replace of take-up lever.	4-2-11
		8. No problem in needle holder? 8-1 Remove burr and scratch. 8-2 Make proper fixing. (direction) 8-3 Replace if thread guide is bent.	3-1 2-8
		9. No burr and scratch on needle plate? 9-1 Remove burr and scratch in needle hole. 9-2 Remove burr and scratch around needle hole on back of needle plate. 9-3 Replace it if not furbished. 9-4 If furbishing made needle hole wider, replace it.	2-8
		10. No problem in pressure foot? 10-1 Remove burr and scratch. 10-2 Correct bent. 10-3 Adjust height. 10-4 Replace of pressure foot. 10-5 Replace of pressure foot drive cam.	2-8 2-8 4-1-4 4-1-5

Trouble	Factor	Cause of trouble and measure	Page
Thread break	Mechanical	11. No problem in rotary hook? 11-1 Clean it to remove lint. 11-2 Furbish scratch. 11-3 If backlash of bobbin case holder and outer hook grows bigger, replace them. 11-4 Replace.	2-8 (23-2)
		12. No problem in rotary hook retainer? 12-1 Remove burr and scratch. 12-2 Adjust position.	4-4-2
		13. No problem in needle? 13-1 Fix it properly . 13-2 Select proper size of needle to match thread thickness. 13-3 If tip of needle is warped or bent, replace. 13-4 Replace.	3-1 3-3 2-8
		14. No problem in bobbin case? 14-1 Remove rust and scratch. 14-2 If thread guide spring is off, replace it.	
		15. No problem in bobbin? 15-1 Remove scratch (iron bobbin). 15-2 If distorted. replace it.	
		16. Is needle bar spring not broken? 16-1 Replace it.	4-2-9
		17. Does needle bar make smooth movement? 17-1 If bent, replace it.	4-2-9
		18. Needle doesn't drop in the center of needle hole. 18-1 Adjust positioning plate and adjust needle drop back and forth. 18-2 Adjust position of needle selection unit, then adjust needle drop right and left.	4-2-3 4-2-4, -5
		19. Is the lowest needle position proper? 19-1 Adjust mechanical lowest needle position. 19-2 Adjust electric lowest needle position.	E2-2
		20. Is needle height proper? 20-1 Adjust as specified.	4-2-6
		21. Is rotary hook timing proper? 21-1 Adjust as specified.	4-4-1
		22. Is clearance between needle and rotary hook proper? 22-1 Adjust as specified.	4-4-1

() ----- Reference instruction book

Trouble	Factor	Cause of trouble and measure	Page
Thread break	Mechanical	23. Check tip of keeper hit the bobbin case. 23-1 Adjust it regularly.	4-5-8
		24. Is take-up lever timing proper ? 24-1 Adjust as specified.	4-1-2
		25. No problem in timing belt? 25-1 Adjust tension. 25-2 If scratched or damaged, replace it.	4-7-1
		26. Is revolution setting proper? 26-1 Make automatic speed setting.	E4-3
	Operator	1. Operation is wrong (no proper [Machine settings] setting for sewing?) 1-1 Tell how to operate.	(15-1)
		2. Is pattern dwindled too much by pattern adjustment? 2-1 Adjust size so as to produce less thread break. 2-2 Use pattern edited again (density_ change).	
		3. Is thread tension properly set? 3-1 <Upper thread> Considering sewing finish, set tension. 3-2 <Bobbin thread> Considering upper thread tension, set tension.	2-9 2-9
		4. Is bobbin winding proper? 4-1 Adjusting bobbin winding tension, wind with proper strength.	E6-4
		5. Is bobbin put in bobbin case properly? 5-1 Viewing from front of bobbin case, set so that bobbin turns left-wise.	2-9
		6. Does thread cone stand properly? 6-1 Keep thread from hitting felt. 6-2 Stand vertically.	(4-6)
		7. Is passing of thread proper? 7-1 Pass thread properly.	(4-6, 4-7) 2-9
		8. Is cloth properly stretched? 8-1 No loosening and no too much tightening. Even tension in depth and width. 8-2 Texture should be even in direction of X and Y.	(6-2, 7-6)
		9. Is frame properly set? 9-1 Frame should be put in positioning hole on tubular-frame. 9-2 No loosening of screw.	(6-3, 7-6)

() ----- Reference instruction book

Trouble	Factor	Cause of trouble and measure	Page
Thread break	Operator	10. Is frame used to suit pattern size? 10-1 Use frame to suit pattern size.	(13-1)
		11. When you dispose of thread (thread remains around rotary hook), didn't you damage rotary hook, needle plate with scissors? 11-1 Tell to dispose of thread carefully. 11-2 Open needle plate to dispose of thread.	(23-2)
		12. Didn't you neglect cleaning and oiling? 12-1 Tell to always clean and use cleanly. 12-2 Tell to oil regularly.	(23-2) (23-1b)2-7
	Thread & cloth	1. Is thread used to suit needle size? 1-1 Use thread to suit needle size.	3-3
		2. Is thread used to suit embroidery? (thread twist, tender thread). 2-1 Don't use too strongly twisted thread. 2-2 Twist of thread is to be left-wise. 2-3 Use tender thread. 2-4 Don't use thread with knot or uneven size.	3-2
		3. Is thread properly wound against cone? 3-1 Use thread to be wound smoothly.	
		4. Isn't tip of cone warped or isn't thread caught in scratch? 4-1 Remove warp and scratch.	
		5. Don't use thread left for a long period? (inferior thread). 5-1 Don't buy thread more than you use. 5-2 Tell not to store thread for a long period. 5-3 Tell how to store. (direct sunshine. humidity dust etc.)	
		6. Isn't poor unwoven cloth used? Is number of sheets used proper?	
	Environment	1. Is strength of table and floor enough? 1-1 Reconsider place to install the machine. 1-2 Move the machine to place where floor is strong enough.	2-1
		2. Are room temperature and humidity proper against thread? 2-1 It is desirable to install air conditioner to keep temperature and humidity in a certain level.	(23-1)
		3. Doesn't embroidery machine receive direct sunlight? (cause of inferior thread) 3-1 See not to expose to sunlight (spread curtain)	

() ----- Reference instruction book

Trouble	Factor	Cause of trouble and measure	Page
Thread break	Environment	4. Is there something that produce steam, wasted cotton, dust around. the embroidery machine? 4-1 Keep the embroidery machine off those things.	
		5. Does thread go out of control by taking wind from outside or heater etc.? 5-1 Keep the embroidery machine off such wind. 5-2 Move the embroidery machine to proper place.	
	Pattern	1. Does thread break occur repeatedly at same place in design? 1-1 Check pattern to modify punching.	
		2. Is it too narrow between stitches? 2-1 Check pattern to modify punching. 2-2 Setting of [Reading] menu. (Stitch sweeper)	(10-3)
		3. Too many empty stitches? 3-1 Make [Reading] setting. (Skip null stitches)	(10-3)
	Others	1. Using spray paste (adhesive material) 1-1 Clean around rotary hook. 1-2 Replace or clean needle. 1-3 Use this paste at a given place and never use in front or back of the embroidery machine.	(23-2) 3-1

() ----- Reference instruction book

E9-3 Erroneous thread cut

Trouble	Factor	Cause of trouble and measure	Page
Erroneous thread cut (E-190) (E-193)	Mechanical	1. Is thread cut timing proper? 1-1 Set timing to specified value.	4-5-2
		2. Isn't rubbing of fixed knife and moving knife weak? 2-1 Adjust to be able to rub properly.	4-5-6
		3. Does moving knife make smooth move? 3-1 Check if rubbing of moving knife and fixed knife is not too strong. 3-2 Check no loosening of screw on moving knife. 3-3 Check no damage or scratch on face of moving knife.	4-5-6 4-5-3
		4. Check Displace of moving knife. 4-1 Adjust of moving knife position.	4-5-5
		5. Check defacement of moving knife or fixed knife. 5-1 If possible, furnish with file. 5-2 Replace	4-5-6 4-5-3
		6. No backlash in up and down direction of knife drive shaft? 6-1 Check no loosening of screw on moving knife. 6-2 Check no loosening of screw on knife drive shaft.	4-5-3
		7. No backlash in fixed knife? 7-1 Check no loosening of screw on fixed knife.	4-5-6
		8. Does thread cut pulse motor work properly? 8-1 Check cable. 8-2 If trouble found in LCD-** board or CONT-R2 board, replace. 8-3 If trouble found in thread cut pulse motor, replace. 8-4 Adjust of thread cut sensor position.	E3-2, E2-1 E2-6
		9. Is number of revolution proper at time of thread cut? 9-1 Make automatic speed setting. 9-2 If trouble in LCD-** board or CONT-R2 board, replace.	E4-3 E3-2, E2-1
		10. Is there no skipped stitch? 10-1 Adjust needle depth. 10-2 Adjust clearance between needle and rotary hook. 10-3 Is height of pressure foot proper? 10-4 Is rotary hook timing proper? 10-5 Is relation between needle and thread proper?	4-2-6 4-4-1 4-1-4 4-4-1 3-3

() ----- Reference instruction book

Trouble	Factor	Cause of trouble and measure	Page
Erroneous thread cut (E-190) (E-193)	Mechanical	11. Check the needle bar moves up and down during thread cut. 11-1 Replace needle bar cushion. 11-2 Replace needle bar driver.	4-2-9 4-1-1
		12. Is position of keeper proper? 12-1 Adjust the fixed position regularly.	4-5-8
		13. Check the movement of keeper goes smoothly. 13-1 Readjust if it is not smooth.	4-5-8
	Operator	1. No negligence in cleaning thread cut device? 1-1 Tell to clean regularly. # It's desirable to prepare brush with soft hair and air gun.	(23-2)
		2. Is timing of thread tension proper? 2-1 <Upper thread> Considering sewing finish, set tension. 2-2 <Bobbin thread> Considering upper thread tension, set tension.	2-9 * *
	Environment	1. Are power and voltage rated and stable? 1-1 Supply rated voltage.	(23-1)
	Thread & cloth	1. Is twist of thread too strong? 1-1 Use thread with proper twist.	3-2
		2. No skipping by use of lots of paste? 2-1 Use small amount of paste. 2-2 Remove paste stuck to needle.	

() ----- Reference instruction book

E9-4 Off-registration of pattern

Trouble	Factor	Cause of trouble and measure	Page
Off-registration of pattern	Mechanical	1. Does frame move smoothly? 1-1 Avoid curling of thread and cloth. 1-2 Reinstall of outer cover in case of touch with outer cover.	
		2. Is carriage belt tension proper? 2-1 Adjust all belts as specified.	4-6-1 4-6-3
		3. No loosening of screws on carriage drive? 3-1 Check screw. If loosened, tighten firmly.	
		4. No lints or dust around idler pulley on carriage? 4-1 Clean	
		5. No damage in carriage belt? 5-1 If damaged, replace.	
		6. No backlash of back and forth in moving head? 6-1 Adjust positioning roller shaft to remove backlash back and forth.	4-2-3
		7. Is height of pressure foot proper? 7-1 Adjust as specified.	4-1-4
		8. No problem in motion of pulse motor? 8-1 Check wiring. If screw got loosened, tighten more. 8-2 After 9-1, still problem, then replace.	
		9. No problem in motion of servo amplifier ? 9-1 Check wiring. If screw got loosened, tighten more. 9-2 After 10-1, still problem, then replace.	E2-8
		10. Doesn't other frame than Happy's genuine one used? 10-1 If frame is too heavy, don't use it. 10-2 If setting is not proper, set it so as not to move.	
		11. No problem in LCD-** board or CONT-R2 boar ? 11-1 Try to initialize. 11-2 Replace of CPU board.	E4-3 E3-2,E2-1
		12. Is number of revolution proper? 12-1 Make automatic speed setting.	E4-3
		13. Not affected by noise? 13-1 Don't use the machine near where noise is generated.	

() ----- Reference instruction book

Trouble	Factor	Cause of trouble and measure	Page
Off-registration of pattern	Mechanical	14. No problem in timing sensor unit? 14-1 Test the Machine-Test Machine movement #11 (Test of timing sensor unit) of Maintenance mode, Check timing sensor unit. If trouble found, error number and messages will be displayed. If measure doesn't solve the trouble, replace of timing circuit board or cable.	E5-2
		E-18 Problem in detecting angle of main shaft. Check timing slit. Adjust timing slit. Turn main shaft once by hand. If LED4 (L point) lights two times or more, Adjust detecting slit.	4-7-3
		E-51 L point sensor doesn't detect. E-52 C point sensor doesn't detect. Clean dust attached to sensor. Check detecting slit. If trouble found, Adjust detecting slit.	4-7-3
	Operator	1. Is setting of frame correct? 1-1 Frame should be put in positioning hole on tubular frame. 1-2 Set so as for screw not to loosen.	(6-3, 7-6)

() ----- Reference instruction book

Trouble	Factor	Cause of trouble and measure	Page
Off-registration of pattern	Operator	2. Is cloth properly stretched. 2-1 Stretch properly.	(6-3, 7-6)
		3. Is thread tension proper? 3-1 Observing sewing rhythm, set thread tension properly.	2-9
		4. Was the machine left for a long time in middle of sewing? 4-1 Try to finish sewing as soon as possible.	
	Environment	1. Is strength of table and floor enough? 1-1 Check where to place the machine again. 1-2 Move to where floor is strong enough.	2-1
		2. No problem in pulse motor driver by low power and voltage (variation)? 2-1 Supply rated voltage. 2-2 Use transformer. 2-3 Use stabilizer.	(23-1)
		3. Is there no place where noise is generated near the machine? 3-1 Don't use the machine near where noise is generated.	
		4. Doesn't drive frame hit obstacle? 4-1 Remove obstacle.	
	Thread & cloth	1. Not using shrinkable cloth? 1-1 Use backing paper (consider number of sheets to use).	(4-3)
		2. Isn't breakable cloth is used by thread tightening? 2-1 Use backing paper (consider number of sheets to use).	(4-3)
		3. Is proper backing paper used? 3-1 Use backing paper to match cloth.	(4-3)
		4. Isn't cloth (embroidery) too heavy? 4-1 Don't use extremely heavy cloth.	
	Pattern	1. Pattern data may be destroyed. 1-1 Read again. 1-2 Let new pattern read.	(5-5, 5-6)
		2. Memory pattern was destroyed. 2-1 Let new pattern read.	(5-5, 5-6)
		3. No problem in memory media ? 3-1 Initialize and read again. 3-2 Prepare new memory media.	(5-5)

E9-5 Upper thread comes off from needle hole

Trouble	Factor	Cause of trouble and measure	Page
Upper thread comes off from needle hole	Mechanical	1. Is keeper in motion? 1-1 Check if cable was cut or there is something unusual. 1-2 In case solenoid is in trouble, replace. 1-3 In case LCD-** board is in trouble, replace. 1-4 In case CONT-R2 board is in trouble, replace.	E3-2 E2-1
		2. Is keeper put in right place? 2-1 Put it as specified. 2-2 Modify bent of keeper. 2-3 Adjust it again if movement is not smooth.	4-5-8 4-5-8
		3. When thread trim action, please check upper thread wind keeper or not. 3-1 If dose not wind, please adjust keeper position again.	
		4. Is magic-tape on thread catch holder not worn? 4-1 Replace magic-tape.	
		5. Does bobbin thread holder hold bobbin thread? 5-1 Adjust pressure when contacting moving knife. 5-2 In case bobbin thread holder is in trouble, replace. 5-3 Clean bobbin thread holder.	4-5-7
		6. No error in thread cut (2 threads cut)? 6-1 Check and adjust thread cut timing. 6-2 Position moving knife as specified. 6-3 Check and polish burr or scratch on moving knife. 6-4 In case moving knife is in trouble, replace.	4-5-2 4-5-5 4-5-3
		7. Are clearance between needle and rotary point and needle height are proper? 7-1 Adjust clearance between needle and rotary hook as specified. 7-2 Adjust needle depth.	4-4-1 4-2-6
		8. Doesn't thread catch hook cut upper thread? 8-1 Polish burr on hook. 8-2 In case hook is in trouble, replace.	
		9. Does thread catch hook hold upper thread? 9-1 Check if cable was cut or there is something unusual. 9-2 In case pulse motor is in trouble, replace. 9-3 Adjust fixing position. 9-4 If hook is bent, modify. 9-5 In case hook is in trouble, replace. 9-6 In case LCD-** board is in trouble, replace. 9-7 In case CONT-R2 board is in trouble, replace.	4-1-6 E3-2 E2-1

Trouble	Factor	Cause of trouble and measure	Page
Upper thread comes off from needle hole	Mechanical	10. Check the needle bar moves when start sewing. 12-1 Adjust position to fix jump solenoid. 12-2 Replace needle bar driver.	4-1-1
		11. Is number of revolution proper when sewing started? 13-1 Make automatic speed setting.	E4-3
		12. Is height of pressure foot proper? 14-1 Adjust as specified.	4-1-4
	Operator	1. Isn't thread tension too strong? 1-1 Weaken tension not to cause trouble in sewing rhythm.	2-9
		2. Keen in cleaning thread cut device? 2-1 Clean bobbin thread holder regularly.	(23-2)
		3. Is setting of bobbin thread proper? 3-1 Pass thread on bobbin thread guide surely.	* 2-9
		4. Is bobbin thread properly wound? 4-1 Adjust tensile strength of bobbin winder and check holding plate. 4-2 Pull out bobbin thread to check if it comes out smoothly.	* (4-4) 2-9
		5. Is upper thread properly passed? 5-1 Pass properly again.	(4-6, 4-7) 2-9
		6. Does thread cone stand properly? 6-1 Keep thread from hitting felt. 6-2 Stand vertically.	(4-6)
		7. Is [Machine settings] properly set? 7-1 Select setting of length of TRD. Cut [Long]. 7-2 Select setting of Quick start mode [No]. 7-3 Select setting of STR. Lock stitch [Yes].	(15-1)
	Thread & Cloth	1. Is thread used to suit embroidery? (thread twist, tender thread). 1-1 Don't use too strongly twisted thread. 1-2 Twist of thread is to be left-wise. 1-3 Use tender thread. 1-4 Don't use thread with knot or uneven size.	3-3
	Environment	1. Does wind let thread go beyond control? (outside wind, heater, and fan etc.) 1-1 Keep the embroidery machine off from wind.	
	Pattern	1. Is there stop sewing stitch for start sewing? 1-1 Modify pattern.	

E9-6 Upper thread remains

Trouble	Factor	Cause of trouble and measure	Page
Upper thread remains	Mechanical	1. Upper thread is difficult to come out of keeper at time of thread cut (bent or warp etc.). 1-1 Modify bent or warp. 1-2 Replace keeper.	
		2. Keeper doesn't return properly at time of thread cut. 2-1 Modify bent of keeper. 2-2 Adjust position to fix. 2-3 Adjust it again if movement is not smooth.	4-5-8
		3. Upper thread does not come off from magic tape of thread holder. 3-1 Insert something(Thickness 0.1-0.2mm) into holder then move it right and left to put magic tape in order. 3-2 Replacement of magic tape.	
		4. Doesn't thread catch hook cut upper thread? 4-1 Polish burr on hook. 4-2 In case hook is in trouble, replace.	
	Operator	1. Setting of thread tension is weak. 1-1 Strengthen so as not to cause trouble in sewing rhythm.	2-9
		2. Is [Machine settings] properly set? 2-1 Select setting of length of TRD. cut [Normal].	(15-1)
	Thread & cloth	1. Using hard cloth make thread difficult to go through. 1-1 Select needle and thread.	3-3
		2. Using thick cloth make thread difficult to go through. 2-1 Select needle and thread.	3-3
		3. Is thread used to suit embroidery? (thread twist, tender thread). 3-1 Don't use too strongly twisted thread. 3-2 Twist of thread is to be left-wise. 3-3 Use tender thread. 3-4 Don't use thread with knot or uneven size.	3-2

() ----- Reference instruction book

E9-7 Looping

Trouble	Factor	Cause of trouble measure	Page
Looping	Mechanical	1. Incorrect Pressure foot height adjustment 1-1 Adjust with proper setting	4-1-4
		2. Incorrect Rotary hook timing, Rotary hook clearance, Needle height 2-1 Adjust with proper setting	4-2-6 , 4-4-1
	Operator	1. Improper Upper thread threading 1-1 Threading again correctly	(4-6 , 4-7) 2-9
		2. Dose thread cone stand properly? 2-1 Keep thread from hitting felt. 2-2 Stand vertically.	(4-6)
		3. Improper Bobbin thread winding 3-1 Adjust tension of bobbin thread winder 3-2 Check bobbin thread can be pulled out smoothly by hand	(4-4) 2-9
		4. Weak upper thread tension 4-1 Adjust tension slightly stronger	2-9
		5. Weak Bobbin thread tension 5-1 Adjust tension slightly stronger	
	Thread & cloth	1. Weak Bobbin thread tension 1-1 Try to use same kind of thread as cloth	
		2. Using thread might be not proper for the design(twist, smooth) 2-1 Check if your thread has too much twist 2-2 Use thread that is Z twisted 2-3 Use smoother thread 2-4 Don't use thread has unstable thickness and/or knot	3-2
	Needle	1. Needle is not straight 1-1 Exchange to new needle	

()----- Reference instruction book

E9-8 Malfunction of thread break detection

Trouble	Factor	Cause of trouble and measure	Page
Malfunction of thread break detection (empty detection)	Mechanical	1. Trouble in turning detection roller. 1-1 Clean roller shaft holder. 1-2 Check if slit disc doesn't contacts sensor. 1-3 Clean sensor if dust gets stuck. 1-4 Check if cord doesn't contacts slit disc. 1-5 Check Disconnection of cable. 1-6 Check clog of thread detection roller. Roller shaft should have clearance.	E2-4
		2. Check circuit board. 2-1 Replace of LCD-** board. 2-2 Replace of TC 12 board. 2-3 Replace of Detection board 2-4 Replace of CONT-R2 board	E3-2 E2-4 E2-3 E2-1
		3. Sometimes needle bar doesn't work when start sewing. 3-1 Replace of needle bar driver.	4-1-1
		Operator	1. No thread is passed through detecting roller. 1-1 Pass thread properly.
		2. Is thread tension proper? 2-1 Observing sewing rhythm, adjust thread tension properly.	2-9
		3. Is proper detection sensitivity of thread cut selected? 3-1 Select detection sensitivity according to sewing condition of thread and cloth etc. 3-2 Please check [TRD. break detect] in setting menu to except [Off].	(15-1)
		4. Is thread tension proper? 4-1 Observing sewing rhythm, adjust to proper thread tension. (Adjust it little bits stronger.)	2-9
	Environment	1. Is there any device to yield lints etc. around the embroidery. 1-1 Keep it off the embroidery machine. 1-2 Move the embroidery machine to other place.	
		2. Doesn't thread go beyond control by wind? (thread comes off from needle hole by loosing) 2-1 Keep thread off wind. 2-2 Move the embroidery machine to other place.	
	Thread & Cloth	1. Isn't silicone agent used on thread? (Thread slips at detecting roller part due to adhere of silicone.) 1-1 Clean silicone agent attached to detecting roller groove.	

E9-9 Suspension of upper shaft

Trouble	Factor	Cause of trouble and measure	Page
Suspension of main shaft (E-18) (E-51) (E-52)	Mechanical	1. Upper thread twine round rotary hook or rotary hook retainer. 1-1 Get rid of it.	(23-2)
		2. Check return of keeper goes smooth. (when start sewing, thread cutting. 2-1 Adjust it regularly.	4-5-8
		3. Check upper thread is sticking at thread guide part of bobbin case. 3-1 Get rid of it. 3-2 Do not use of bobbin case in which thread guide is coiled type. (use standard type)	(23-2)
		4. Effect by breakage of parts. 4-1 Repair broken place.	
		5. No damage in electric parts ? 5-1 Replace of LCD-** board. 5-2 Replace of Timing Board. 5-3 Replace of servo amplifier. 5-4 Replace of CONT-R2 board.	E3-2 E2-2 E2-8 E2-1
		6. Trouble of software in LCD-** circuit board. 6-1 Initialize, then make automatic speed setting.	E4-3
		7. Trouble in control of number of revolution. 7-1 Make automatic speed setting.	E4-3
	Operator	1. Isn't foreign stuff such as thread or cloth caught in where revolution is driven. 1-1 Get rid of foreign stuff. 1-2 Stretch properly.	(6-3, 7-6)
		2. Isn't thread tension too strong (stop at time of action of thread cut)? 2-1 Weaken tension so as not to cause trouble in sewing rhythm.	2-9
		3. Check condition of lubrication. 3-1 Lubricate (refer to message)	2-7 (23-1b)
Environment	1. Check adequate level of voltage (refer to trip of inverter). 1-1 Supply rated voltage. 200V:220V:230V:240V (It varies in the specifications.)	(23-1)	

() ----- Reference instruction book

E9-10 Malfunction of needle bar change

Trouble	Factor	Cause of trouble and measure	Page
Head does not move (E-021) (E-022)	Mechanical	1. Check lint or cloth is seized between Lower Moving rail and Bearing. 1-1 Remove seized lint or cloth.	
		2. Check lint or waste is seized in gap of Moving Cam. 2-1 Remove seized lint or waste.	
		3. Effect by breakage of parts. 3-1 Repair broken place.	
		4. No problem in CONT-R2 board. 4-1 Replace of CONT-R2 board.	E2-1
	Operator	1. Check Stopper of Moving Head is removed. 1-1 Remove Stopper.	2-3
Uncontrollable Move (E-024) (E-025)	Mechanical	1. No problem in sensor circuit board ? 1-1 Clean dust attached to sensor. 1-2 Replace sensor circuit board.	E2-5
		2. Trouble in potentiometer. 2-1 Replace	E2-5
		3. Needle number is not exactly recognized. 3-1 Recognize needle number with maintenance mode.	E2-5
		4. Breakage of Pulse Motor. 4-1 Replace Pulse Motor.	

() ----- Reference instruction book

E9-11 Defect on Thread catcher

Trouble	Factor	Cause of trouble and measure	Page
does not catch thread	Mechanical	1. Thread catcher does not extend hook sufficiently. 1-1 Adjust position of Thread catcher 1-2 Adjust position of Thread holder.	4-1-6 4-2-14
		2. Excessive distance between Hook and tip of Needle. 2-1 Adjust position of Thread catcher. 2-2 Adjust position of Thread holder.	4-1-6 4-2-14
Hook of Thread catcher does not extend	Mechanical	1. Check Hook of Thread catcher bent or not. 1-1 Repair bent Hook. 1-2 Replace Hook.	
		2. Check position of Thread catcher is proper. 2-1 Adjust	4-1-6
		3. Check position of Thread holder is proper. 3-1 Adjust	4-2-14
		4. Check Thread catcher. 4-1 Check cable is securely connected. 4-2 Replace Pulse Motor with trouble.	
		5. No damage in electric parts? 5-1 Replace LCD-** board. 5-2 Replace of CONT-R2 board. 5-3 Replace of Detection board	E3-2 E2-1 E2-3
Hook hits or catches Needle (E-193)	Mechanical	1. Check Hook is bent or not. 1-1 Repair bent Hook. 1-2 Replace Hook.	
		2. Check position of Thread catcher is proper. 2-1 Adjust	4-1-6
		3. Check position of Thread holder is proper. 3-1 Adjust	4-2-14
	Operator	1. Check if Needle is securely set. 1-1 Set Needle properly.	3-1
Constant display of E-193	Mechanical	1. Trouble of Photo sensor. 1-1 Replace Photo sensor.	4-1-6

() ----- Reference instruction book

E9-12 Others / Mechanical

Trouble	Factor	Cause of trouble and measure	Page
Needle Breakage	Mechanical	1. Check Needle is not bent. 1-1 Replace bent Needle.	2-8 3-1
		2. Check Moving Head set securely. 2-1 Adjust Positioning Roller Shaft.	4-2-3
		3. Secure adequate distance between Needle and Rotary Hook. 3-1 Adjust distance properly.	4-4-1
	Operator	1. Is thread method in proper way? 1-1 Threading again in a proper way.	2-9
		2. Check upper thread comes in a smooth way. (Thread stand, Thread tension point, double back etc) 2-1 Adjust place be caught in.	(4-7)
		3. Check whether fabric is fixed firmly or not. 3-1 Hooping fabric firmly again.	(6-3, 7-6)
	Defect of pressure foot movement	Mechanical	1. Check whether pressure foot and thread catcher holder touch each other or not. 1-1 Adjust installment position of thread catch holder. 1-2 In case pressure foot is fixed at an angle, fix it vertically again.
1. By defect of cover installation. (Pressure foot drive, Carriage etc) 1-1 Take care of insert condition, clearance etc and fix again.			
Abnormal noise	Mechanical	2. By lack of oil inside rotary hook. 2-1 Refuel 2-2 Replace of rotary hook	2-7,(23-1b) 4-4-1
		1. Bearing gap of take up crank ass'y. 1-1 Adjust roller shaft ass'y. 1-2 Replace of roller shaft ass'y.	
Big noise	Mechanical	2. Gap between take up lever ass'y and take up clank ass'y. 2-1 Replace of take up lever ass'y. 2-2 Replace of take up lever crank ass'y	
		3. Needle bar driver gap of needle bar driver ass'y. 3-1 Replace of needle bar driver ass'y.	4-1-1
		4. Big gap pressure foot cam 4-1 Replace of take-up lever cam.	4-1-8

() ----- Reference instruction book

E9-13 Others / Electric

Trouble	Factor	Cause of trouble and measure	Page
Frame overrun	Mechanical	1. Interference between censor circuit board and douser. 1-1 Position adjustment of douser. 1-2 Replace of censor circuit board.	E2-7
		2. Check whether cable has problem or not. 2-1 Replace in case damage exists. 2-2 Insert connector again.	E2-7
		3. No damage in electric parts? 3-1 Replace LCD-** Board. 3-2 Replace of CONT-R2 board.	E3-2 E2-1
Key on control box can not be pressed down and returned	Mechanical	1. When removing panel in replacing circuit board , due to poor cable bundling, circuit board being pushed from inside. 1-1 Bundle cable again	
Defect of LCD	Mechanical	1. Check LCD . 1-1 Replace of LCD	E3-2
		2. Inadequate condition of cable insertion 2-1 Insert to the back firmly	
		3. Check whether LCD-** board is out of order or not. 3-1 Replace of LCD-** board	E3-2
No response of Touch panel	Mechanical	1. Check if touch panel bites foreign object or any damage on the touch panel. 1-1 Exchange Touch panel	E3-2
Desing can't be read	Mechanical	1. Check if stock design is over 3000 1-1 Try to delete stock design 1-2 Try to take off and put in SD card inside monitor or Exchange SD card	
Defect of data communication (E-90) (E-91)	Mechanical	1. Check whether PC has problem or not. 1-1 Affirm whether there is problem or not.	
		2. Check LCD-** board is out of order or not. 2-1 Replace of LCD-** board.	E3-2
Watch doesn't indicate time	Mechanical	1. Trouble in back-up battery on LCD-** board. 1-1 Replace of LCD-** board.	E3-3

() ----- Reference instruction book


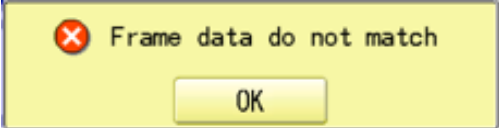
P**-P** --- Refer to Happy Link instruction book

E10 Error

E10-1 Startup error and measure

Error message will be displayed if error occurs during machine startup.

After confirming contents, press button [OK] on control box to release error, then restore in accordance with measure in this list.

Message	Error	Measure
	<p>Exchanged control box or CONT board does not match for the installed data of [Machine setting].</p>	<p>When only control box has been exchanged, open the menu of [E5-5 Setup — Machine setting] and just close without any amendment.</p> <p>When CONT board has been exchanged, follow the procedure of [E5-8 Machine Setting Navigation after exchanging CONT board].</p>
	<p>Installed frame drive data in the machine does not match.</p>	<p>Check setting contents of [Machine setting] by referring [E5-5 Setup—Machine setting], then follow the procedure [E4-2-3 Machine program update] (S.No. ~ 1095015) [E4-2-4 Program update] (S.No. 1096001~).</p>

E10-2 Error and measure

When trouble occurred while the machine is running, error number and error item will be displayed. After confirming contents, press button [OK] on control box to release error, then restore in accordance with measure in this list.

No.	Message	Error	Measure	Page
001	Circuit board	Trouble detected in control circuit board.	(1)Turn power off once and turn on again. (2)If recurred, replace LCD-** board.	E3-2
002	Power source	Power failure or abnormal voltage		
004	System memory	Trouble in system memory.	Replace LCD-** board.	E3-2
014	Fan Alarm	Cooling fan fault	(1)Clean dust attached to fan. (2)Replace fan.	E2-11
015	Abnormality of Z-axis Servo Driver	Trouble in driver unit on main shaft Overload on main shaft motor, damage in driver unit on main shaft.	(1)Turn power off,turn main shaft by hand and if no trouble found, turn power on again. (2)If trouble found,repair where damaged. (3)If inverter in trouble, replace. (4)Check if voltage high or not. If high,check origin of power source of factory. Or use stabilizer, transformer to set to rated voltage.	E2-8, 9
016	Alarm X unit	X-motor-related trouble, i.e. x-motor overload, short circuit, problem with motor drive unit, voltage drop (momentary)	(1)Power off machine, test pantograph movement manually. Check for any abnormality throughout full range of motion. If none found, power on again.	E2-8, 9
017	Alarm X unit	Y-motor-related trouble, i.e. y-motor overload, short circuit, problem with motor drive unit, voltage drop (momentary)	(2)Check related harnes. (3)Replace of servo amplifier.	
018	Main shaft	Suspension of main shaft in mid way.	(1)Check if trouble found between main shaft and drive. If trouble found, restore. (2)If recurred, find cause and fix. (3)Make automatic speed setting again. (4)If driver in trouble, replace.	E4-3 E2-8, 9
020	Needle detect	Needle position not detected. Trouble in stop position of needle selection unit.	(1)Turn needle selection cam by hand to set to regular position. (2)Fix needle selection related mechanical trouble. (3) Replace sensor circuit board or potentiometer	E2-5
021 022	Needle move	Suspension of needle selection motor in mid way. Trouble in take-up lever hinders. Trouble in position detecting circuit board.	(1)Turn needle selection cam by hand to set to regular position. (2)Fix needle selection related and take up lever related troubles. (3)Replace sensor circuit board or potentiometer.	E2-5

No.	message	Error	measure	page
024	Needle center	Stop position of needle bar is off center	(1)Turn needle selection cam by hand to set to regular position. (2)If trouble occurs repeatedly, fix mechanical trouble in needle selection & its vicinity.	
025	Needle over	Specified needle number went beyond needle number of the machine.	Adjust position of needle selection cam (potentiometer) and needle number of moving head.	E2-5
026	Needle differ	As needle number differed from memory when power turned on, it was renewed.	(1)Turn power off once and turn on again. (2)Let the machine recognize needle number.	E2-5
030	Slow mismatch	Inadequate adjustment of number of low speed revolution. Low speed revolution doesn't come below 100rpm.	(1)Make automatic speed setting. (2)If not solved even after speed adjustment, replace LCD-** board.	E4-3 E3-2
050	C point	Main shaft stops off its position.	(1)Turn main shaft to plus direction to set to C point.	(24-5)
051	L sensor	Poor lowest needle position sensor on timing detecting circuit board. Damage in timing detecting circuit board, stained photo sensor, poor adjustment of slit disc.	(1)If photo sensor is stained, clean. (2)Adjust timing. (3)Replace main shaft timing circuit board.	E2-2
052	C sensor	Damage in color change point sensor on timing circuit board. Damage in timing detecting circuit board, stained photo sensor, poor adjustment of slit disc.		
060	X limit	Drive frame went beyond limits in X direction.	(1) Move drive frame back to limits with move key.	
061	Y limit	Drive frame went beyond limits in Y direction.	(2) Correct pattern size and setting contents.	
063	Drive Setup	During embroidery, preparation for frame movement did not complete within predetermined time.	(1) Malfunction of "Lowest needle position" sensor on detection circuit board, Improper adjustment. (2)Make automatic speed setting.	E2-2 E4-3
064	X Center sens.	Trouble in embroidery frame sensor	(1) Check if position sensor is dirty. Turn off power source, then turn on again.	E2-7
065	Y Center sens.		(2) Setup mistake of the machine parameter (3) Replace position sensor circuit board.	E5-5,-6 E2-7
066	Frame drive	Frame movement did not complete during origin point movement.	(1) Dirt L point sensor [PH1] or wrong position of slit. (2) Dirt timing slit, position adjustment (3) Replace timing circuit board.	E2-2 E2-2 E2-2
067	L sensor	Loss of embroidery frame coordinate data.	Adjust position sensor position on carriage. Then register frame position again.	E2-7

No.	message	Error	measure	page
068	Position set	Failure to read embroidery frame sensor signal. (Return)	(1) Check if position sensor is dirty. Turn off power source, then turn on again.	E2-7
069	Position Entry	Failure to read embroidery frame sensor signal. (Entry)	(2) Setup mistake of the machine parameter (3) Replace position sensor circuit board.	E5-5,-6 E2-7
070	Safety sensor	Safety sensor has been tripped.	(1)Clear area around safety sensor. (2)Check material dose not shut out safety sensor beam. (3) Adjust safety sensor position.	E6-3, E6-4
090	Miss reception	Error has occurred during data transfer (via cable) between machine and PC.	(1)Let the machine read pattern data from first.	(5-5)
091	No send	Data is not put in for over 10 seconds.	Let the machine read data from first.	(5-5)
103	Data format	Machine unable to determine format of pattern data.	(1)Check format of pattern data. (2)By setting reading of pattern data,	(5-6) (10-3)
104	Miss function	Timing to read pattern data doesn't conform.	Read pattern data again from the first.	(5-5)
105	Dual function	One stitch data has more than 2 functions.	(1)Read pattern data again from the first. (2)Check and modify the design data if there is wrong.	(5-5)
106	No function	Interval between start read time and time of reception of actual pattern data	Read pattern data again from the first	(5-5)
108	Improper read	While reading pattern data, there accrued error in internal processing.	Read pattern data again from the first.	(5-5)
110	Memory full	While reading pattern data, memory exceeded its capacity.	(1>Delete unnecessary patterns and read from the outset.	(5-B) (23-1)
111	Change over	While reading pattern data, the frequency of color change (color No.) exceeded 250 times.	(1)Modify pattern data and reduce frequency of color change of one pattern to less than 250 times. (2)Divide pattern data and reduce frequency of color change of one pattern to less than 250 times.	
112	Data error	Pattern data of pattern to be embroidered is damaged.	(1)Read pattern data again from the first. (2)Read pattern data again if you have a backup data.	(5-B)
114	Id over	The number of pattern in memory has reached maximum of 3000.	Delete unnecessary patterns and read.	(5-B)
116	Not found Id	Specified pattern does not exist.	(1)Check setting. (2)Re-initialize machine system.	E4-3
118	Trace data over	The stitch number counts over 1024 stitches during preparing Trace data.	Set Embroidery area of pattern data within 2m(X) x 2m(Y).	

() ----- Reference instruction book

No.	message	Error	measure	page
120	Memory error	It became impossible to retain contents of memory.	(1) Turn power off once and turn on again. (2) If problem recurs frequently, replace LCD-** board.	E3-2
130	Disk error	Unable to communicate continuously with memory media.	(1) Turn off power source once and turn it on again. (2) Memory media reading processor may defective. Replace the LCD-** board.	E3-2
131	Device no ready	Memory media is not set.	Check if memory media is properly set.	(5-5)
133	Bad disk	Improper or faulty memory media.	(1) Memory media might be not readable with the machine. Prepare readable memory media for the machine. (2) Memory media might be defective. Prepare another memory card or data disk which is not defective. (3) Initialize the memory media if it is not initialized.	(5-5)
141	Not found name	Designated pattern is not found.	Memory media might be not readable with the machine. Prepare readable memory media for the machine.	(5-5)
142	Disk full	Memory media is full to capacity.	Clear unnecessary patterns or use a different memory media.	
143	Multi name	Another pattern with same name has been detected while attempting to write to memory media.	Change name, use a different memory media, or overwrite existing pattern.	
190	Cut blade	Thread cut knife is not at stop position.	(1) Restore the moving knife to stop position. (2) Check dirt of trim sensor or position of slit. (3) Modify the adjustment if the problem repeats. (4) Adjust sensor position.	(24-6)
191	Cut Sensor	Thread cut knife is not at stop position. been detected while attempting to write to memory media.	Check if threads are jammed around the thread cutting knife. Press the thread cutting button 2~3 times. If error remains, contact your Dealer.	
193	Catcher	Thread catch hook is not in its stop position.	(1) Check if mistake is found in thread cut. If found, cut thread and move thread catch hook to proper position. (2) Adjust and correct trouble that hinders motion of thread catch hook.	(24-8)

No.	message	Error	measure	page
203	Install data	Error has occurred during update of program.	Check an update program.	E4-1
215	Frm. drive err	Frame movement did not complete. during normal movement. (Time over)	(1) Check timing sensor unit and slit. (2) Install updated program.	E2-2 E4-2
217	Frm.drive data	Frm.drive data	Install updated program.	E4-2
255	Default Error	During embroidery, frame movement did not complete until main shaft reach "Lowest needle position".	Re-initialize machine speed setting. Check adjustment of upper shaft timing. (C point / L point)	E4-3

() ----- Reference instruction book

E11 Tables for timing / adjustment value

		Tables for Timing / Adjustment value
Machine No.		1001001~
Take-up lever timing		326°
Rotary hook timing		25°
Needle height		10°
Needle bar lowest point		0°
Main shaft timing	L	LED4 light out at 0 degrees (Clockwise)
	C	LED3 light on at 270-284 degrees (Clockwise)
Jump solenoid		85°



HappyJapan Inc.

9-5. TAITO 2-CHOME, TAITO-KU, TOKYO, JAPAN

TEL +81-3-3834-0711

FAX +81-3-3835-8917